

Do not place the power cord next to the

furnace or near other heat sources.

The headphone socket is in the bottom of the left of digital piano, in which two jacks can be

A# A#m A#7 A#m7

country slide dance 4

552 Popular swing 5

586 Salsa dance song 1-5

450 dream shuffle 4