

YM-233

61 KEYS ELECTRONIC LIGHTING KEYBOARD

INSTRUCTION MANUAL



Thanks for your purchasing yongmei brand (item no. Ym-233) electronic keyboard.

Please read the guide carefully before the item is used and keep it for reference only.

Description

- 61 Keys Electronic Lighting Keyboard
- LCD Display / 510 Well- selected Timbres/ 300 Popular Rhythms
- USB Music player Volume Control/Last Music or next Music /Repeat A to B/EQ Mode/ Play/Pause
- 61 Percussion Music/ 30 demo songs / 3 teaching modes
- Master Volume Setting/Accompaniment Volume Setting Transposition Setting/Tempo setting
- Sustain/Vibrato/Metronome/Keyboards Split/Record/Program/Play Demo One/Demo All
- Sync/Start/Stop/Insertion/Intro
- Single-Finger Chord, Fingered Chord/Bass Chord/Chord-off
- Power Jack / Earphone Jack / microphone jack

Precaution


- The specified adapter is only used. Using the wrong adapter may result in instrument damage and overheating. If the A/C adapter cord or the plug becomes frayed or is damaged, there is a sudden loss of sound while the instrument is played and the unusual smells or adapter plug from the outlet, the instrument must be inspected by qualified technician.
- After the power button is pressed, the power of the keyboard is turned off and the plug must be taken off in order to avoid burning the internal parts or arising fire because of long connection with the power.
- The plastic packing bag must be kept in a safe place in order to avoid the suffocation when a kid amuses itself by putting its head into it.
- The keyboard surface should be kept clean to avoid the eye winkers into the instrument through the small openings of the switch or gaps between the keys. cleaning the appearance of the keyboard with soft cloth is necessary at fixed time and the keyboard is kept away from water vapor.
- The instrument must not be exposed in the strong sunlight for a long time.
- The keyboard must be put in a dry place when it is not used. Strong vibration or collision is forbidden in order to avoid the damage of the frame or the internal parts.
- The instrument must be kept away from the acidity or alkaline places and it is forbidden to play the instrument under the eroding gas circumstance in order to prevent poor contact from circuitry oxidation.
- The electronic keyboard is a precise instrument, any modification may result in malfunction. Once the failure happens, the keyboard must be taken to a professional after-sale service department or experienced technicians for maintenance. It is forbidden to dismantle or assemble the components inside the keyboard at will.

Menu and function


- | | | |
|-------------------------|---------------------------|-------------------|
| 1) Power switch | 10) Demo all | 19) Start/stop |
| 2) Transpose | 11) Teaching 1 Single key | 20) Sync |
| 3) Accompaniment volume | 12) Teaching 2 Following | 21) Insertion |
| 4) Volume | 13) Teaching 3 Ensemble | 22) Single-finger |
| 5) Metronome | 14) Timbre | 23) Fingered |
| 6) Sustain | 15) Lighting keyboard | 24) Bass chord |
| 7) Vibrato | 16) Rhythm | 25) Normal |
| 8) keyboard split | 17) Number keys | 26) Record |
| 9) Demo one | 18) Tempo | 27) Repeat |
| | | 28) Program |

Music player setting

- | | |
|------------------|---------------------|
| 29) Volume | 33) Repeat (A to B) |
| 30) Playing | 34) Last music |
| 31) EQ | 35) Next music |
| 32) Play / pause | 36) USB port |

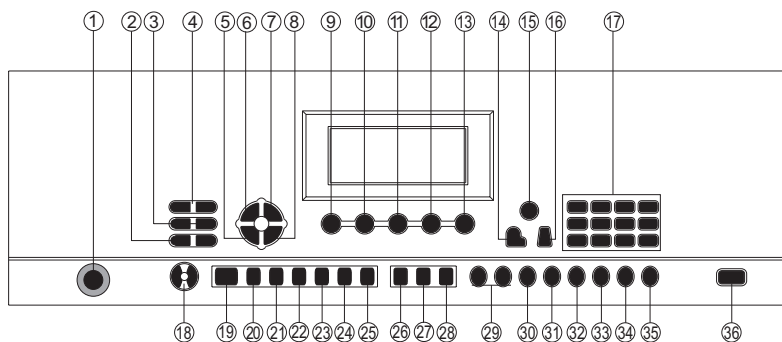

- 37) Earphone jack
- 38) Microphone jack
- 39) Power: DC9V

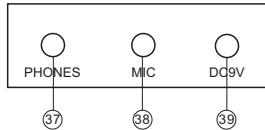

POWER

A. THE BATTERY USAGE

The battery installation: The body of the keyboard is turned over. The plastic battery cover is taken out. No.1 batteries (8 pieces, 1.5v) are installed. The polarities of the batteries are corresponded to and the batteries are covered.

The battery exhaustion:

After the battery is exhausted and the voltage reaches a range of value, the keyboard is unsound or timbre sound get lost. The battery (8 pieces) must be changed. If the battery is not used for a long time, the batteries must be taken out to avoid components damage.

B . The usage of A/C adapter When the keyboard is not used, the plug must be pull out.

When the keyboard is connected with the socket of the mains supply, the A/C adapter with the keyboard is only used. In order to avoid the component damage, other types of adapters are forbidden to be used. The D/C plug of the adapter is inserted into the power supply jack , the A/C plug of the adapter is inserted into the suitable socket.

C. The usage of jack

-MIC (38) Microphone connection, after connected you could sing while you are playing.

-PHONES (37) : The plug of the earphone is inserted into the earphone jack in order to avoid influencing other people while the keyboard is learned.

Function and operation

The power is connected correctly and the power switch button is pressed. When the displaying is lit, the keyboard is able to be played.

1. Timbre

In usually mode, press [timbre], then you can choose the timbre, 000-509 number timbres are able to be selected. If you want to select the 015th timbre, you should press number [0][1][5] to enter .

In the chord mode, 19 buttons on the left hand is timbre and is not the scale button.

2. Lighting keyboard

You could play the keyboard with flash lamp. Default mode is lighting keyboard.

Press the [Lighting keyboard] button, you could cancel or star playing with lamp.

3. Sustain/ Vibrato (the effect when you play the keyboard only)

Sustain: the endnotes played are lengthened .

Vibrato : the pitch of notes vibrates within a limited range .

4. Auto accompaniment

A. Rhythm selection

Press the button [rhythm], the rhythm numbers from 000 to 299 is able to be selected. After selected, you should press the button [start/stop] to play. And you press again will exit.

In the rhythm mode, one of 299 rhythms could be selected again when you press the number button. For example, press [0], [0] and [5] to enter the 5th rhythm.

B. In the mode of accompaniment :

Including single finger and fingered.

It is playing without rhythm when you choose manual playing and chord playing. It is playing with rhythm when you choose auto accompaniment chord playing, and each pair of them has corresponding relation.

After Pressing button [single finger], it will show on display, press again to end this service of chord.

1) Single finger chord as follows:

Major chord: root chord playing

Minor chord: playing root chord with a black key on the left of keyboards.

Dominant seventh chord: playing root chord with a white key on the left of keyboards.

Minor seven chord: playing root chord with a white key and a black key on the left of keyboards.

The [fingered] button is pressed, the corresponding display is shown on the screen. The button is pressed again to close the chord. The fingered as follows: C, Cm, C7, Cm7, the C chord finger as follows:

Chord types	Chord Fingering
C	1, 3, 5
Cm	1, b3, 5
C7	1, 3, (5), b7
Cm7	1, b3, (5), b7

2) When rhythm is in service, press [single-finger] or [fingered] to start corresponding auto accompaniment chord function, press [chord off] or press them again to end the service off the chord (rhythm still goes on).

When you press [normal] then the chord off, manual chord and auto accompaniment mode will exit.

Auto accompaniment setting: When the rhythm is played, press the [Insertion], One note will be inserted during the rhythm is played, and then will be transferred to the normal rhythm. If the button is pressed for a long time; the interlude is played in cycle.

Press the [sync] button you will enter sync mode. In the sync mode, when you press the keys which in accompaniment area at the first time, the auto accompaniment will be start. Press the [sync] button again the sync mode will exit.

A. Tempo setting : You could set the tempo when playing the music or rhythm. Pressing the {+}, {-} at the same time tempo will be default.

5. Volume

Master volume: Press the button [+/-] to turn or turn down the volume, and the 4th grade is the default volume, 8 grades in all.

Accompaniment Volume : 8 grades in all, to adjust the keyboard percussion volume and chord volume, and the 6th grade is the default volume

6. Percussion: Press [timbre], and then choose the 128th timbre, the keyboard will become percussion keyboard, total 61 percussion keys. Each key corresponds to one percussion

7. Metronome: If the [metronome] button is pressed, you will hear the beat when the tempo mode is entered.

When the button is pressed each time, the following function is effected : 1/4 beat, 2/4 beat, 3/4 beat, 4/4 beat. And you could press this button to exit the mode, and the state will show on the display.

8. Keyboard split: Press the [split] button, the 61 keys keyboard will be separated to two areas. At this time, the 24 keys on the left of the keyboard are separated and the pitch is raised by 8 degrees, and the original timbre is maintained. The pitch on the right of keyboard is lowered by 8 degrees and the pitches on both areas are the same. The timbre on the right area can be selected as your request.

9. Transposition setting: Pressing the button [+] or [-] you could adjust the pitch of the keyboard to between "+ 6" and "- 6". You could do that when you didn't change the mode you play.

10. Record

A. The [Record] button is pressed to enter the recording mode, about 45 notes are able to be recorded.

In the recording mode, press the note button, and the note which you played will be recorded into the keyboard.

After the recording is full, the note button is pressed, and the note is not recorded again.

After recorded you could press [Play] to play the recorded note.

10. Program

Press the [Program] button into program mode

In the program mode, you could edit the drum sounds into the keyboards by press the drum keys (maximum 32 drum sounds could be edited.)

It will not be recorded when the numbers of the edited drum sounds arrive the max , After finished you could press the button [play] to play your edited drum sounds (by 1/4 beat in the cycle mode).

Press [Play] again you could stop playing your edited drum sounds, and then you could start new edited.

In the program mode, press the [Program]or [Start/stop], you could exit the program mode.

11. Playing

Pressing the [Demo one] button, the single cycle mode will be entered. Pressing again or Pressing the [Start/stop] button, you will exit the mode.

Pressing the [Demo all] button, the cycle mode will be entered for the file. Pressing again or pressing the[Start/stop] button , you will exit the mode.

When the music is playing, you could choose the music by pressing number button or [+] and [-].

12. Teaching function (with light)

The learning mode is three steps to guide beginners to learn to play the electronic keyboard.

[Teaching 1], [Teaching 2] [Teaching 3] button is pressed to enter the relevant learning mode. The study mode is designed for kids and beginners.

After one song is learned, the same music will be repeated.

Press the button to start teaching mode. You could see [STEP 1] or [STEP 2] or [STEP 3] on the screen,

Pressing [+], [-] these buttons to select the songs which you want to learn. And then you can follow the instruction lamp to play. The music will be play when you press note button. When you stop pressing note button the music will be stop.

Pressing the button again will exit the teaching mode.

Teaching 1(single key):

No matter what the note you played is correct or not, the correct note is sounded and the music is continued.

Teaching 2(follow):

If the note you played is incorrect, the music can't be continued until you play correct.

Teaching 3(Ensemble):

If the note you played is incorrect, you can't play in 3 second, and the correct note will be played with instruction lamp on the keyboard, then you could follow to play, and the screen will show the correct notes and tempo at this time.

510 TIMBRES

International Standard Tone	Western Electronic	099 Environmental Lead	150 Rock Electric Bass	201 Folk shtring
000 Piano	050 Synth Accordion	100 Glockenspiel Lead	151 Rhythm Electric Bass	202 Fretless
001 Vibraphone	051 Bright Accordion	101 Bass Lead	152 Psychedelic Bass	203 Folk Harmonica
002 Church Organ	052 Psychedelic Organ	102 Electric Bass Pad	153 Atonic violin	204 English Horn
003 Reed Organ	053 Koto Lead	103 Atmosphere Lead	154 Muted Bass	205 SynthBass1
004 Electric Guitar(jazz)	054 Light rhythm Organ	104 Clean Guitar Pad	155 Bass Pad	206 SynthBass2
005 Electric Guitar(muted)	055 Synth Organ	105 String Lead	156 Chord Horn	207 SynthBass3
006 Electric Bass(finger)	056 Rock Organ	106 Sharp Lead	157 Chord piano	Modern Electric
007 Synth Bass 2	057 Chrucc Organ1	107 Soft Lead	158 Chorus Guitar	208 Crystal Gtr
008 Violin	058 Chrucc Organ2	108 Atmosphere Pad	159 Santur	209 Jazz Organ1
009 Orchestral Harp	059 Soprano Organ	109 Sawtooth Lead1	160 Purple Org	210 Country Harmonica
010 String Ensemble 1	060 Solw Organ	110 Sawtooth Lead2	161 Click Organ	211 HonkyTonk
011 Soprano Sax	061 Percussive Organ1	111 Sawtooth Lead3	162 Bright Draw	212 Honky Gtr
012 Clarinet	062 Thick Square	112 Soft electric piano	163 Hyper Tines	213 Custom guitar
013 Flute	063 Light Click Organ	113 Accordion	164 Funk EP	214 Santur
014 Lead 1(square)	064 Crystal Xylophone	114 Chorus Accordion	165 CoolGalaxy EP	215 12 String Gtr
015 Banjo	065 Stereo Reed Organ	115 Mute Guitar	166 Theater Organ	216 Jazz boy
016 Crystal Fx	066 Jazz Organ	116 Funk Guitar	167 Clavi	217 Mute Gtr1
017 Rotaryorgan	067 Bright Clean Guitar	117 Jazz Guitar	168 Venasi Ep	218 Detuned Strings
018 String	068 Electric guitar	118 Chorus Clean Guitar	169 TremoloStrs	219 Detuned Harmonica
019 Sift Crystal	069 Rhythm Guitar	119 Mellow Drawbar Organ	170 Harpsichord	220 Detune NylonGtr
020 Koto Fx	070 Heavy Metal Guitar	120 Mellow Guitar	171 SlowStrings	221 Mute Gtr2
021 Reedorgan	071 Pick Guitar	121 new age	172 SynStrings11	222 Velocity Gtr
022 Drawbar Organ Detuned	072 Psychedelic Guitar	122 60Drawbar Organ	173 PizzStrings	223 Steel Gtr1
023 Drawbar Organ Stereo	073 Crystal String	123 Warm	174 CP80	224 Steel Gtr2
024 Digital Piano	074 Magic Guitar	124 Polysynth	175 Atonic Marimba	225 Tango Accordion
025 The Strings	075 Electric Guitar(muted)	125 Halo	Synthetic electronic	226 Detune Accordion
026 Sweet Harmonica	076 Electronic Pad	126 Rain	176 Synth Strings 1	227 Detuned Steel Gtr
027 Synth Strings	077 Electronic dance Pad	127 Soundtrack	177 StringEnsemble	228 Velocity Steel Gtr
028 Choir Aahs	078 Metal Sci-fi Pad	Electronic Music	178 TraditionalAccordion	229 Velocity Steel GtrFx
029 Square Lead	079 Sci-fi Pad	128 Percussion	179 Synth Strings 2	230 Velocity Pedal Steel Gtr
030 Atmosphere	Electronic Symphony	129 Church Organ	180 12StringsGuitar	231 Chorus Steel Gtr
031 Sinmarimba	080 Electronic FX	130 For the keyboard	181 PipeOrgan	232 Mellow Gtr
032 Bright Crystal	081 Lyric Organ	131 Church Piano	182 Lead1(charang)	233 Legato Strings
033 Lyric Crystal	082 Clean Shamisen	132 Piano PAD	183 Lead2(fifths)	234 Mellow Harmonica
034 Reed Organ	083 Synth Shanai	133 Double Bass	184 Lead3	235 Clean Harmonica
035 Electronic Crystal	084 Synth Kalimba	134 Light rhythm Piano	185 Lead4(bass+lead)	236 Clean Jazz Gtr
036 Sweet Crystal	085 Crystal Kalimba	135 Synthesis Nylon Guitar	186 ChamberStrs	237 Detuned Jazz Gtr
037 Psychedelic Synth Lead	086 Synth Kalimba	136 Guitar Organ	187 Lead 5(chiff lead)	238 Velocity Jazz Gtr
038 Goblins	087 Magic Shanai	137 electric Piano Pad	188 Pad 6(bowed)	239 Crystal piano
039 Psychedelic Electronic	088 Baritone Kalimba	138 Bright Violin	189 Lead 7(caliopie lead)	240 Crystal music
040 Clean Piano	089 Electronic String	139 Psychedelic Organ	190 Sine solo1	241 Synth Organ
041 Electronic Organ	090 Magic Square	140 Electronic Bagpipe	191 Sine solo2	242 Synth Bass
042 Magic Electronic	091 Lyric Electronic	141 Wind Bagpipe	192 FolkGuitar	243 Light rhythm Bass
043 Guitar Organ	092 Diplophonia Square	142 Double Kalimba	193 Classic Organ	244 Bright Bass
044 Electric Piano Pad	093 Electronic Dance Guitar	143 Fifths Lead	194 FingerBass	245 Synth marimba
045 Crystal Guitar	094 Interactive Lead	144 Western Pad	195 Aco.Bass	246 Electric Guitar Pad
046 Pick Organ	095 Aluminium Jean	145 Wind Bagpipe	196 Clean Bass	247 Distortion Guitar pad
047 Metal Piano	096 Bright Sitar	146 high Bagpipe	197 Banjo	248 Melody guitar
048 Metal Crystal	097 Diplophonia Kote	147 Bright Guita	198 OctaveGtr	249 New Strings
049 Piano Pad	098 Orchestra Organ	148 (bass+lead)	199 Distortion Gtr	250 Synth Electric 1
		149 Water jean	200 Pick Bass	251 Synth Electric 2

252 Synth Electric3	303 Shamisen Pad	354 Digital Organ	405 Bright Clean Guitar	458 Hit Soprano Sax
253 Synth Crystal	304 Wooden Vibraphone	355 Reggae Guitar	406 Rhythm Electric Bass	459 Metal Sax
254 Synth Vib	305 Wooden Church Organ	356 Hawaii Guitar	407 Trill violin	460 Bagpipes
255 Stereo Marimba	306 Wooden Reed Organ	357 The bass	408 Harp ensemble	461 Magic lead
256 Stero Muted Gtr	307 Wooden Guitar jazz	358 National bass	409 Cello Lead	462 Wooden Bells
257 Stero Organ	308 Wooden Guitar muted	359 Solo Violin	410 Rhythm Trumpet	463 Atmosphere Lead
258 An electric guitar	309 Wooden Bass finger	360 Heavy rock Harp	411 Rhythm Trombone	Asian synthetic
259 Bright clean Guitar	310 Wooden Synth Bass	361 Jump syn String Ensemble	412 Bright English Horn	464 Electric Piano Pad
260 Harpsichord	311 Wooden Violin	362 Jump Sax	413 Vibraphone Synth Lead	465 Glockenspiel Lead
561 Guitar organ	312 Wooden Orchestral Harp	363 Distortion oboe	414 Marimba Synth Lead	466 Environmental Lead
262 Velocity piano	313 Wooden String Ensemble	364 Digital flute	415 Electronic FX	467 Wind Lead
263 Pick Bass1	314 Wooden Soprano Sax	365 Heavy Lead	Digital Synthesizer	468 Clean Guitar Pad
264 Pick Bass2	315 Wooden Clarinet	366 Mechanical Banjo	416 Classical piano	469 Atmosphere Lead
265 Psychedelic Synth strings	316 Wooden Flute	367 Dynamic Crystal	417 Electric Piano Pad	470 Electric bass Pad
266 Metallic Crystal	317 Wooden Lead	Science fiction electronic string	418 Pick organ	471 Metal Sci-fi Pad
267 Psychedelic Synth Lead	318 Wooden Banjo	368 Rock Clavichord	419 Organ Guitar	472 East Nation Pad
268 Vibraphone Synth Lead	319 Wooden Crystal FX	369 Heavy metal Glockenspiels	420 Synth Electronic Guitar	473 Western Pad
269 Crystal FX	Hit Synthesizer	370 Clear Organ	421 Synthesis Nylon Guitar	474 Bright Lead
270 Synth Shamisen	320 Hit Pinao	371 Baritone Organ	422 Atmosphere Pad Bass	475 Clarinet Pad
271 Electronic Shamisen	321 Hit Church Organ	372 Campus Jazz Guitar	423 Cello Lead	476 Flute Pad
Classic Synthesizer	322 Hit Reed Organ	373 Hall electric guitar	424 Synth Harp	477 Sci-fi Pad
272 Clean Guitar Pad	323 Hit Guitar jazz	374 East bass	425 Large violin	478 Banjo Pad
273 Orchestra Lead	324 Hit Guitar muted	375 Jumping Cello	426 Synth Trumpet	479 Electronic dance Pad
274 Glockenspiel Lead	325 Hit Bass finger	376 Jumping Harp	427 High Trombone	480 Rhythm electric Piano
275 Atmosphere Lead	326 Hit Synth Bass	377 Magic ensemble	428 Synth Trombone	481 Synthetic Kalimba
276 Fifths Lead	327 Hit Violin	378 Baritone Sax synthesizer	429 Metal FX	482 Wind Bagpipe
277 Double Celesta	328 Hit Orchestral Harp	379 Electronic bar	430 Bright Koto	483 High Bagpipe
278 Double Xylophone	329 Hit String Ensemble	380 Heavy metal flute	431 Japan Synth	484 Psychedelic Jazz Guitar
279 Crystal Xylophone	330 Hit Soprano Sax	381 Electronic dance Pad	432 Clean Piano	485 Rhythm Electric Guitar
280 Resonant Gtr	331 Hit Clarinet	382 Double Kalimba	433 Baritone Xylophone	486 Pan Flute Pad
281 Sweet Reed Organ	332 Hit Flute	383 Electronic Crystal	434 Rhythm Accordion	487 Electronic wind Pad
282 Slow Harpsichord	333 Hit Lead square	384 Rhythm electric Piano	435 Organ Ensemble	488 Magic Metallophone
283 Bass Marimba	334 Hit Banjo	385 Marimba Harp	436 Bright Guitar	489 Classical Electronic
284 Celesta	335 Hit FX	386 Soft Pad	437 Crystal guitar	490 Synth Shanaï
285 Glocken 1	336 Rock piano	387 Rhythm Electric Guitar	438 Heavy metal bass	491 Environmental Shanaï
286 Tubular-bell	337 Baritone Celesta	388 Fierce Organ	439 Heavy bass orchestra	492 Electronic Bagpipe
287 OverdrivenGuitar	338 Digital Organ	389 The bass band	440 Harp Ensemble	493 Science Fiction Classic
288 Classical Celesta	339 Magic Guitar	390 The bass strings	441 Orchestral keyboard	494 Bright Kalimba
289 Classical Organ	340 Diplophonia Guitar	391 Bright Violin	442 Trumpet Ensemble	495 Special Echo FX
290 FullStrings	341 Bright bass	392 Pizzicato Violin	443 Trombone Ensemble	496 Rock Clavichord
291 Bauble Lead	342 Magic bass	393 Baritone Synth Contrabass	444 French Horn Ensemble	497 Bright clavichord
292 Aggradevole Gtr	343 Fantasy violin	394 high Trumpet	445 Electronic String Ensemble	498 Church Organ
293 Slan Bass 1	344 Fast Harp	395 Synth French Horn	446 Diplophonia Koto	499 Reed Organ
294 Slan Bass 2	345 Fantasy strings	396 Diplophonia English Horn	447 Environmental Lead	500 Modern electric guitar
295 OverDriven Gtr1	346 Sax magic	397 Psychedelic Synth Lead	448 Light rhythm Piano	501 Bar electric guitar
296 OverDriven Gtr2	347 Dynamic clarinet	398 Koto Lead	449 Crystal Kalimba	502 Dynamic guitar
297 OverDriven electric Strings	348 Magic Piccolo	399 East Nation Pad	450 Fierce Organ	503 Electric guitar reverb
298 Slow Harmonic	349 Magic Lead	400 Queer electric Piano	451 Soft Pad	504 Heavy rock Harp
299 Soft Clarinet	350 Banjo	401 Psychedelic electronic	452 Bright Rhythm	505 Heavy rock Viola
300 Banjo Pad	351 Dynamic Crystal	402 Electronic organ	453 Crystal guitar	506 Solo synthesizer
301 Banjo Lead	352 Dynamic piano	403 Synth accordion	454 Interactive Lead	507 Heavy rhythm Alto Sax
302 Karimba Pad	353 Magic Metallophone	404 Psychedelic Guitar	455 Heavy bass orchestra	508 Digital flute
			456 Bright Violin	509 Heavy rock lead
			457 Or chestra Lead	

300 RHYTHMS

000 Mambo	049 lieder Waltz	99 Aussie Rock
001 16-beat	050 New Waltz	100 Piano Rock & Roll
002 Waltz	051 Viennese Waltz	101 Kraut Rock
003 Rhumba	052 Polish Waltz	102 country rock
004 Reggae	053 French Waltz	103 Indie Rock
005 Rock	054 JAZZ WALTZ1	104~117 SLOW_ROCK
006 Slow-rock	055 Jazz Waltz2	104 Rockabilly
007 Bossanova	056 CHRISTMAS WALTZ	105 50'S Rock
008 Disco	057 Pop Waltz	106 Britpop
009 Tango	058 Rock Waltz	107 hard Rock
010 Country	059 Elegant Waltz	108 ballad-rock
011 Popse	060 COUNTRY WALTZ	109 Soft Rock
012 Beguine	061 Modern Waltz	110 60'S ROCK
013 Lation	062 075 RHUMBA	111 Electronic music 16-beat
014 March-polka	062 Europe Rhumba	112 Figure British rock
015 Samba	063 hard Rhumba	113 lively Rock
016 Swing	064 mix Reggae	114 Rock Ballad 1
017 8-beat	065 lieder Rhumba	115 Rock Ballad 2
018 Cha cha	066 Jazz Rhumba	116 classical mix rock
019 Salsa	067 lieder Bossanova	117 country slow rock
020~033 Manbo	068 Slow Rhumba	118~131 BOSSANOVA
020 Brazil Mambo	069 Mix Rhumba	118 country Punk
021 POP 8-beat	070 lieder Country	119 mix Hip hop
022 POP Mambo	071 hard Popse	120 POP house
023 Smooth Country	072 mix Beguine	121 hard Electronic music
024 POP Reggae	073 jazz Lation	122 soft Bossanova
025 lieder Mambo	074 ballad-Rhumba	123 Punk Cha Cha
026 hard 8-beat	075 Fusion Rhumba	124 Heavy Metal 16-beat
027 country Bossanova	076~089 REGGAE	125 Trip-Hop 16-beat
028 hard Mambo	076 hard Swing	126 Gangsta Rap
029 bluegrass Tango	077 lieder 8-beat	127 Figure Electronic music
030 country south Country	078 hard house	128 Slow-16-beat
031 lieder Popse	079 bluegrass Salsa	129 16Beat shuffle1
032 bluegrass Beguine	080 Smooth Mambo	130 rock Lation
033 rock Lation	081 blues 16-beat	131 Fusion
034~047 16Beat	082 Modern Popse	132~145 DISCO
034 Slow March-polka	083 Reggae 1	132 Modern Disco
035 Europe Samba	084 Reggae 2	133 lieder Disco
036 jazz Swing	085 blues Reggae	134 Merengue
037 POP 16-beat	086 mix Punk	135 jazz Disco
038 country Popse	087 lieder Punk	136 Schlager
039 pattern Salsa	088 Trip-Hop	137 Dance Schlager
040 mix 16-beat	089 classical Soul	138 Straight rock
041 lieder 16-beat	090~103 ROCK	139 Rap Pop
042 Hard 16-beat	090 classical Rock	140 Latin Fusion
043 POP Rhumba	091 Pub Rock	141 Bolero
044 jazz Reggae	092 Rap-Rock	142 Trance
045 Punk 16-beat	093 Detroit Rock	143 German March
046 mix rock	094 Hard Rock	144 Disco Soul
047 pattern Bossanova	095 Instrumental Rock	145 POP Disco
048~061 Waltz	096 Space Rock	146~159 TANGO
048 classical Waltz	097 Glam Rock	146 Polka Fox
	098 Modern Rock	147 Bachata

148 Russian Chanson1	199 Soul Ballad	249 Goth Rock 1
149 Russian Chanson 2	200 Folk Dance	250 single Swing
150 Modern Tango	201 Lyric Latin	251 Grindcore
151 Argentine Cumbia	202 German March	252 Hair Metal
152 Punta	203 ~ 215 LATIN	253 L.A. Punk
153 Cuba Tango	203 Modern house	254 New Wave
154 Brazil Tango	204 Reggae 2	255 Hardcore Punk
155 Boogie-Woogie	205 soft Lation	256 Hardcore Rap
156 Techno Pop	206 BigBand	257 House
157 Techno	207 Ballad	258~271 8BEATS
158 jazz Tango	208 MarchSpeed	258 blues 8-beat
159 Shuffle Rock1	209 Pop Ballad1	259 Guitar 8 Beat
160~173 COUNTRY	210 Pop Ballad 2	260 8 Bear Pop
160 Shuffle Rock 2	211 Ragtime	261 Modern8 Beat
161 Pop Polka	212 NEW ORLNS R&R	262 Heavy Metal 8-beat
162 Oldies Ballad	213 India-West-Reggae	263 Madchester
163 Bluegrass	214 Con brio Rock	264 Merseybeat
164 Oldies 8 Beat	215 Acid Jazz	265 Political Folk
165 Broadway	216~229 MARCH_POLPA	266 Hip hop
166 Hawaiian	216 big band March-polka	267 Progressive House
167 Blues Ballad	217 Adult Contemporary	268 New Romantic
168 16 Beat Ballad	218 Alternative Dance	269 Mellow 8 Beat
169 classical Country	219 Alternative Metal	270 Progressive Metal
170 House	220 Alternative Rap	271 Proto-Punk
171 Banda	221 American Punk	272 ~ 285 CHA-CHA
172 Country Shuffle 1	222 American Trad Rock	272 New York Punk
173 Country Shuffle 2	223 Big Beat	273 Psychedelic
174~187 POPS	224 Con brio Samba	274 lieder Cha cha
174 Salsa	225 Britpop	275 Indie Pop
175 mix POP Rock	226 British Blues	276 Rap-Metal
176 Shuffle Boogie	227 British Psychedelia	277 Political Reggae
177 Twist	228 British Metal	278 Brazil Cha cha
178 jazz March-polka	229 British Trad Rock	279 Rave
179 Malfoof	230~243 SAMBA	280 hard Cha cha
180 Swing Lation	230 Arena Rock	281 Speed Metal
181 Modern Jazz	231 Brazil Samba	282 Modern Cha cha
182 POPS	232 jazz Samba	283 Sunshine Pop
183 Slow Big Band	233 College Rock	284 Swedish Pop
184 Funk 8 Beat	234 Comedy Rock	285 EP BALLAD 1
185 Quickstep	235 Contemporary Celtic	286~299 SALSA
186 Stride Piano	236 Contemporary Instrumental	286 Stoner Metal
187 Bolivia Mambo	237 Dark Ambient	287 Power Metal
188 ~ 201 BEGUINE	238 Death Metal/Black Metal	288 East Coast Rap
188 variety Mambo	239 Doom Metal	289 soft Salsa
189 Latin House	240 Dream Pop	290 Slow Ballad
190 ballads Beguine	241 Passionate Samba	291 Jazz Combo 2
191 classical Beguine	242 Experimental	292 Jazz Combo 3
192 variety Reggae	243 Experimental Jungle	293 Roots Reggae
193 Acid Rock	244~257 SWING	294 SLOW 16 BEAT
194 hard March-polka	244 Funk Metal	295 16 Beat Shuffle 2
195 PASillo	245 Garage Punk	296 lieder Salsa
196 Beguine1	246 jazz Swing	297 Caucasian
197 Beguine2	247 Glitch	298 Fast Gospel
198 Jive	248 Goth Meta	299 Slow gospel

00	Beautiful Grassland is my home	15	Prelude in G Major
01	Grandma's Penghu Bay	16	Midnight Express
02	Little Apple	17	Prelude of Vera Roberts
03	99 Sunny Days	18	City of Sky
04	Jasmine Flower	19	Italy Polka
05	Country Road	20	Classical Music Concert
06	Love Song	21	Serenade—Haydn
07	Bu Bu Gao	22	The Swiss Music Box
08	For Who	23	Kathy Carle Etude
09	In The Field of Hope	24	Variations on a theme of Mozart
10	Doll	25	Patrol
11	Rhythm of The Rain	26	Garden of Palace
12	Red River Valley	27	He Control the Whole World
13	Stormy Rain	28	State of Mind
14	Happy New Year	29	To Alice