



- |              |                     |                  |
|--------------|---------------------|------------------|
| 1 Power      | 8 Metronome         | 15 Start/Stop    |
| 2 Tempo +/-  | 9 Dual Keyboard     | 16 Sustain       |
| 3 Volume +/- | 10 Led On/off       | 17 Key Drum      |
| 4 Prog       | 11 Rhythm           | 18 Chord         |
| 5 Rec        | 12 Number Selection | 19 Transpose     |
| 6 Play       | 13 Follow           | 20 Rhythm Volume |
| 7 Tone       | 14 Demo             |                  |

## 1. POWER SWITCH

Press the Power Switch ON/OFF into playing Electronic Keyboard Mode. (Picture 1)

## 2. VOLUME

Press Volume+ (or -) to increase (decrease) the volume of Keyboard, The volume from range 00~16, 17 levels and default value is 12. (Picture 3)

## 3. TEMPO

Button Tempo+/- to speed up and down the tempo. (Picture 2)

## 4. TONE CONTROL

- ◆ Press Tone Button into mode Tone (left of LED light). (Picture 7)
- Select the tone by 0-9 from the Number Selection.
- ◆ Default tone is C, Press Transpose+/- to Shift up/down the tone and show the transpose status from the LED display. (Picture 19)
- ◆ Sustain
- Press Button Sustain to start or stop Sustain function.
- Under Sustain Mode will extension effect when playing keyboard. (Picture 16)

## 5. DEMO

Press DEMO (Picture 14), the keyboard will play the music from first (one by one), press 0~9 or +/- of Number Selection to select what you want to play (Picture 12), Press DEMO again to stop playing.

## 6. PROG

Press [Prog] into Program Mode by playing Drum Combination, then press PLAY (Picture 4)

## 7. LESSON MODE

Follow: (Figure 13)

Press Lesson button into Lesson Mode, after the song played, the main melody is not set, the user must press the corresponding key according to the note displayed on the digital tube to continue playing the next one. The background sound is repeated to play the bar until the song is over. After the song is over, the same song can be continued to teach.

## 8. CHORD CONTROL

Press CHORD button into Chord Mode

This button CHORD only takes place at the Rhythm and General Mode. In rhythm play mode, the user press the button and the key in the range of C3~F4#, after press Chord Finger, the user can hear the corresponding chord accompaniment. If not, it will stop and play single chord rhythm;

Chord can be used with rhythm/chord/synchronously. (Picture 18)

## 9. RHYTHM

Press RHYTHM to enter into number selection to choose Rhythm. The input number is from 0 to 99. If the input range is not within this range, the input is invalid. (Picture 11)

## 10. RECORD

Press RECORD into recording Mode by playing Keyboard, (Picture 5) then press PLAY to play just record. (Picture 6)

## 11. DUAL KEYBOARD

- ◆ Dual Keyboard for on/off function. (Figure 9)
- ◆ Press the Dual Keyboard button, the keyboard on C3~C4 scale will correspond to C4~C5, on C5~C8 scale will correspond to C4~C7.
- ◆ Replace the original timbre of the C4~C7 keyboard by using number to select primary timbre.

## 13. KEYBOARD LIGHT

This button can turn on/off the lights of white and black keyboard, the default is on. (Picture 10, LED ON/OFF)

Teaching status can be exercised according to the light indication by default, press the button again to turn off the keyboard light.

## 14. RHYTHM VOLUME

[Rhythm Vol] Button control is used to control the rhythm volume. Press [+] button, means turning up the volume. Press [-] button, means turning down the volume. There are 16 sections of the rhythm volume (1~16), the initial default volume is 12 after powering. Keep pressing Rhythm Volume [+] and [-], the volume will change to initial default volume. (Picture 20)

## 15. METRONOME

Press Metronome button into 4 change Beat sound, 1/4-2/4-3/4-4/4-STOP, Default Tempo is 120. (Picture 8)

# ELECTRONIC KEYBOARD USER MANUAL

BD-601D/BD-602D

## 16. Appendix 1 (Tone List)

00 Acoustic Grand Piano	34 Nylon Guitar	69 Low Sax
01 Bright Acoustic Piano	35 Pad 7	70 Classical Music Box
02 Alto Sax	36 Low Cello	71 Bright Acoustic Piano 1
03 Music Box	37 Oboe	72 Pad 4
04 Accordion	38 String Ensemble 2	73 Wooden Guitar
05 Electric Guitar	39 Lead 2	74 Sitar
06 Vibraphone	40 Crystal	75 Pedal harp
07 Pad 1	41 Electric Piano 3	76 Lead 7
08 Violin	42 Pad 3	77 Reed organ1
09 Orchestral Harp	43 Overdriven Guitar	78 Lead 4
10 String Ensemble 1	44 Lead 3	79 Clarinetto
11 Lead 1	45 Synth Orchestral Harp	80 Reed Organ
12 Cello	46 Lead 5	81 Harpsichord
13 Clarinet	47 Bright Clarinet	82 Classical Cello
14 Distortion	48 Banjo 1	83 String Ensemble 5
15 Pad 6	49 Rhodes Reed organ	84 Mellow Piano
16 FX8	50 Soprano Sax	85 Sci-fi
17 Bright Reed organ	51 Rhodes Piano	86 Irish Harp
18 English Horn	52 Vibraphone1	87 Electric Guitar 1
19 Banjo	53 Accordin1	88 English Reed organ
20 Bright Violin	54 String Ensemble 3	89 High Bassoon
21 Low Orchestral Harp	55 Cello	90 Soft Vibraphone
22 Low Vibraphone	56 Clean Guitar	91 Mellow Sax
23 Pad 2	57 Rock Cello	92 Electric Guitar3
24 Rock Organ	58 English Horn 1	93 String Ensemble 6
25 Jazz Electric Guitar	59 FX1	94 Dulcet Music Box
26 Tenor Sax	60 Bright Cello	95 English Horn 2
27 Soft Music Box	61 String Ensemble 4	96 Lead 5
28 Grand Piano	62 FX4	97 Pad 8
29 Soft Acoustic Piano	63 Muted Guitar	98 India Sitar
30 Bassoon	64 High Voilin	99 Lead 4
31 America Banjo	65 Bassoon1	
32 FX2	66 Percussive Organ	
33 Low Reed organ	67 Classical Vibraphone	
34 Nylon Guitar	68 Synth Grand Piano	

## 17. Appendix 2 (Rhythms List)

00 Rumba	34 Country Slow Rock	68 Classical Rumba
01 Samba	35 Jazz Swing	69 Brazilian Tango
02 Tango	36 South Africa Country	70 Rock Boogie
03 Boogie	37 Pop Reggae	71 Jazz Samba
04 Pop Rock	38 Clup Pop	72 Classical Disco
05 Latin	39 Lyric Rock	73 Jazz Latin
06 Hully Gully	40 Classical Boogie	74 Indigenous Salsa
07 Disco	41 Rock Samba	75 Argentina Waltz
08 Bossanova	42 Rock Disco	76 Indigenous Swing
09 Waltz	43 Brazil Latin	77 Jazz Cha Cha
10 16Beat Pop	44 Single Rock	78 European Rock
11 Rock'N Roll	45 Country Waltz	79 Indigenous Reggae
12 Country	46 Europe Swing	80 Indigenous
13 Reggae	47 Europe Reggae	81 Indigenous Rumba
14 Soul Rock	48 Rock Salsa	82 Indigenous Country
15 Swing	49 Indigenous Cha Cha	83 Jazz Bossanova
16 8 Beat	50 Classical Tango	84 Europe Samba
17 Cha Cha	51 Jazz Rumba	85 Classical 8 Beat
18 Mambo	52 Indigenous Polka	86 Pop Waltz
19 Caribbean Dance	53 India's Indigenous	87 Tricks Latin
20 Country Bossanova	54 Single 16 Beat	88 Country Cha Cha
21 Classical Waltz	55 Mixed Bossanova	89 Classical Reggae
22 Ober Polka	56 Indigenous Slow Rock	90 Jazz Polka
23 European disco	57 Country Jazz	91 Jazz Tango
24 Latin Rock	58 Brazil Mornbo	92 Jazz Slow Rock
25 8beat Soul	59 Europe 8 Beat	93 Jazz 16 Beat
26 Indigenous Tango	60 Classical Country	94 Jazz Boogie
27 Indigenous Boogie	61 16Beat Shuffle	95 Jazz Bo
28 Europe Rumba	62 Jazz 8 Beat	96 Indigenous Rock
29 Classical Samba	63 Classical Slow Rock	97 Jazz Disco
30 Pop Mambo	64 Tricks Bossanova	98 Latin Salsa
31 Fanatical Sand	65 Tricks Mambo	99 Classical Swing
32 8beat Pop	66 Indonesian Pop	
33 Brazil Cha Cha	67 South Africa Polka	

## 18. Appendix 3 (Demo Music List)

D00 Childhood	D36 Full Moon
D01 Small Apple	D37 Yesterday Once More
D02 It Is Better To Dance	D38 Only You
D03 Grandma's Penghu Bay	D39 Rhythm Of The Rain
D04 Sweet Honey	D40 Ode To Joy
D05 Kangding Love Song	D41 Ballade Pour Adeline
D06 The Most Dazzling National Style	D42 Spanish Bull Dances
D07 Ging Zang A Plateau	D43 If You Are Happy
D08 My China Heart	D44 It Is A Little World
D09 Love Will Win	D45 Cow Boy
D10 A Long Distance Away	D46 London Bridge
D11 Ten Thousand Reluctant	D47 Long Long Ago
D12 This Life Is Destined	D48 Les premiers Sourires De Vanessa
D13 Not Afraid Not Afraid	D49 Frosty The Snowman
D14 Lifetime With You	D50 The Never Ending Story
D15 Mother Said	D51 Birthday Song
D16 The Forest In Norway	D52 Jingle Bells
D17 Sudden Self	D53 My Heart Will Go On
D18 Love If You Die	D54 Twinkle Twinkle Little Star
D19 Cut Plum	D55 Are You Sleeping
D20 I Only Care About You	D56 Marry Had A Little Lamb
D21 Alishan Girl	D57 Old McDonald Had A Farm
D22 About Winter	D58 Bee
D23 Liang Zhu	D59 Fur Elise
D24 Jasmine	D60 Marriage D' amour
D25 Backgammon	D61 I Will Always Love You
D26 Birch Forest	D62 Turkish March
D27 Free To Fly	D63 Canon
D28 Nanni Bay	D64 Mozart Piano Sonata
D29 Little Swallow	D65 She' ll Be Coming Around The Mountain
D30 Sky Road	D66 Donna Donna
D31 Little Donkey	D67 Yankee Doodle Dandy
D32 Happy New Year	D68 Reality
D33 Unfortunately, Not You	D69 Beauty And The Beast
D34 Xing Xing Dian Deng	
D35 Kiss Goodbye	

### 1 Battery Warning

Please take care off following attentions

Do not attempt to disassemble or short-circuit the battery

Do not expose or burn it in the fire

Do not mix the new and old battery

Do not mix different types of batteries

Do not charge the battery

The positive and negative poles of the battery must be properly installed

Please remove the battery from the keyboard If you do not use for a long time,

### 2 Exception Warning

Please do the following steps when exception for the electronic keyboard like fuming, over hot and so on.

1. Power off

2. Pull the adaptor down from the power socket on the wall when are using.

It's normal for adaptor getting hot when long time using AC adaptor, not indicate Malfunction

Please Power off and restart the electronic keyboard when sometime function problem,

### 3 Install the battery

1. Exit the screw and remove the battery cover

2. Put the battery with correct positive+ and negative- direction into the battery slot with 4XAA 1.5V

3. Put the batterh cover and Lock the screws