


DIGITAL PIANO USER MANUAL

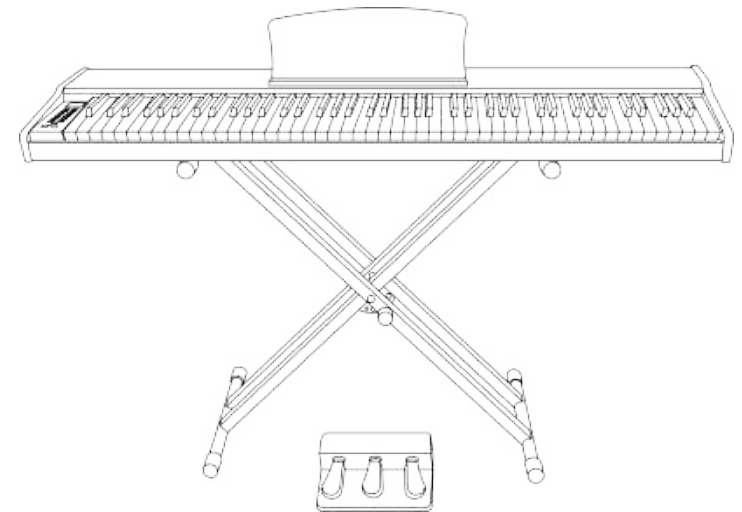

First connection of bluetooth,initial password: 1688

This product is subject to change without prior notice


Function introduction

- Keyboard: 88 standard touch keys (including black keys),
Range: A1 ~ C9
- Tone: 128 tones
- Rhythm: 128 rhythms
- Demo songs: 80 songs
- Key functions: tones, rhythm, split, demo, record and play,
synchronization, chord, metronome, touch, volume control, etc.
- Hardware: 64 chords, with 2 16-bit DAC outputs, built-in dual
Bluetooth modules, MIDI, MIC, USB and other circuits.
- LED 3-digit digital display, audio input, output, headphone output, single
pedal or 3 pedals (optional)

List

Function introduction	1
List.....	2
Piano rear side panel diagram	3
Functional operation instructions.....	4
Tone table.....	6
Rhythm table.....	8
Demo song.....	10
Product maintenance.....	11
Safety precautions.....	12
Warranty card	14

Piano rear side panel diagram

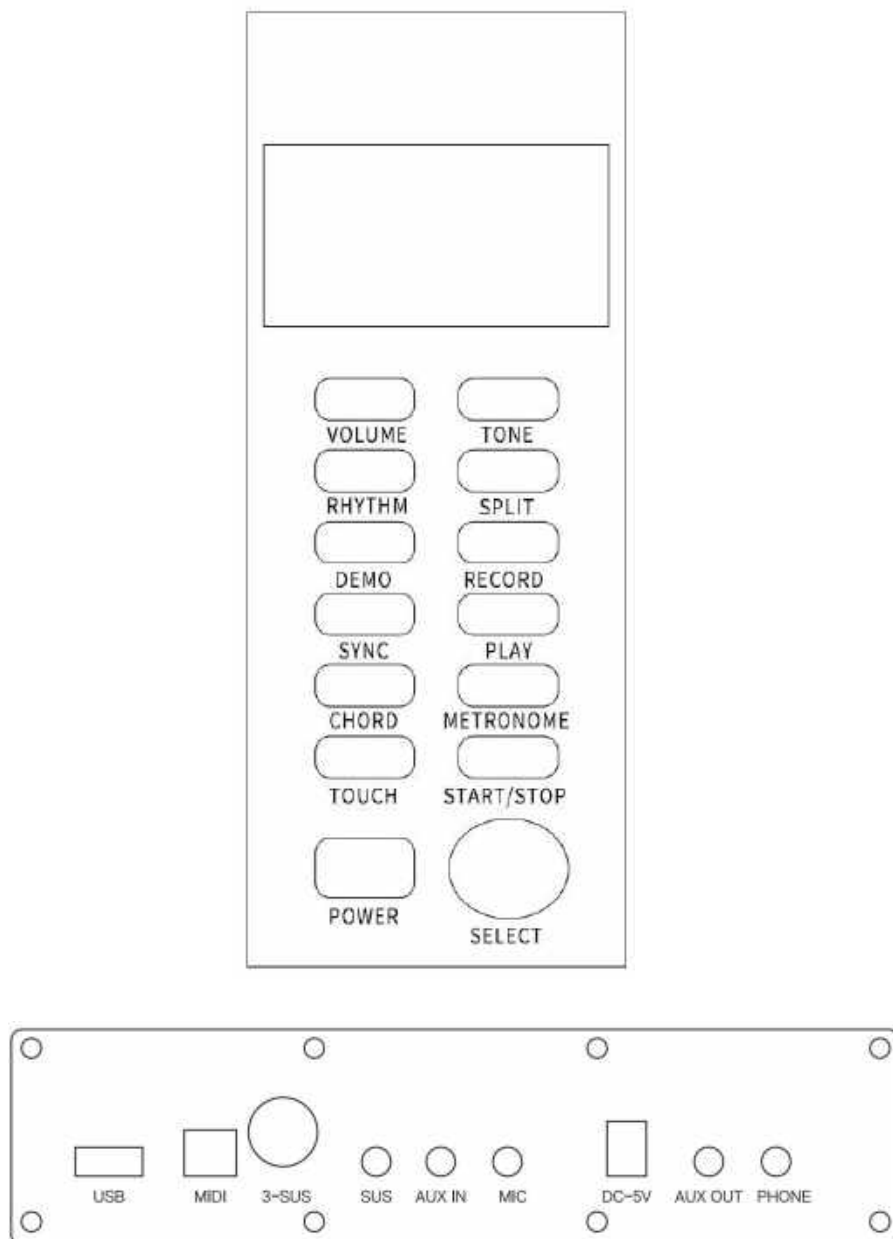

Functional operation instructions

■ Play (Tone) mode:

- ◇ When switching on, it automatically enters the playing (Tone) mode.
- ◇ Rotate the code switch to select one of the tones 0-127 to play.
- ◇ Press the [VOLUME] key to rotate the code switch to select the keyboard playing volume.
- ◇ Pressing the [START/STOP] key/[RHYTHM] key, the system enters the rhythm mode and plays the rhythm.
- ◇ Rotate the code switch to select the rhythm track, the track is from 0-127.
- ◇ Press [SYNC] key, you can start the rhythm playback by pressing the piano key.
- ◇ Pressing the [Tone] key in this mode, you can switch to the tone selection mode, rotate the coding switch to select the tone, and to switch the rhythm again, you need to press the [Rhythm] key to switch the rhythm selection mode.

■ Split Mode

- ◇ Press the [SPLIT] key to turn on/off the Dual Keyboard Mode.
- ◇ The range of the keys in this mode is divided into two ranges: A2-B5 and C4-C8.

■ Demo song mode:

- ◇ Press [DEMO] key, the system plays all the demo songs, press [START/STOP] key can stop the demo song playback.

Functional operation instructions

- ◇ Press [VOLUME] key to rotate the coding switch to select the song playback volume.
- ◇ Rotate the coding switch to select the demo song, with tracks ranging from 0-79.
- ◇ Press the [TONE] key in this mode, rotate the code switch to switch the tone, and press the [Rhythm] key to switch the tempo again.

■ Recording related functions:

- ◇ Press the [Record] key to enter the recording mode, the digital tube displays [REC]
- ◇ The recording function adopts multi-channel real-time recording to record notes.
- ◇ After entering the recording mode, the user can play the keys at will, and the system will automatically record the keys played by the user faithfully.

The system will automatically record the keys played by the user faithfully. When the recording block planned by the system is full, the digital tube will display [FUL] to indicate that the recording is full.

- ◇ Pressing the [PLAY] key can realize the recording playback function, but the playback function is considered effective only when there are notes being recorded, and after the playback is finished, it will automatically return to the original state.
- ◇ You can select the playback tone during playback.
- ◇ Recorded notes will be automatically refreshed after re-recording and system reset.

Functional operation instructions

■ Chord pattern

- ◇ While the system is playing the rhythm, press the [CHORD] key to enter the chord mode.
- ◇ Chord function: Press the keys in the A1~F#4 range to play chords that match the rhythm, and the tone of the chord changes with the pitch of the keys.
- ◇ In chord mode, press the [CHORD] key to turn off chords.

■ Metronome function:

- ◇ The metronome is a metronome auxiliary function, pressing the [METRONOME] key can cycle through the selection of beats.

There are 4 variations of the metronome, in the order of 2/4 beat → 214 minutes → 3/4 beat → 3/4 minutes.

■ Touch control function:

- ◇ Press [TOUCH] key to turn Touch on or off, touch is on by default when power on.

■ MIDI function:

- ◇ Connect to computer or tablet PC via USB cable for multimedia interaction.

■ USB playback function:

- ◇ Plug in USB Flash Dick, automatically play MP3 format audio.

■ Bluetooth function:

- ◇ In Bluetooth mode, it can be used as Bluetooth speaker after connecting to Bluetooth device wirelessly.

Functional operation instructions

◇Bluetooth MID,select wireless Bluetooth connection in the teaching APP, it can transmit data with the teaching APP.

■Other functions:

◇SUS: sustain, step on the sustain pedal to extend the time of the end of the key tone.

◇3-SUS (optional): 3-pedal function, right is sustain, middle is sustain, left is weak.

◇AUX IN: Audio input, can be connected with audio cable to play audio from mobile phone.

◇AUX OUT: Audio output, can be connected to external audio equipment to play the audio inside the piano.

◇PHONE: Headphone output, headphones can be connected to monitor playing, which will shield the piano speakers from playing.

Appendix

No.	Chinese name	English name	034	Electric Bass(pick
Tone: Piano			035	Fretless Bass
Piano			036	Slap Bass
000	Piano 1		037	Slap Bass
001	Piano 2		038	Synth Bass
002	Piano 3		039	Synth Bass
003	Honky-Tonk Piano		String solo	
004	Rhodes Piano		040	Violin
005	Chorused Piano		041	Viola
006	Harpsichord		042	Cello
007	Clavinet		043	Contrabass
Percussion			044	Tremolo Strings
008	Celesta		045	Pizzicato Strings
009	Glockenspiel		046	Orchestral Harp
010	Music Box		047	Timpani
011	Vibraphone		String Ensemble	
012	Marimba		048	String Ensemble
013	Xylophone		049	String Ensemble
014	Tubular Bells		050	SynthStrings
015	Santur		051	SynthStrings
Organ			052	Choir Aahs
016	Hammond Organ		053	Voice Oohs
017	Percussive Organ		054	Synth Voice
018	Rock Organ		055	Orchestra Hit
019	Church Organ		Brass instruments	
020	Reed Organ		056	Trumpet
021	Accordion		057	Trombone
022	Harmonica		058	Tuba
023	Bandoneon		059	Muted Trumpet
Guitar			060	French Horn
024	Acoustic Guitar(nylon)		061	Brass Section
025	Acoustic Guitar(steel)		062	Synth Brass 1
026	Electric Guitar(jazz)		063	Synth Brass 2
027	Electric Guitar(clean)		Reed instrument	
028	Electric Guitar(muted)		064	Soprano Sax
029	Overdriven Guitar		065	Alto Sax
030	Distortion Guitar		066	Tenor Sax
031	Guitar Harmonics		067	Baritone Sax
Bass			068	Oboe
032	Acoustic Bass		069	English Horn
033	Electric Bass(finger)		070	Bassoon

Appendix

071	Clarinet	107	Koto
	Wind instrument	108	al imba
072	Piccolo	109	Bagpipe
073	F lute	110	Fiddle
074	Recorder	111	Shana
075	Pan Flute		Percussion
076	Bottle Blow	112	Tinkle Bell
077	Skakuhachi	113	Agogo
078	Whistle	114	Steel Drums
079	Ocarina	115	Woodblock
	Synthetic lead	116	Taiko Drum
080	Lead 1(square)	117	Melodic Tom
081	Lead 2(sawtooth)	118	Synth Drum
082	Lead 3(calliope lead)	119	Reverse Cymbal
083	Lead 4(chiff lead)		Sound effects
084	Lead 5(charang)	120	Guitar Fret Noise
085	Lead 6(voice)	121	Breath Noise
086	Lead 7(fifths)	122	Seashore
087	Lead 8(bass+lead)	123	Bird Tweet
	Synthetic Soft	124	Telephone Ring
088	Pad 1(new?age)	125	Helicopter
089	Pad 2(warm)	126	Applause
090	Pad 3(polysynth)	127	Gun shot
091	Pad 4(choir)		
092	Pad 5(bowed)		
093	Pad 6(metallic)		
094	Pad 7(halo)		
095	Pad 8(sweep)		
	Synthetic effects		
096	FX 1(rain)		
097	FX 2(soundtrack)		
098	FX 3(crystal)		
099	FX 4(atmosphere)		
100	FX 5(brightness)		
101	FX 6(goblins)		
102	FX 7(echoes)		
103	FX 8(sci-fi)		
	Tribal instrument		
104	Sitar		
105	Banjo		
106	Shami sen		

Appendix

No.	Chinese name	English name	039	2polka
Rhythm			040	1popswing
000	1beguineswing		041	2Easyswing
001	2beguin		042	3softswing
002	3beguine		043	1rock
003	1pophit		044	2rock
004	2pop		045	3rock
005	3popmalay		046	4Airyrock
006	bossanova		047	5heartrock
007	1disco		048	6rock&rol l
008	2disco		049	7urban
009	3Bluegrassdisco		050	1ballad
010	1waltzl		051	2jazzbal lad
011	2waltzl		052	30.bal lad
012	3Trueballadwaltz		053	4J.ballad
013	4bossawal tz		054	560Slowbal lad
014	5Fasywaltz		055	6pianoBallad
015	6shufflewaltz		056	750sbal lad
016	7Reggaewal tz		057	Snakebase
017	8Rhumbawaltz		058	1Happyblues
018	1march		059	201dblues
019	2march		060	3bluegras
020	1rhumba		061	1boodie
021	2rhumba		062	2boodie
022	1slow		063	3boodie
023	2slow		064	1shuffle
024	1discocha		065	2shuffle
025	2guaracha		066	3Dreamshuffle
026	3charl		067	4countryshuffle
027	1 samba		068	5Quickshuffle
028	2samba		069	6Reggaeshuffle
029	1ubminimal		070	1R&B
030	18bit		071	1Reggae
031	28bit		072	2Reggae
032	116bit1		073	3reggae
033	216bit2		074	1Salsa
034	3Ballad16T		075	2salsa
035	4country16T		076	3salsa
036	1Tango		077	1tecno
037	2tango		078	2tecno
038	1Polka		079	1funky

Appendix

080	2funky	104	4Destiny
081	1dixie	105	5Comedy
082	2dixie	106	6drive
083	1foxtrot	107	7Liquidnova
084	2foxtrot	108	8KIndustrialfolk
085	1R.roll	109	9slowpure
086	2R.roll	110	10simpleJam
087	1fastbeat	111	11synthethix
088	2Quickbeat	112	12feel
089	3smoothbeat	113	13Accelerate
090	4Squarebeat	114	14Beachnight
091	5eurobeat	115	15Irish
092	Alphadance	116	16Tarantella
093	2Betadance	117	17bigband
094	3dreamdance	118	18dandut
095	4dance1	119	19fusior
096	5dance2	120	20horse2
097	6dance3	121	21keron
098	rap	122	22latin
099	1thevi llage	123	23mambo
100	2countryshuffle	124	24newage
101	lelectrickeys	125	25slowrc1
102	2darkkeys	126	26soul
103	3Easywa lk	127	27twist

Appendix

No.	Chinese name		
Demo Songs		039	Weald
000	Ecosaise	040	Rhapsody in Blue
001	Love Romance	041	Romantic season
002	Storm	042	Crystal Lake
003	Borree	043	A Beautiful Jazzy Day
004	Flower Waltz	044	Dream wedding
005	Grande Valse	045	Misty Forest-Neptun
006	Ode to Joy	046	Misty Forest-first snow
007	Canon	047	Secret Garden
008	Frédéric François Chopin	048	Sad or Happy
009	Carmen	049	Autumn Whisper
010	Radetzky Marsch	050	Ballade pour Adeline
011	the Blue Danube	051	Childhood memories
012	Green Sleeves	052	Prelude in C 848
013	Going Home	053	Les Premiers Sourires de Vanessa
014	Fountain	054	Starry Sky
015	The Beer Barrel Polka	055	Snowdream
016	Maiden's prayer	056	Flight of the Bumblebee
017	Ave Maria	057	Music Box Dancer
018	Schubert Piano Sonatas	058	Dance Of The Fireflies
019	Turkish March	059	Mazurka
020	Spanish Matador	060	AirdelaPetiteRussie,Opus107,No.3
021	Minuet	061	Notebook
022	Puppy Waltz	062	Rondino
023	Humoresque	063	SonatinainC
024	Serenade	064	AmazingGrace
025	Franz Schubert	065	BigBadGoblinBlues
026	Little waltz	066	CarribeanCruise
027	Hungarian Dance No.5	067	DannyBoy
028	For Elise	068	EveningFalls
029	A Lover's Concerto	069	Jana, Gana, Mana
030	Love story	070	MoonlightSonata
031	Annie's Song	071	OnceaCanadianLad
032	Annie's Wonderland	072	RockSolidBlues
033	One Day In Spring	073	SeeHowtheNightArrives
034	Rhythm For Memory	074	ToreadorfromCarmen
035	The Sound of Silence	075	AupresdemaBlonde
036	For Elise Jazz	076	AveMaria
037	Casablanca	077	Beethoven'sFifthSymphony
038	Croatian Rhapsody	078	Brahms'Lullaby
		079	CrippleCreek



Product maintenance

Careful maintenance and protection of this product plays a very important role in extending the service life of the product and reducing failures.

1 Avoid heat, moisture or direct sunlight

Do not overexpose the product to direct sunlight, place it near an air conditioner, or in an extremely hot place.

2 Do not use near televisions or radios

This product may cause video or audio interference to television and radio reception. If this occurs, the product should be moved away from the television or radio.

3 Do not use paint, thinner or similar chemicals for cleaning

Clean the product with a soft cloth dampened with a weak aqueous solution and a mild detergent. Soak the cloth in the solution and wring it out until it is nearly dry.

4 Do not shake and avoid collisions

The product should be handled with care when moving, and severe vibration and collision are strictly prohibited to avoid damage to the casing or damage to the internal electronic components.



Safety Precautions

Power

This product can be powered by a standard indoor wall outlet, please use only the power cord specified for this product. Please be sure to turn off the power when not in use temporarily. When not in use for a long time, please unplug the power cord and keep it properly.

110-240V AC outlet



Mark

In order to ensure that you use this product safely and correctly and prevent harm to the user and others as well as financial damage, this manual and the product are marked with a series of safety signs. The various signs and their meanings are as follows:

Warn

This symbol indicates that if this symbol is ignored and the product is operated incorrectly, there is a potential risk of death or serious injury.

Notice

This symbol indicates that if this symbol is ignored and the product is operated incorrectly, there is a potential risk of personal injury or other financial damage.

Mark Example

This triangle mark (⚠) indicates matters that users should pay attention to. (The example on the left is to be careful of electric shock)

The slashed circular mark (C) indicates prohibited matters. Illustrations in or next to the signs indicate specifically prohibited content. (The example on the left shows disassembly is prohibited)

Black dots (·) indicate matters that must be observed. The icons in this mark indicate specific matters that must be observed. (The example on the left shows that the power plug must be pulled out of the socket)



Safety Precautions



Warn

Smoke, odor, overheating

When the product emits smoke, smells, or is overheated, continued use may cause fire and electric shock. When the above situation occurs, the following operations should be performed immediately.

1. Turn off the power.
2. Unplug the plug from the power socket.
3. Contact your dealer.

Power cable

Improper use of the power cord may cause fire and electric shock hazards. The following precautions must be observed.

You must use the power cord specified for this product.

You must use an AC power source whose output voltage is within the rated voltage range for household use.

Do not overload the power outlet or power extension cord.

Improper handling of the power cord may result in damage or breakage, resulting in fire and electric shock hazards. The following precautions must be observed.

Do not place heavy objects on the power cord or expose it to heat.

Do not attempt to modify or bend the power cord excessively.

Do not twist or pull on the power cord.

If the power cord or plug is damaged, replace the power cord with the same specification and type.

Do not touch the power cord and plug with wet hands, otherwise there is a risk of electric shock.

Use the power cord in a place where water will not splash. Water poses a risk of fire and electric shock.

Do not place a vase or any other container of water on this product. Water poses a risk of fire and electric shock.

Do not allow minors to unplug or touch the power cord or connection board, as minors do not have the knowledge of electricity safety and there is a risk of electric shock.



Notice

Improper use of the power cord may cause fire and electric shock hazards. The following precautions must be observed.

Do not place the power cord near a stove or other heat source.

Do not pull on the power cord when unplugging it from the electrical outlet. The plug body must be grasped.

The power cord plug must be inserted all the way into the power socket.

Make sure the power is off before connecting or disconnecting the power cord.

Unplug the power cord from the wall outlet during a thunderstorm or before going on a trip or other extended absence.

At least once a year, unplug the power cord from the wall outlet and clean away any accumulated dust from around the plug.



Safety Precautions

Do not dispose of this product

Do not place this product in fire. Otherwise, the wooden products will burn and their internal electronic components will explode, posing a risk of fire and personal injury.

Water and foreign matter

Water, other liquids and (metal pieces, etc.) entering this product may cause fire and electric shock. When the above situation occurs, the following operations should be performed immediately.

1. Turn off the power.
2. If the power cord is being used for power, unplug it from the wall outlet.
3. Contact your dealer.

Dismantling and rebuilding

Do not disassemble or modify this product in any way. Otherwise, there is a risk of electric shock, burns or other personal injuries. Entrust all internal inspections, adjustments and maintenance to your dealer.

Dropped or hit

Continuing to use this product after it has been dropped or damaged by a strong impact may cause fire and electric shock. When the above situation occurs, the following operations should be performed immediately.

1. Turn off the power.
2. If the power cord is being used for power, unplug it from the wall outlet.
3. Contact your dealer.

Plastic bag

Do not let anyone put the plastic bag used to package this product over their head or put it in their mouth, otherwise there is a risk of suffocation. Families with young children should pay special attention.

Keep your distance from this product and stand

Climbing up the piano body or its stand may cause it to tip over or be damaged. Families with young children should pay special attention.

Laying

Avoid placing this product on uneven surfaces or any other unstable location. This may cause the product to fall and cause personal injury.

Product movement

Before moving this product, you must unplug the power cord from the wall outlet and disconnect all other cables and cords. Otherwise, the wire may be damaged, resulting in the risk of fire and electric shock.

Clean

Before cleaning this product, you must unplug the power cord from the wall outlet, otherwise there is a risk of fire and electric shock.

Interface

Only specified equipment and devices may be connected to the interfaces of this product. Connecting unspecified equipment or devices may cause fire and electric shock hazards.

Location Selection

Avoid placing this product in the following places.

Otherwise, there is a risk of fire and electric shock.

Places with high temperature or dust.

Kitchen or other places with fumes.

Places exposed to direct sunlight or any other place where this product will generate high temperatures.

Volume

Do not play music at high volume for a long time. Be especially aware when using headphones that excessive volume can damage your hearing.

Heavy objects

Do not place heavy objects on this product. Otherwise, the top of the product will be too heavy, causing the product to tip over or the objects on it to fall, posing a risk of personal injury.

Proper assembly of the stand

Improper assembly of the stand may cause it to tip over, causing the product to fall, posing a risk of personal injury. Therefore, assembly must be carried out according to the instructions in the instructions provided

with it to ensure that this product is properly installed on its stand.

Fuse replacement

If the fuse is blown, there may be a short circuit or unstable voltage inside the product, which must be identified and replaced by professionals, otherwise there is a risk of fire and electric shock.



Sicherheitsvorkehrungen

Entsorgen Sie dieses Produkt nicht

Legen Sie dieses Produkt niemals ins Feuer. Sonst wird es so sein
Verursacht Verbrennungen von Holzprodukten und deren internen elektronischen Bauteilen
Das Produkt kann explodieren und die Gefahr von Bränden und Verletzungen verursachen.

Wasser und Fremdkörper

Wasser, andere Flüssigkeiten und (Metallteile usw.) gelangen hinein
Bei diesem Produkt besteht Brand- und Stromschlaggefahr. aus
Wenn die obige Situation eintritt, sollten die folgenden Vorgänge sofort ausgeführt werden.

1. Schalten Sie den Strom aus.
2. Wenn Sie das Netzkabel zur Stromversorgung verwenden Um es mit Strom zu versorgen, schließen Sie es an die Steckdose an Ziehen Sie den Stecker heraus.
3. Kontaktieren Sie Ihren Händler

Demontage und Neuaufbau

Zerlegen Sie dieses Produkt niemals in irgendeiner Weise seine Transformation. Andernfalls kann es zu Stromschlägen, Verbrennungen oder Ähnlichem kommen
Es besteht die Gefahr von Personenschäden. Alle internen Inspektionen sollten durchgeführt werden
Überlassen Sie Inspektion, Einstellung und Wartung Ihrem Händler.

Fallengelassen oder getroffen werden

Dieses Produkt wurde fallen gelassen oder starken Stößen ausgesetzt. Die weitere Verwendung nach einer Beschädigung kann zu Brand- und Stromschlaggefahr führen. Wenn die obige Situation eintritt, sollten die folgenden Vorgänge sofort ausgeführt werden.

1. Schalten Sie den Strom aus.
2. Wenn Sie das Netzkabel verwenden Strom, schließen Sie die Steck es aus.
3. Kontaktieren Sie Ihren Händler.

Plastiktüte

Erlauben Sie niemandem, die Plastikverpackung zu entfernen, in der dieses Produkt verpackt ist. Legen Sie den Stoffbeutel auf Ihren Kopf oder stecken Sie ihn in den Mund, da es sonst zu Verletzungen kommen kann Erstickungsgefahr; Familien mit kleinen Kindern sollten sich besonders bewusst sein.
Halten Sie Abstand zu diesem Produkt und stehen Sie auf

Das Hochklettern des

Instrumentenkörpers oder seines Ständers kann dazu führen, dass es umkippt oder Familien mit kleinen Kindern sollten besonders auf das Schadensrisiko achten.

Ort

Stellen Sie dieses Produkt nicht auf unebenen Oberflächen auf Oberfläche oder einem anderen instabilen Ort. Sonst wird es so sein
Beim Herunterfallen des Produkts besteht Verletzungsgefahr.

Produktbewegung

Bevor Sie dieses Produkt bewegen, müssen Sie es zunächst von der Wand entfernen Ziehen Sie das Netzkabel aus der Steckdose und ziehen Sie alle anderen Geräte ab Kabel und Verbindungsdrähte. Andernfalls kann die Leitung beschädigt werden, was zur Folge hat Brand- und Stromschlaggefahr.

Sauber

Bevor Sie dieses Produkt reinigen, müssen Sie es zuerst entfernen Ziehen Sie das Netzkabel aus der Steckdose, da es sonst zu einem Brand kommen kann Es besteht Katastrophen- und Stromschlaggefahr.

Schnittstelle

An die Schnittstelle dieses Produkts können nur bestimmte Geräte angeschlossen werden. Ausrüstung und Geräte. Der Anschluss unbeabsichtigter Geräte oder Geräte kann zu Problemen führen kann zu Bränden und Stromschlägen führen.

Standortauswahl

Stellen Sie dieses Produkt nicht an den folgenden Orten auf. NEIN Es besteht Brand- und Stromschlaggefahr.

Orte mit hoher Temperatur oder Staub.

Küche oder andere Orte mit Dämpfen.

Orte mit direkter Sonneneinstrahlung oder anderen Orten Wo dieses Produkt hohe Temperaturen erzeugt.

Volumen

Spielen Sie Musik niemals über einen längeren Zeitraum mit hoher Lautstärke ab. verwenden
Seien Sie besonders vorsichtig, wenn Sie Kopfhörer verwenden, da eine zu hohe Lautstärke Ihr Gehör schädigen kann.

Schwere Gegenstände

Stellen Sie niemals schwere Gegenstände auf dieses Produkt. Andernfalls wird das Produkt beschädigt Die Oberseite des Produkts ist zu schwer, sodass das Produkt umkippt oder auf Gegenstände fällt. Beim Herunterfallen des Produkts besteht Verletzungsgefahr.

Fachgerechte Montage des Ständers

Eine unsachgemäße Montage des Ständers kann zum Umkippen des Produkts führen Beim Herunterfallen des Produkts besteht Verletzungsgefahr. Deshalb muss es Um dies zu gewährleisten, muss der Zusammenbau gemäß den Anweisungen im beiliegenden Handbuch erfolgen Es wird garantiert, dass dieses Produkt ordnungsgemäß in seiner Halterung installiert ist.

Sicherungswechsel

Wenn die Sicherung durchbrennt, liegt möglicherweise ein Kurzschluss im Inneren des Produkts vor. Bei Störungen im Stromkreis oder bei Spannungsinstabilität ist es notwendig, einen Fachmann zu konsultieren Identifizieren und ersetzen Sie es, andernfalls besteht Brand- und Stromschlaggefahr.

Précautions de sécurité

Ne jetez pas ce produit

Ne placez jamais ce produit au feu. Sinon ce sera
Provoque la combustion des produits en bois et de leurs
composants électroniques internes
Le produit peut exploser, entraînant un risque d'incendie
et de blessures.

Eau et corps étrangers

De l'eau, d'autres liquides et (morceaux métalliques, etc.) entrent
Ce produit présente un risque d'incendie et de choc électrique.
dehors Lorsque la situation ci-dessus se produit, les opérations
suivantes doivent être effectuées immédiatement.

1. Coupez l'alimentation.
2. Si vous utilisez le cordon d'alimentation pour alimenter
l'alimentation, branchez-le à la prise murale.
Débranchez.
3. Contactez votre revendeur

Démantèlement et reconstruction

Ne démontez jamais ce produit de quelque manière que ce soit ou
sa transformation. Sinon, un choc électrique, des brûlures ou
autres Cela risque de provoquer des blessures. Toutes les
inspections internes doivent être Confiez l'inspection, le réglage et
l'entretien à votre revendeur.

Tombé ou frappé

Ce produit est tombé ou a été soumis à un fort impact.
Continuer à l'utiliser après un dommage peut entraîner des
risques d'incendie et de choc électrique. Lorsque la situation
ci-dessus se produit, les opérations suivantes doivent être
effectuées immédiatement.

1. Coupez l'alimentation.
2. Si vous utilisez le cordon d'alimentation pour
l'alimentation, connectez le Débranchez-le.
3. Contactez votre revendeur.

Sac plastique

Ne laissez jamais personne retirer l'emballage en plastique utilisé
pour emballer ce produit. Mettez le sac de matériel sur votre tête
ou mettez-le dans votre bouche, sinon cela pourrait provoquer
Risques d'étouffement Les familles avec de jeunes enfants doivent
être particulièrement vigilantes

Gardez vos distances avec ce produit et tenez-vous debout

Grimper sur le corps de

L'instrument ou sur son support peut le faire basculer ou Les
familles avec de jeunes enfants doivent accorder une attention
particulière aux risques de dommages.

Lieu

Évitez de placer ce produit sur des surfaces inégales
surface ou tout autre endroit instable. Sinon ce sera
Si le produit tombe, il existe un risque de

Mouvement du produit

Avant de déplacer ce produit, vous devez d'abord le retirer du mur
Débranchez le cordon d'alimentation de la prise électrique et
débranchez tous les autres Câbles et fils de connexion. Sinon, la
ligne pourrait être endommagée, ce qui entraînerait Risque
d'incendie et de choc électrique.

Faire le ménage

Avant de nettoyer ce produit, vous devez d'abord retirer le
Débranchez le cordon d'alimentation de la prise de courant, sinon
cela pourrait provoquer un incendie Risque de catastrophe et de
choc électrique.

Interface

Seuls les appareils spécifiés peuvent être connectés à l'interface
de ce produit. Équipements et appareils. La connexion
d'équipements ou de dispositifs involontaires peut provoquer peut
provoquer des risques d'incendie et de choc électrique.

Sélection de l'emplacement

Évitez de placer ce produit aux endroits suivants. Non Il
existe un risque d'incendie et de choc électrique.
Endroits à haute température ou poussière.
Cuisine ou autres endroits avec des fumées.
Endroits exposés à la lumière directe du soleil ou à tout autre
Où ce produit génère des températures élevées.

Volume

Ne jouez jamais de musique à volume élevé pendant de longues
périodes. utiliser
Soyez particulièrement prudent lorsque vous utilisez des
écouteurs, car un volume excessif peut endommager votre

Objets lourds

Ne placez jamais d'objets lourds sur ce produit. Sinon, le
produit Le dessus du produit est trop lourd, ce qui fait basculer
le produit ou le laisse tomber sur des objets. Si le produit
tombe, il existe un risque de blessure.

Assemblage correct du stand

Un assemblage incorrect du support peut le faire basculer, ce qui
entraînerait le produit à Si le produit tombe, il existe un risque de
blessure. Il faut donc Il doit être assemblé conformément aux
instructions du manuel qui l'accompagne pour garantir que Ce
produit est garanti correctement installé dans son support.

Remplacement du fusible

Si le fusible saute, il peut y avoir un court-circuit à l'intérieur du
produit. phénomène de circuit, ou instabilité de tension, il est
nécessaire de consulter un professionnel Identifiez-le et
remplacez-le, sinon il y a un risque d'incendie et de choc
électrique.