

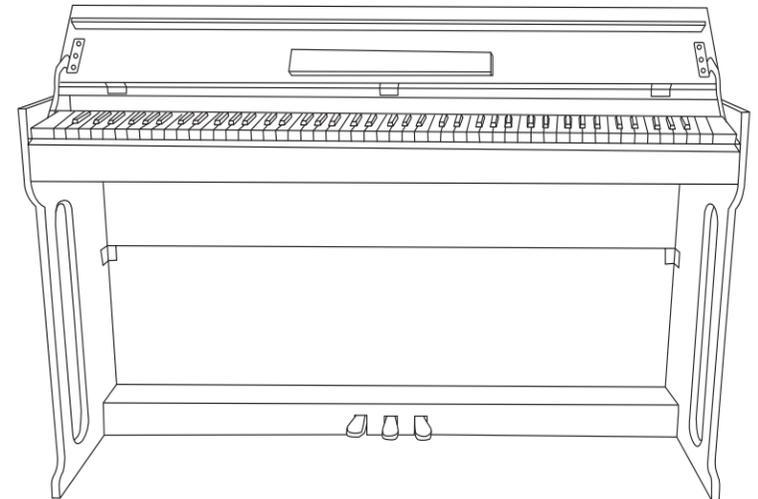


Digital Piano


USER MANUAL

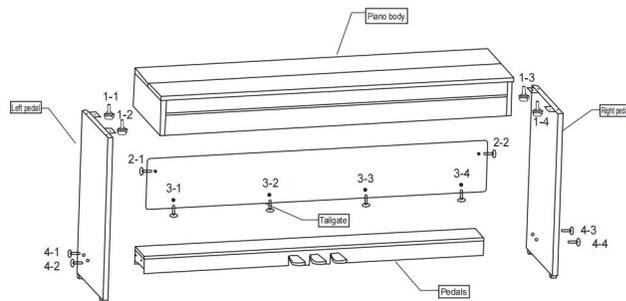


First connection of bluetooth, initial password: 8888

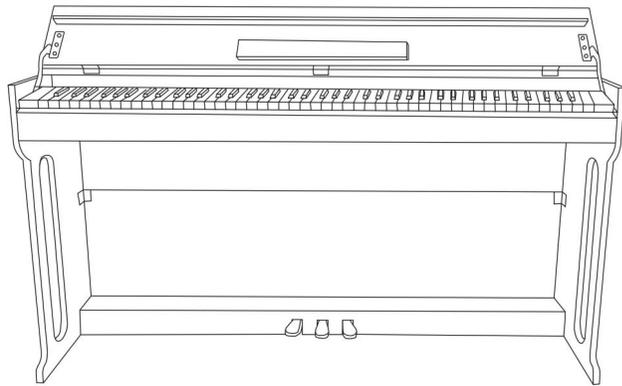

- 1-1 to 1-4 Screw M6X3 with Plastic handle (4 PCS)
- 2-1 to 2-2 Cross Large Flat Head Tapping screw M6x20(2 PCS)
- 3-1 to 3-4 Cross Large Flat Head Tapping screw TA4x15(4 PCSes)
- 4-1 to 4-4 Cross Large Flat Head Tapping screw M6x50(4 PCSes)

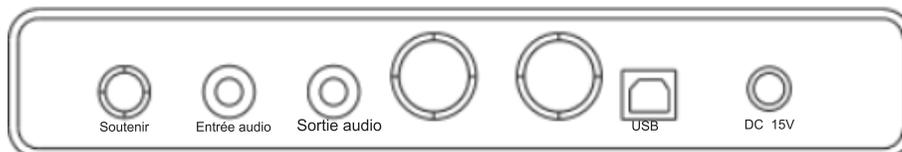

Function Panel introduction

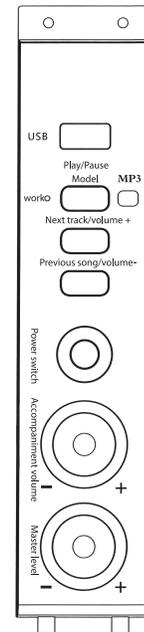

- Keyboard: 88 standard keys (including black keys).
Sound range :A1~C9.
- Rhythm: 600 rhythms
- Timbre: 800 timbre
- Demo song :80
- Recording playback function, rhythm function, demonstration song function, metronome function, keyboard drum function.
- Hardware: 64 chords, with 2 channels of 16-bit DAC output, built-in power amplifier circuit.
- Output function: three - digit display.
- Delay pedal, weak pedal, delay pedal

Timbre control: dynamics, shift +, shift -

Pedal control: 3 pedals (extended/muted/delayed pedal)


MP3 Plays MP3 audio files in usb flash drive

MIDI control: MIDI input/output interface, can quickly and easily connect intelligent devices for interaction and creation, at the same time equipped with a square USB connection hole, make the connection more simple and convenient

Recording function: recording, playback, can be convenient in the track accompaniment to record a track melody. Built-in stereo speakers provide high quality sound effects.

Audio input/audio output headset: external headphone jack
Other functions: USB play, pause, previous song, next song, demonstration song, timbre, start, rhythm, +/- and other universal selection functions

Original configuration: piano body (three pedals for main piano frame, clamshell cover, music frame integrated, external power supply, manual)

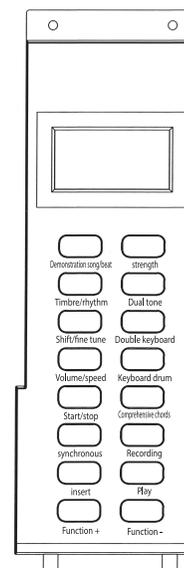

Welcome to the digital piano

Congratulations on being the owner of a digital piano, which combines GM tone, artistic digital circuits and functions to make you enjoy great musical pleasure.

We recommend that you read this manual carefully and try to develop the various functions of the violin. Please keep this manual safe for future reference.

Directory

1. The assembly	1
2. The panel	2
3. The directory	3
4. Specific operations	4-5
5. Rhythm	6-15
6. Demonstration songs	16
7. Timbre 1st	17-30
8. Single finger chord schedule	31
9. Attachment 1	32-33
10. Attachment 2	34
11. Attachment 3	35-36

Electric piano Instruction manual

一、Features:

- Keyboard: 88 standard keys (including black keys). Sound range :A1~C9.
- Timbre: 800 timbre (001-800)
- Rhythm: 600 rhythms (001-600)
- Demo songs: 80 (001-080)
- Recording playback function, rhythm function, demonstration song function, metronome function, keyboard drum function.
- Hardware: 64 chords, with 2 channels of 16-bit DAC output, built-in power amplifier circuit.
- Output function: three - digit display.
- Delay pedal, weak pedal, delay pedal

二、Operation instructions:

- Playing (tone) mode:
 - When the machine is turned on, it automatically enters the strumming mode.
 - Press [+], [-] to select the tone up and down.
 - Press and hold [+], [-] key for more than 1 second, you can continuously select up and down to select tone.
 - Hold down the [+] and [-] keys at the same time to restore the tone to 000.
- Rhythm mode:
 - Press **[Tone/rhythm key]** twice to enter rhythm mode, digital tube display "Rhy", two seconds later display rhythm number;
 - In this mode, press **[Function +]** or **[Function -]** to select the first beat of **[1-600]**, and hold down to quickly select a beat.
 - In this mode, press **[tone/rhythm key]**, **[Volume/Speed key]**, **[Shift/Fine tuning key]** to switch the function of **[Function +]** **[Function -]**. When adjusting tone or volume/speed, the digital tube will display the current tone serial number or volume/speed serial number. To switch to the rhythm selection function, press **[Tone/rhythm key]**.
 - In playing mode, press **[sync]** to enter the sync mode. In this mode, press any piano key to enter the rhythm mode automatically.
- Model song mode:
 - Press **[Demo song/beat]** to enter the demo song playing mode. In this mode, press **[Function +]** and **[Function -]** to select **[1-80]** tracks, and long press to select tracks quickly. In this mode, the nixie tube displays D**, ** represents the track.
 - In this mode, press **[tone/rhythm key]** and **[Volume/Speed key]** to switch the functions of **[Function +]** and **[Function -]**. When adjusting the tone or volume/speed, the digital tube will display the current tone serial number or volume/speed serial number. To switch to the demonstration song selection function, press **[Demonstration song/tempo key]**.
- Metronome mode:
 - In non-demo mode, press **[Demo/beat key]** twice to enter the metronome mode; In demo mode, press **[Demo/beat key]** once to enter the metronome mode;
 - In this mode, press **[Function +]** and **[function -]** to select **[0-3]** metronome. In this mode, the digital tube displays B**, and ** represents the metronome serial number.
 - This mode press **[key tone/rhythm]**, **[Volume/speed key]**, **[transposing/fine-tuning key switch]** **[function +]** **[function -]** function, adjust the tone or volume/speed, digital tube display the current tone/speed serial number, serial number or volume to switch to the model selection function, need according to the **[demonstration/beat key]**.
- Shift and fine tuning
 - Press **[Shift/Fine adjustment]** to enter the function of shift/fine adjustment, plus or minus 6 level adjustment;
 - Display: Shift display: T**, ** represents the number of octaves added or subtracted. Fine-tuning display: t **, ** represents fine-tuning adjustment series;

■ Volume and Speed

- Press **[Volume/Speed]** for the first time to enter the volume adjustment mode, the digital tube display: VOL, two seconds later, display the corresponding number in the current mode;
- Press **[Function +]** , **[Function -]** to adjust the volume, with 0-100 level volume;
- Press **[Volume/Speed]** for the second time to enter the speed adjustment mode, the digital tube display: S**, two seconds later, the corresponding number in the current mode will be displayed;
- Press **[Function +]** , **[Function -]** to adjust the playback speed, with 0-15 speed;

■ Chord pattern

- When the rhythm is playing, press **[Comprehensive chord key]** to enter the chord mode, and press **[Comprehensive chord key]** for the second time to exit the chord mode.
- Chord function: Press the key in the A1-D3 interval to play the chord that matches the rhythm, and the tone of the chord changes with the pitch of the key.
- In this mode, press the insert key to insert drum sound into the rhythm track played.

■ Synchronous mode:

- Press Sync for the first time to enter the synchronization mode, and press Sync for the second time to exit the synchronization mode.
- When entering the synchronous mode, stop playing rhythm and press any piano key to enter the playing rhythm mode.

■ Recording related functions:

- Press **[Record]** to enter the recording mode and clear the last recording.
- The maximum number of recordings for each track is 256. When the track is full, another note cannot be recorded.
- Press the play key to play the notes recorded on the track.

■ Two keyboard mode:

- Press **[Double keyboard key]** for the first time to enable the double keyboard function, press **[double keyboard key]** for the second time to cancel the double keyboard function.
- When the two-keyboard keys are activated, the scale of a1-B4 on the left will be played as a2-B5 33-71, and the scale of C5-C9 on the right will be played as C4-C8.

■ Two tone mode:

- Press the "double tone" key for the first time to start the double tone function, and press the "double tone" key for the second time to cancel the double tone function.
- Use the **[+] [-]** key to select the main tone.
- When the two-tone function is activated, both the main tone and the second tone will sound when the keys are played.

■ Dynamics control function:

- Press the **[Strength]** key to turn on or off the strength, and the strength will be on when the machine is turned on.

■ USB - MIDI - IN-OUT function:

- Connect a COMPUTER or tablet with a USB cable for multimedia interaction.

■ Other features:

- Press the **[keyboard and drum]** key to switch directly to the piano/drum tone.
- Tone delay pedal: Press down the pedal to turn on the tone delay function, release the pedal to turn off the tone delay function.
- Muted pedal: Press down the pedal to reduce the volume of the piano keys.
- Delay pedal: The pedal is pressed down to prolong the current tone without affecting other tones later played.

8 BEAT		COUNTRY	
001	8 Beat 1A	033	Country music A
002	8 Beat 2A	034	Country rock A
003	8 Beat 3A	035	Rural slide A
004	8 Beat rock A	036	Rural swaying A
005	8 Beat passion A	037	Country ballade A
006	8 Beats pop music 1A	038	Country waltz A
007	8 Beats pop music 2A	ROCK R&B	
BALLAD		039	'50s rock and roll A
008	ballade 1A	040	Heavy metal A
009	ballade 2A	041	Rock 1A
010	Guitar ballade A	042	Rock 2A
011	organ ballade A	043	Soft rock A
012	Ballade of the blues A	044	Adagio rock A
013	Old ballade A	045	Hard rock A
014	Rock ballade A	046	Heavy metal 1A
015	Adagio ballade A	047	Heavy metal 2A
016	Popular ballade A	RHYTHM&BLUES	
017	Electroacoustic ballade A	048	Chicago Blues A
018	Polk balladeA	049	Fast Gospel music A
16 BEAT		050	Traditional soul A
019	16 Beat 1A	051	Rap A
020	16 Beat 2A	052	Adagio Gospel A
021	16 Beat 3A	053	Bruce A
022	16 Beat 4A	054	Adagio blues A
023	16Beat Fink A	055	fox-trot A
024	16Beat Pop music A	Disco	
025	16Beat song A	056	Passionate disco A
LATIN		057	Double disco A
026	Bossa nova 1A	058	Double step dance A
027	Guitars and bossanova A	059	Pop polka A
028	Pop the bossa nova A	060	waltz 1A
029	Tango A	061	Pop waltz 1A
030	cha-cha A	062	Pop waltz 2A
031	rumba A	WORLD MUSIC	
032	deckers A	063	lae A

Digital piano instruction manual

064	Twisting dance 1A	096	waltz 2 (piano) A
065	Twisting dance 2A	097	Guitar waltz A
066	Miami pop A	098	Piano accompaniment in 2/4 A
067	Detroit A	099	Piano accompaniment in 3/4 A
068	reggae A	100	Piano accompaniment in 4/4 A
069	Remote place ziggy A	8 BEAT	
070	mambo A	101	8 Beat 1B
071	Folk dance A	102	8 Beat 2B
072	Goes to Seth(French ballad) A	103	8 Beat 3B
DANCE		104	8 Beat rock B
073	Indoor dance A	105	8 Beat passion B
074	Adagio foxtrot A	106	8 Beats pop music 1B
075	Vinenaar Waltz A	107	8 Beats pop music 2B
076	Salsa A	BALLAD	
077	Disco A	108	ballade 1B
078	hiphope dance is popular A	109	ballade 2B
079	Arnoldus pop A	110	Guitar ballade B
080	Club dance A	111	organ ballade B
JAZZ&SWING		112	Ballade of the blues B
081	Buji dance A	113	Old ballade B
082	Trendy pop A	114	Rock ballade B
083	Jazz rock A	115	Adagio ballade B
084	swaying 1A	116	Popular ballade B
085	Dixie A	117	Electroacoustic ballade B
086	Jazz samba A	118	Polk balladeB
TRADITIONAL		16 BEAT	
087	march A	119	16 Beat 1B
088	American March A	120	16 Beat 2B
089	samba A	121	16 Beat 3B
090	polk A	122	16 Beat 4B
091	Army polka A	123	16Beat Fink B
092	Tarantella A	124	16Beat Pop music B
093	Adagio waltz A	125	16Beat song B
094	Army waltz A	LATIN	
PINIST		126	Bossa nova 1B
095	piano song A	127	Guitars and bossanovo B

Digital piano instruction manual

128	Pop the bossa nova B	160	waltz 1B
129	Tango B	161	Pop waltz 1B
130	cha-cha B	162	Pop waltz 2B
131	rumba B	WORLD MUSIC	
132	deckers B	163	lae B
COUNTRY		164	Twisting dance 1B
133	Country music B	165	Twisting dance 2B
134	Country rock B	166	Miami pop B
135	Rural slide B	167	Detroit B
136	Rural swaying B	168	reggae B
137	Country ballade B	169	Remote place ziggy B
138	Country waltz B	170	mambo B
ROCK R&B		171	Folk dance B
139	'50s rock and roll B	172	Goes to Seth(French ballad) B
140	Heavy metal B	DANCE	
141	Rock 1B	173	Indoor dance B
142	Rock 2B	174	Adagio foxtrot B
143	Soft rock B	175	Vinenaar Waltz B
144	Adagio rock B	176	Salsa B
145	Hard rock B	177	Disco B
146	Heavy metal 1B	178	hiphope dance is popular B
147	Heavy metal 2B	179	Arnoldus pop B
RHYTHM&BLUES		180	Club dance B
148	Chicago Blues B	JAZZ&SWING	
149	Fast Gospel music B	181	Buji dance B
150	Traditional soul B	182	Trendy pop B
151	Rap B	183	Jazz rock B
152	Adagio Gospel B	184	swaying 1B
153	Bruce B	185	Dixie B
154	Adagio blues B	186	Jazz samba B
155	fox-trot B	TRADITIONAL	
Disco		187	march B
156	Passionate disco B	188	American March B
157	Double disco B	189	samba B
158	Double step dance B	190	polk B
159	Pop polka B	191	Army polka B

Digital piano instruction manual

192	Tarantella B	224	16Beat Pop music I
193	Adagio waltz B	225	16Beat song I
194	Army waltz B	LATIN	
PINIST		226	Bossa nova 1I
195	piano song B	227	Guitars and bossanova I
196	waltz 2 (piano) B	228	Pop the bossa nova I
197	Guitar waltz B	229	Tango I
198	Piano accompaniment in 2/4 B	230	cha-cha I
199	Piano accompaniment in 3/4 B	231	rumba I
200	Piano accompaniment in 4/4 B	232	deckers I
8 BEAT		COUNTRY	
201	8 Beat 1I	233	Country music I
202	8 Beat 2I	234	Country rock I
203	8 Beat 3I	235	Rural slide I
204	8 Beat rock I	236	Rural swaying I
205	8 Beat passion I	237	Country ballade I
206	8 Beats pop music 1I	238	Country waltz I
207	8 Beats pop music 2I	ROCK R&B	
BALLAD		239	'50s rock and roll I
208	ballade 1I	240	Heavy metal I
209	ballade 2I	241	Rock 1I
210	Guitar ballade I	242	Rock 2I
211	organ ballade I	243	Soft rock I
212	Ballade of the blues I	244	Adagio rock I
213	Old ballade I	245	Hard rock I
214	Rock ballade I	246	Heavy metal 1I
215	Adagio ballade I	247	Heavy metal 2I
216	Popular ballade I	RHYTHM&BLUES	
217	Electroacoustic ballade I	248	Chicago Blues I
218	Polk ballade I	249	Fast Gospel music I
16 BEAT		250	Traditional soul I
219	16 Beat 1I	251	Rap I
220	16 Beat 2I	252	Adagio Gospel I
221	16 Beat 3I	253	Bruce I
222	16 Beat 4I	254	Adagio blues I
223	16Beat Fink I	255	fox-trot I

Digital piano instruction manual

Disco		287	march I
256	Passionate disco I	288	American March I
257	Double disco I	289	samba I
258	Double step dance I	290	polk I
259	Pop polkaI	291	Army polka I
260	waltz 1I	292	Tarantella I
261	Pop waltz 1I	293	Adagio waltz I
262	Pop waltz 2I	294	Army waltz I
WORLD MUSIC		PINIST	
263	lae A	295	piano song I
264	Twisting dance 1I	296	waltz 2 (piano) I
265	Twisting dance 2I	297	Guitar waltz I
266	Miami pop I	298	Piano accompaniment in 2/4 I
267	Detroit I	299	Piano accompaniment in 3/4 I
268	reggae I	300	Piano accompaniment in 4/4 I
269	Remote place ziggy I	8 BEAT	
270	mambo I	301	8 Beat 1E
271	Folk dance I	302	8 Beat 2E
272	Goes to Seth(French ballad) I	303	8 Beat 3E
DANCE		304	8 Beat rock E
273	Indoor dance I	305	8 Beat passion E
274	Adagio foxtrot I	306	8 Beats pop music 1E
275	Vinenaar Waltz I	307	8 Beats pop music 2E
276	Salsa I	BALLAD	
277	Disco I	308	ballade 1E
278	hiphope dance is popular I	309	ballade 2E
279	Arnoldus pop I	310	Guitar ballade E
280	Club dance I	311	organ ballade E
JAZZ&SWING		312	Ballade of the blues E
281	Buji dance I	313	Old ballade E
282	Trendy pop I	314	Rock ballade E
283	Jazz rock I	315	Adagio ballade E
284	swaying 1I	316	Popular ballade E
285	Dixie I	317	Electroacoustic ballade E
286	Jazz samba I	318	Polk ballade A
TRADITIONAL		16 BEAT	

Digital piano instruction manual

319	16 Beat 1E	351	Rap E
320	16 Beat 2E	352	Adagio Gospel E
321	16 Beat 3E	353	Bruce E
322	16 Beat 4E	354	Adagio blues E
323	16Beat Fink E	355	fox-trot E
324	16Beat Pop music E	Disco	
325	16Beat song E	356	Passionate disco E
LATIN		357	Double disco E
326	Bossa nova 1E	358	Double step dance E
327	Guitars and bossanovo E	359	Pop polka E
328	Pop the bossa nova E	360	waltz 1E
329	Tango E	361	Pop waltz 1E
330	cha-cha E	362	Pop waltz 2E
331	rumba E	WORLD MUSIC	
332	deckers E	363	lae E
COUNTRY		364	Twisting dance 1E
333	Country music E	365	Twisting dance 2E
334	Country rock E	366	Miami pop E
335	Rural slide E	367	Detroit E
336	Rural swaying E	368	reggae E
337	Country ballade E	369	Remote place ziggy E
338	Country waltz E	370	mambo E
ROCK R&B		371	Folk dance E
339	'50s rock and roll E	372	Goes to Seth(French ballad) E
340	Heavy metal E	DANCE	
341	Rock 1E	373	Indoor dance E
342	Rock 2E	374	Adagio foxtrot E
343	Soft rock E	375	Vinenaar Waltz E
344	Adagio rock E	376	Salsa E
345	Hard rock E	377	Disco E
346	Heavy metal 1E	378	hiphope dance is popularE
347	Heavy metal 2E	379	Arnoldus pop E
RHYTHM&BLUES		380	Club dance E
348	Chicago Blues E	JAZZ&SWING	
349	Fast Gospel music E	381	Buji dance E
350	Traditional soul E	382	Trendy pop E

Digital piano instruction manual

383	Jazz rock E	415	Adagio ballade AF
384	swaying 1E	416	Popular ballade AF
385	Dixie E	417	Electroacoustic ballade AF
386	Jazz samba E	418	Polk ballade AF
TRADITIONAL		16 BEAT	
387	march E	419	16 Beat 1AF
388	American March E	420	16 Beat 2AF
389	samba E	421	16 Beat 3AF
390	polk E	422	16 Beat 4AF
391	Army polka E	423	16Beat Fink AF
392	Tarantella E	424	16Beat Pop music AF
393	Adagio waltz E	425	16Beat song AF
394	Army waltz E	LATIN	
PINIST		426	Bossa nova 1AF
395	piano song E	427	Guitars and bossanovo AF
396	waltz 2 (piano) E	428	Pop the bossa nova AF
397	Guitar waltz E	429	Tango AF
398	Piano accompaniment in 2/4E	430	cha-cha AF
399	Piano accompaniment in 3/4E	431	rumba AF
400	Piano accompaniment in 4/4E	432	deckers AF
8 BEAT		COUNTRY	
401	8 Beat 1AF	433	Country music AF
402	8 Beat 2AF	434	Country rock AF
403	8 Beat 3AF	435	Rural slide AF
404	8 Beat rock AF	436	Rural swaying AF
405	8 Beat passion AF	437	Country ballade AF
406	8 Beats pop music 1AF	438	Country waltz AF
407	8 Beats pop music 2AF	ROCK R&B	
BALLAD		439	'50s rock and roll AF
408	ballade 1AF	440	Heavy metal AF
409	ballade 2AF	441	Rock 1AF
410	Guitar ballade AF	442	Rock 2AF
411	organ ballade AF	443	Soft rock AF
412	Ballade of the blues AF	444	Adagio rock AF
413	Old ballade AF	445	Hard rock AF
414	Rock ballade AF	446	Heavy metal 1AF

Digital piano instruction manual

447	Heavy metal 2AF	479	Arnoldus pop AF
RHYTHM&BLUES		480	Club dance AF
448	Chicago Blues AF	JAZZ&SWING	
449	Fast Gospel music AF	481	Buji dance AF
450	Traditional soul AF	482	Trendy pop AF
451	Rap AF	483	Jazz rock AF
452	Adagio Gospel AF	484	swaying 1AF
453	Bruce AF	485	Dixie AF
454	Adagio blues AF	486	Jazz samba AF
455	fox-trot AF	TRADITIONAL	
Disco		487	march AF
456	Passionate disco AF	488	American March AF
457	Double disco AF	489	samba AF
458	Double step dance AF	490	polk AF
459	Pop polka AF	491	Army polka AF
460	waltz 1AF	492	Tarantella AF
461	Pop waltz 1AF	493	Adagio waltz AF
462	Pop waltz 2AF	494	Army waltz AF
WORLD MUSIC		PINIST	
463	lae AF	495	piano song AF
464	Twisting dance 1AF	496	waltz 2 (piano) AF
465	Twisting dance 2AF	497	Guitar waltz AF
466	Miami pop AF	498	Piano accompaniment in 2/4 AF
467	Detroit AF	499	Piano accompaniment in 3/4 AF
468	reggae AF	500	Piano accompaniment in 4/4 AF
469	Remote place ziggy AF	8 BEAT	
470	mambo AF	501	8 Beat 1BF
471	Folk dance AF	502	8 Beat 2BF
472	Goes to Seth(French ballad) AF	503	8 Beat 3BF
DANCE		504	8 Beat rock BF
473	Indoor dance AF	505	8 Beat passion BF
474	Adagio foxtrot AF	506	8 Beats pop music 1BF
475	Vinenaar Waltz AF	507	8 Beats pop music 2BF
476	Salsa AF	BALLAD	
477	Disco AF	508	ballade 1BF
478	hiphope dance is popular AF	509	ballade 2BF

Digital piano instruction manual

510	Guitar ballade BF	542	Rock 2BF
511	organ ballade BF	543	Soft rock BF
512	Ballade of the blues BF	544	Adagio rock BF
513	Old ballade BF	545	Hard rockBF
514	Rock ballade BF	546	Heavy metal 1BF
515	Adagio ballade BF	547	Heavy metal 2BF
516	Popular ballade BF	RHYTHM&BLUES	
517	Electroacoustic ballade BF	548	Chicago Blues BF
518	Polk ballade BF	549	Fast Gospel music BF
16 BEAT		550	Traditional soul BF
519	16 Beat 1BF	551	Rap BF
520	16 Beat 2BF	552	Adagio Gospel BF
521	16 Beat 3BF	553	Bruce BF
522	16 Beat 4BF	554	Adagio blues BF
523	16Beat Fink BF	555	fox-trot BF
524	16Beat Pop music BF	Disco	
525	16Beat song BF	556	Passionate disco BF
LATIN		557	Double disco BF
526	Bossa nova 1BF	558	Double step dance BF
527	Guitars and bossanova BF	559	Pop polka BF
528	Pop the bossa nova BF	560	waltz 1BF
529	Tango BF	561	Pop waltz 1BF
530	cha-cha BF	562	Pop waltz 2BF
531	rumba BF	WORLD MUSIC	
532	deckers BF	563	lae BF
COUNTRY		564	Twisting dance 1BF
533	Country music BF	565	Twisting dance 2BF
534	Country rock BF	566	Miami pop BF
535	Rural slide BF	567	Detroit BF
536	Rural swaying BF	568	reggae BF
537	Country ballade BF	569	Remote place ziggy BF
538	Country waltzBF	570	mambo BF
ROCK R&B		571	Folk dance BF
539	'50s rock and roll BF	572	Goes to Seth(French ballad) BF
540	Heavy metal BF	DANCE	
541	Rock 1BF	573	Indoor dance BF

Digital piano instruction manual

574	Adagio foxtrot BF	587	march BF
575	Vinenaar Waltz BF	588	American March BF
576	Salsa BF	589	samba BF
577	Disco BF	590	polk BF
578	hiphops dance is popular BF	591	Army polka BF
579	Arnoldus pop BF	592	Tarantella BF
580	Club dance BF	593	Adagio waltz BF
JAZZ&SWING		594	Army waltz BF
581	Buji dance BF	PINIST	
582	Trendy pop BF	595	piano song BF
583	Jazz rock BF	596	waltz 2 (piano) BF
584	swaying 1BF	597	Guitar waltz BF
585	Dixie BF	598	Piano accompaniment in 2/4 BF
586	Jazz samba BF	599	Piano accompaniment in 3/4 BF
TRADITIONAL		600	Piano accompaniment in 4/4 BF

Digital piano instruction manual

NO.	SongName	036	Seasons
001	MinutWlz	037	YearsAgo
002	DJ Dance	038	Pigeons
003	Fountian	039	InnerVic
004	SpanGirl	040	Violin
005	SonataPn	041	Swan
006	SuperSng	042	Musettes
007	LittlBee	043	GypsyRnd
008	HorseRac	044	Serenade
009	Nocturne	045	Polka
010	TheSpain	046	SoilPull
011	BusyTran	047	Trout
012	Mexico	048	Send-off
013	MozartPn	049	March
014	Minuet	050	ForElise
015	Nifuma	051	SwaniRiv
016	Disco	052	France
017	FolkSong	053	Danube
018	Girl Sea	054	Hungary
019	LittStar	055	Spaceman
020	KindeGtn	056	Patriot
021	Wahaha	057	Cuckoo
022	Duck&Cik	058	SingKite
023	Humorous	059	TongChil
024	Joy Song	060	DoReMi
025	GoingHom	061	We Happy
026	Dove	062	LittlBee
027	Auldlang	063	Russia
028	Moonligh	064	Plaster
029	HapyBirh	065	Foison
030	PraiseSng	066	JingleBe
031	Dolly	067	PaperBoy
032	Market	068	Swallow
033	Family	069	New Year
034	A cradle	070	Edelweis
035	At Home	071	MoonRivr

Digital piano instruction manual

072	Beyer 10		
073	Beyer 20		
074	Beyer 30		
075	Beyer 40		
076	Beyer 50		
077	Beyer 60		
078	Beyer 70		
079	Beyer 71		
080	Beyer 72		

900 Timbre list

Number	Instrument		
PIANO		017	HAND ORGAN 1
001	GRAND PIANO 1	018	PERCHY ORGAN 1
002	BRIGHT PIANO 1	019	ROCK ORGAN
003	PIANO ELEC	020	CHURCH ORGAN 1
004	HONKY-TONK	021	REED ORGAN 1
005	E PIANO1	022	ACCORDN 1
006	E PIANO2	023	HARMONICA 1
007	GRAND HARPSICHORD	024	TANGO ACCORDN 1
008	CLAVI CHORD 1		
GLOCK		GUITAR	
009	CELESTA	025	GUITAR NYLON 1
010	GLOCKENSPIEL 1	026	GUITAR STEEL 1
011	MUSIC BOX 1	027	GUITAR JAZZ 1
012	VIBRAPHONE 1	028	GUITAR CLEAN 1
013	MARIMBA 1	029	GUITAR MUTED 1
014	XYLOPHONE 1	030	GUITAR OVRDRV
015	TUBULR BELLS 1	031	GUITAR DISTRT 1
016	DULCIMER 1	032	GUITAR HRMNX
ORGAN		BASS	

Digital piano instruction manual

033	ACOUSTIC BASS 1	060	MUTE TPT 1
034	FINGER BASS 1	061	FR HORN 1
035	ELECT BASS 1	062	BRASS SECT 1
036	FRETLS BASS	063	BRASS SYN 1
037	SLAP BASS 1	064	BRASS SYN 2
038	SLAP BASS 2	PIPE	
039	SYN BASS 1	065	SAX SOPRANO
040	SYN BASS 2	066	SAX ALTO 1
STRING		067	SAX TENOR 1
041	VIOLIN 1	068	SAX BTONE 1
042	VIOLA 1	069	OBOE 1
043	CELLO 1	070	ENG HORN 1
044	CONTRABASS 1	071	BASSON 1
045	STR TREM 1	072	CLARINET 1
046	STR PIZZ	WOODPIPE	
047	HARP 1	073	PICCOLO 1
048	TIMPANI 1	074	FLUTE 1
CONCERT		075	RECORDER 1
049	STRINGS 1	076	PAN FLUTE
050	STRINGS 2	077	BOTTLE BLOWN
051	STR SYN 1	078	SHAKHACHI
052	STR SYN 2	079	WHISTLE 1
053	CHOIR AAHS 1	080	OCARINA
054	VOICE OOHS 1	SYNTH PIPE	
055	VOICE SYN	081	SQR WAVE
056	ORCH HIT 1	082	SAW TOOTH
BRASS		083	CALLIOPE
057	TRUMPT 1	084	CHIFF
058	TROMBONE 1	085	CHARANG
059	TUBA 1	086	VOICE

Digital piano instruction manual

087	FIFTHS	113	TINKLE BELL
088	BASS LEAD	114	AGOGO
SYNTH VOICE		115	STEEL DRM
089	NEW AGE	116	WOODBK
090	WARM PAD	117	TAIKO DRM
091	POLY SYNTH	118	MLDY TOM
092	CHOIR PAD 1	119	SYNTH DRM
093	BOW GLASS 1	120	REVRS CYM
094	METAL PAD 1	EFFECT	
095	HALO PAD 1	121	GTR NOISE
096	SWEEP	122	BREATH 1
SYNTH EFFECT		123	SEASHORE
097	RAIN FX	124	BIRD TWEET 1
098	SNDTRK FX	125	TELEPHONE
099	CRYSTAL FX	126	HELICOPTER
100	ATMOSPH FX	127	APPLAUSE
101	BRIGHT FX	128	GUNSHOT 1
102	GOBLIN FX	Other sound	
103	ECHO FX	129	GRAND PIANO2
104	SCI-FI FX	130	GRAND PIANO3
FOLK SOUND		131	GRAND PIANO4
105	SITAR 1	132	GRAND PIANO /W 1
106	BANJO 1	133	GRAND PIANO /W 2
107	SHAMISEN 1	134	GRAND PIANO /W 3
108	KOTO 1	135	BRIGHTNESS PIANO 1
109	KALIMBA	136	BRIGHTNESS PIANO 2
110	BAGPIPE	137	BRIGHTNESS PIANO 3
111	FIDDLE	138	GRAND PIANO DARK 1
112	SHANAI	139	GRAND PIANO DARK 2
PERCUSSION		140	VELOCITY CROSS PIANO 1

Digital piano instruction manual

141	VELOCITY CROSS PIANO 2	171	SOFT HONKY-TONK 1
142	SOFT GRAND PIANO 1	172	SOFT HONKY-TONK 2
143	SOFT GRAND PIANO 2	173	VELOCITY CROSS HONKY-TONK
144	SOFT GRAND PIANO 3	174	DARK HONKY-TONK 1
145	STEREO BRIGHT PIANO	175	DARK HONKY-TONK 2
146	BRIGHT PIANO 2	176	HONKY-TONK /W 1
147	BRIGHT PIANO 3	177	HONKY-TONK /W 2
148	BRIGHT PIANO 4	178	HONKY-TONK /W 3
149	BRIGHT PIANO 5	179	HONKY-TONK /W 4
150	BRIGHT PIANO /W 1	180	SHORT HONKY-TONK 1
151	BRIGHT PIANO /W 2	181	SHORT HONKY-TONK 2
152	SOFT BRIGHT PIANO 1	182	E PIANO 1/W
153	SOFT BRIGHT PIANO 2	183	E PIANO 2/W
154	DEEP BRIGHT PIANO	184	E PIANO 3/W
155	VELOCITY CROSS BRIGHT PIANO	185	E PIANO 4/W
156	DETUNED E. PIANO 1	186	E PIANO 5/W
157	DETUNED E. PIANO 2	187	E PIANO 6/W
158	DETUNED E. PIANO 3	188	SOFT E. PIANO 1
159	BRIGHT E. PIANO 1	189	SOFT E. PIANO 2
160	BRIGHT E. PIANO 2	190	SOFT E. PIANO 3
161	BRIGHT E. PIANO 3	191	SOFT E. PIANO 4
162	BRIGHT E. PIANO 4	192	HARD E. PIANO 1
163	E. PIANO /W 1	193	HARD E. PIANO 2
164	E. PIANO /W 2	194	SHORT E. PIANO 1
165	E. PIANO /W 3	195	SHORT E. PIANO 2
166	E. PIANO /W 4	196	BRIGHTNESS E. P 1
167	DARK E. PIANO 1	197	BRIGHTNESS E. P 2
168	DARK E. PIANO 2	198	HARPSICHORD 1
169	DARK E. PIANO 3	199	HARPSICHORD 2
170	DARK E. PIANO 4	200	SOFT HARPSICHORD 1

Digital piano instruction manual

201	SOFT HARPSICHORD 2	231	DARK MUSIC BOX
202	BRIGHT HARPSICHORD 1	232	VIBRAPHONE 2
203	BRIGHT HARPSICHORD 2	233	VIBRAPHONE 3
204	DARK HARPSICHORD 1	234	SYN VIBRAPHONE
205	DARK HARPSICHORD 2	235	HARD VIBRAPHONE
206	HARD HARPSICHORD 1	236	VIBRAPHONE /W 1
207	HARD HARPSICHORD 2	237	VIBRAPHONE /W 2
208	CLAVI CHORD 2	238	VIBRAPHONE SOFT
209	CLAVI CHORD 3	239	MARIMBA 2
210	CLAVI /W	240	MARIMBA /W
211	BRIGHT CLAVI	241	DARK MARIMBA
212	DARK CLAVI	242	BRIGHT MARIMBA
213	PERCHY CLAVI	243	DUTED MARIMBA
214	BRIGHT CELESTA	244	DARK MARIMBA
215	SHORT CELESTA	245	XYLOPHONE 2
216	PERCHY CELESTA	246	XYLOPHONE 3
217	DUET CELESTA	247	VELOCITY CROSS XYLOPHONE
218	CELESTA HARMONIC	248	DISTRX XYLOPHONE
219	GLOCKENSPIEL 2	249	BRIGHT XYLOPHONE
220	GLOCKENSPIEL 3	250	FAST XYLOPHONE
221	GLOCKENSPIEL 4	251	SLOW XYLOPHONE
222	BRIGHT GLOCKENSPIEL	252	TUBULR BELLS 2
223	DARK GLOCKENSPIEL	253	TUBULR BELLS 3
224	GLOCKENSPIEL /W 1	254	TUBULR BELLS 4
225	GLOCKENSPIEL /W 2	255	SYN TUBULR BELLS
226	MUSIC BOX 2	256	TUBULR BELLS DARK
227	MUSIC BOX 3	257	DULCIMER 2
228	MUSIC BOX 4	258	DULCIMER 3
229	TOY MUSIC BOX	259	SANTUR
230	BRIGHT MUSIC BOX	260	HAND ORGAN 2

Digital piano instruction manual

261	HAND ORGAN 3	291	SOFT CHURCH ORGAN
262	SOFT HAND ORGAN	292	REED ORGAN 2
263	BRIGHT SOFT HAMND ORGAN	293	REED ORGAN 3
264	HAMND ORGAN DETUNED	294	REED ORGAN 4
265	PERCHY ORGAN 2	295	REED ORGAN 5
266	PERCHY ORGAN 3	296	BRIGHT REED ORGAN
267	BRIGHT PERCHY ORGAN	297	DARK REED ORGAN
268	DISTRX PERCHY ORGAN	298	REED ORGAN /W
269	ROTART ORGAN	299	FAST REED ORGAN
270	SLOW ROTART ORGAN	300	SLOW REED ORGAN
271	1960 ROCK ORGAN	301	SOFT REED ORGAN
272	1980 ROCK ORGAN	302	HARD REED ORGAN
273	BRIGHT ROCK ORGAN	303	JAZZ REED ORGAN
274	DARK ROCK ORGAN	304	ACCORDN 2
275	SOFT ROCK ORGAN	305	ACCORDN 3
276	CHURCH ORGAN 2	306	ACCORDN 4
277	CHURCH ORGAN 3	307	ACCORDN 5
278	CHURCH ORGAN 4	308	DISTRX ACCORDN
279	CHURCH ORGAN 5	309	BRIGHT ACCORDN
280	CHURCH ORGAN 6	310	ACCORDN HARMONIC
281	CHURCH ORGAN /W 1	311	ROCK ACCORDN
282	CHURCH ORGAN /W 2	312	SWEET ACCORDN
283	BIRGHT CHURCH ORGAN 1	313	DARK ACCORDN
284	BIRGHT CHURCH ORGAN 2	314	FAST ACCORDN
285	DARK CHURCH ORGAN 1	315	SLOW ACCORDN
286	DARK CHURCH ORGAN 2	316	HARMONICA 2
287	SOUL CHURCH ORGAN	317	HARMONICA 3
288	CHURCH ORGAN HARMONIC	318	HARMONICA 4
289	CHURCH ORGAN SLOW	319	HARMONICA 5
290	CHURCH ORGAN FAST	320	SWEET HARMONICA

Digital piano instruction manual

321	DISTRH HARMONICA	351	BRIGHT GUITAR NYLON
322	SLOW HARMONICA	352	DARK GUITAR NYLON
323	FAST HARMONICA	353	GUITAR NYLON HARMONIC 1
324	BRIGHT HARMONICA	354	GUITAR NYLON HARMONIC 2
325	DARK HARMONICA	355	GUITAR NYLON /W 1
326	SOFT HARMONICA	356	GUITAR NYLON /W 2
327	HARMONICA /W 1	357	GUITAR NYLON FAST
328	HARMONICA /W 2	358	GUITAR NYLON SLOW
329	HARMONICA MUTED	359	HARD GUITAR NYLON
330	TANGO ACCORDN 2	360	SOFT GUITAR NYLON
331	TANGO ACCORDN 3	361	GUITAR STEEL 2
332	1960 TANGO ACCORDN	362	GUITAR STEEL 3
333	1980 TANGO ACCORDN	363	GUITAR STEEL 4
334	BRIGHT TANGO ACCORDN	364	VELOCITY CROSS GUITAR STEEL
335	DARK TANGO ACCORDN	365	DARK GUITAR STEEL
336	SOFT TANGO ACCORDN	366	BRIGHT GUITAR STEEL
337	HARD TANGO ACCORDN	367	GUITAR STEEL HARMONIC 1
338	TANGO ACCORDN /W 1	368	GUITAR STEEL HARMONIC 2
339	TANGO ACCORDN /W 2	369	HARD GUITAR STEEL
340	SLOW TANGO ACCORDN	370	SOFT GUITAR STEEL
341	FAST TANGO ACCORDN	371	FAST GUITAR STEEL
342	GUITAR NYLON 2	372	SLOW GUITAR STEEL
343	GUITAR NYLON 3	373	VELOCITY GUITAR STEEL
344	GUITAR NYLON 4	374	GUITAR STEEL RELEASE
345	GUITAR NYLON 5	375	GUITAR STEEL /W 1
346	GUITAR NYLON 6	376	GUITAR STEEL /W 2
347	GUITAR NYLON 7	377	GUITAR JAZZ 2
348	GUITAR NYLON RELEASE	378	GUITAR JAZZ 3
349	VELOCITY CROSS GUITAR	379	GUITAR JAZZ 4
350	DETUNED GUITAR NYLON	380	GUITAR JAZZ 5

Digital piano instruction manual

381	DARK GUITAR JAZZ	411	GUITAR MUTED HARMONIC
382	BRIGHT GUITAR JAZZ	412	GUITAR MUTED RELEASE
383	SOFT GUITAR JAZZ	413	GUITAR MUTED CHORUS
384	HARD GUITAR JAZZ	414	GUITAR MUTED HARD
385	GUITAR JAZZ VELOCITY	415	GUITAR MUTED SOFT
386	GUITAR JAZZ RELEASE	416	GUITAR MUTED /W 1
387	GUITAR JAZZ HARMONIC	417	GUITAR MUTED /W 2
388	SOFT GUITAR JAZZ	418	GUITAR OVRDRV 2
389	GUITAR JAZZ /W 1	419	GUITAR OVRDRV 3
390	GUITAR JAZZ /W 2	420	GUITAR OVRDRV 4
391	GUITAR CLEAN 2	421	FUNK GUITAR
392	GUITAR CLEAN 3	422	GUITAR OVRDRV HARMONIC
393	GUITAR CLEAN 4	423	BRIGHT GUITAR OVRDRV
394	GUITAR CLEAN 5	424	DARK GUITAR OVRDRV
395	VELOCITY CLEAN GUITAR	425	GUITAR OVRDRV RELEASE
396	MUTED CLEAN GUITAR	426	HARD GUITAR OVRDRV
397	BRIGHT CLEAN GUITAR	427	SOFT GUITAR OVRDRV
398	CLEAN GUITAR HARMONIC	428	GUITAR OVRDRV /W 1
399	CLEAN GUITAR /W 1	429	GUITAR OVRDRV /W 2
400	CLEAN GUITAR /W 2	430	GUITAR DISTRT 2
401	SOFT CLEAN GUITAR	431	GUITAR DISTRT 3
402	FAST CLEAN GUITAR	432	GUITAR DISTRT 4
403	SLOW CLEAN GUITAR	433	GUITAR DISTRT 5
404	CLEAN GUITAR RELEASE	434	GUITAR DISTRT 6
405	GUITAR MUTED 2	435	GUITAR DISTRT HARMONIC
406	GUITAR MUTED 3	436	GUITAR DISTRT RELEASE
407	GUITAR MUTED 4	437	BRIGHT GUITAR DISTRT
408	GUITAR MUTED 5	438	DARK GUITAR DISTRT
409	BRIGHT GUITAR MUTED	439	SOFT GUITAR DISTRT
410	DARK GUITAR MUTED	440	HARMONIC GUITAR DISTRT

Digital piano instruction manual

441	HARD GUITAR DISTRT	471	ELECT BASS 2
442	GUITAR DISTRT /W 1	472	ELECT BASS 3
443	GUITAR DISTRT /W 2	473	ELECT BASS 4
444	SOFT GUITAR HRMNX	474	ELECT BASS 5
445	HARD GUITAR HRMNX	475	ELECT BASS 6
446	BRIGHT GUITAR HRMNX	476	ELECT BASS RELEASE
447	DARK GUITAR HRMNX	477	ELECT BASS HARMONIC
448	FAST GUITAR HRMNX	478	SOFT ELECT BASS
449	SLOW GUITAR HRMNX	479	FAST ELECT BASS
450	GUITAR HRMNX RELEASE	480	PICK BASS
451	GUITAR HRMNX /W 1	481	BRIGHT ELECT BASS 1
452	GUITAR HRMNX /W 2	482	BRIGHT ELECT BASS 2
453	ACOUSTIC BASS 2	483	DARK ELECT BASS 1
454	ACOUSTIC BASS 3	484	DARK ELECT BASS 2
455	ACOUSTIC BASS 4	485	SOFT FRETLS BASS
456	ACOUSTIC BASS 5	486	FAST FRETLS BASS
457	DETUNED BASS	487	FRETLS BASS RELEASE
458	BASS AND FILTER	488	FRETLS BASS HARMONIC
459	SOFT BASS	489	FRETLESS BASS
460	BASS & RELEASE	490	FAST FRETLESS BASS
461	FAST BASS	491	SLAP BASS 3
462	SLOW BASS	492	SLAP BASS 4
463	BRIGHT BASS	493	SLAP BASS 5
464	DARK BASS	494	SLAP BASS 6
465	BASS /W 1	495	BRIGHT SLAP BASS 1
466	BASS /W 2	496	BRIGHT SLAP BASS 2
467	FINGER BASS 2	497	DARK SLAP BASS 1
468	FINGER BASS HARMONIC	498	DARK SLAP BASS 2
469	SOFT FINGER BASS	499	SOFT SLAP BASS 1
470	FINGER BASS RELEASE	500	SOFT SLAP BASS 2

Digital piano instruction manual

501	FAST SLAP BASS 1	531	VIOLIN 4
502	FAST SLAP BASS 2	532	VIOLIN 5
503	SLOW SLAP BASS 1	533	VIOLIN ENSEMBLE 1
504	SLOW SLAP BASS 2	534	VIOLIN ENSEMBLE 2
505	SLAP BASS HARMONIC 1	535	SLOW VIOLIN
506	SLAP BASS HARMONIC 2	536	FAST VOLIN
507	SLAP BASS RELEASE 1	537	VOLIN /W
508	SLAP BASS RELEASE 2	538	BRIGHT VOLIN
509	SYN BASS 3	539	DARK VOLIN
510	SYN BASS 4	540	SOFT VOLIN
511	SYN BASS 5	541	VIOLA 2
512	SYN BASS 6	542	VIOLA 3
513	SYN BASS HARMONIC 1	543	VIOLA 4
514	SYN BASS HARMONIC 2	544	DARK VIOLA
515	FAST SYN BASS 1	545	HARD VIOLA
516	FAST SYN BASS 2	546	VIOLA ENSEMBLE
517	SOFT SYN BASS 1	547	SLOW VIOLA
518	SOFT SYN BASS 2	548	VIOLA VIBRATO
519	SLOW SYN BASS 1	549	VIOLA /W
520	SLOW SYN BASS 2	550	BRIGHT VIOLA
521	FAST SYN BASS 1	551	FAST VIOLA
522	FAST SYN BASS 2	552	SOFT VIOLA
523	BRIGHT SYN BASS 1	553	CELLO 2
524	BRIGHT SYN BASS 2	554	CELLO 3
525	DARK SYN BASS 1	555	CELLO 4
526	DARK SYN BASS 2	556	DARK CELLO
527	SYN BASS RELEASE 1	557	HARD CELLO
528	SYN BASS RELEASE 2	558	CELLO ENSEMBLE 1
529	VIOLIN 2	559	CELLO ENSEMBLE 2
530	VIOLIN 3	560	SLOW CELLO

Digital piano instruction manual

561	FAST CELLO	591	HARP 2
562	CELLO /W	592	HARP 3
563	BRIGHT CELLO	593	HARP 4
564	SOFT CELLO	594	HARP /W 1
565	CONTRABASS 2	595	HARP /W 2
566	CONTRABASS 3	596	BRIGHT HARP 1
567	CONTRABASS 4	597	BRIGHT HARP 2
568	CONTRA BASS ENSEMBLE 1	598	DARK HARP 1
569	CONTRA BASS ENSEMBLE 2	599	DARK HARP 2
570	CONTRA BASS ENSEMBLE 3	600	HARP HARMONIC
571	CONTRA BASS ENSEMBLE 4	601	SOFT HARMONIC
572	DARK CONTRA BASS	602	TIMPANI 2
573	CONTRA BASS VIBRATO	603	TIMPANI 3
574	STR TREM 2	604	TIMPANI 4
575	STR TREM 3	605	TIMPANI /W 1
576	STR TREM 4	606	TIMPANI /W 2
577	STR TREM SLOW	607	BRIGHT TIMPANI
578	STR TREM FAST	608	DARK TIMPANI
579	STR TREM /W	609	STRINGS 3
580	BRIGHT STR TREM	610	STRINGS 4
581	DARK STR TREM	611	STRINGS 5
582	SOFT STR TREM	612	STRINGS 6
583	BRIGHT STR PIZZ	613	SLOW STRINGS 1
584	DARK STR PIZZ	614	SLOW STRINGS 2
585	STR PIZZ HARMONIC	615	FAST STRINGS 1
586	STR PIZZ /W	616	FAST STRINGS 2
587	FAST STR PIZZ	617	DARK STINGS 1
588	SLOW STR PIZZ	618	DARK STINGS 2
589	SOFT STR PIZZ	619	BRIGHT STINGS 1
590	METAL STR PIZZ	620	BRIGHT STINGS 2

Digital piano instruction manual

621	RESONANT STRINGS	651	WARM VOICE OOHS 2
622	SFORZATO STRINGS	652	VOICE OOHS /W
623	STR SYN 3	653	BRIGHT VOICE OOHS
624	STR SYN 4	654	DARK VOICE OOHS
625	STR SYN 5	655	FAST VOICE OOHS
626	STR SYN 6	656	SLOW VOICE OOHS
627	1960 STRINGS	657	VOICE SYN HARMONIC
628	1970 STRINGS	658	SLOW VOICE SYN
629	SLOW STRINGS 1	659	FAST VOICE SYN
630	SLOW STRINGS 2	660	BRIGHT VOICE SYN
631	FAST STRINGS 1	661	ELE. VOICE SYN
632	FAST STRINGS 2	662	ORCH HIT 2
633	LEGATO STRINGS 1	663	ORCH HIT /W
634	LEGATO STRINGS 2	664	BRIGHT ORCH HIT
635	BRIGHT LEGATO STRINGS	665	ORCH HIT HARMONIC
636	DARK LEGATO STRINGS	666	SLOW ORCH HIT
637	CHOIR AAHS 2	667	FAST ORCH HIT
638	CHOIR AAHS 3	668	DARK ORCH HIT
639	CHOIR AAHS 4	669	SOFT ORCH HIT
640	CHOIR AAHS 5	670	TRUMPT 2
641	WARM CHOIR AAHS	671	TRUMPT 3
642	CHOIR AAHS /W 1	672	TRUMPT 4
643	CHOIR AAHS /W 2	673	TRUMPT 5
644	CHOIR AAHS HARMONIC	674	TRUMPT 6
645	BRIGHT CHOIR AAHS	675	TRUMPT 7
646	DARK CHOIR AAHS	676	DARK TRUMPT
647	FAST CHOIR AAHS	677	BRIGHT TRUMPT
648	SLOW CHOIR AAHS	678	SWEET TRUMPT
649	VOICE OOHS 2	679	MUTE TRUMPT
650	WARM VOICE OOHS 1	680	TRUMPT /W 1

Digital piano instruction manual

681	TRUMPT /W2	711	FR HORN 3
682	TROMBONE 2	712	FR HORN 4
683	TROMBONE 3	713	FR HORN 5
684	TROMBONE 4	714	FR HORN 6
685	TROMBONE 5	715	SWEET FR HORN
686	TROMBONE 6	716	SLOW FR HORN
687	TROMBONE 7	717	FAST FR HORN
688	DARK TROMBONE	718	BRIGHT FR HORN
689	BRIGHT TROMBONE	719	DARK FR HORN
690	SLOW BRIGHT TROMBONE	720	BRASS SECT 2
691	MUTE TROMBONE	721	BRASS SECT 3
692	TROMBONE /W	722	BRASS SECT 4
693	TUBA 2	723	BRASS SECT 5
694	TUBA 3	724	BRASS SECT 6
695	TUBA 4	725	DARK BRASS SECT
696	TUBA 5	726	BRASS SECT WELL
697	TUBA 6	727	BRIGHT BRASS SECT
698	SOFT TUBA	728	FAST BRASS SECT
699	SLOW TUBA	729	SLOW BRASS SECT
700	TUBA SOLO	730	BRASS SECT /W
701	TUBA /W	731	BRASS SYN 3
702	BRIGHT TUBA	732	BRASS SYN 4
703	DARK TUBA	733	BRASS SYN 5
704	MUTE TUBA	734	BRASS SYN 6
705	MUTE TPT 2	735	BRASS SYN 7
706	DARK MUTE TPT	736	SOFT BRASS SYN
707	BRIGHT MUTE TPT	737	SFORZATO BRASS SYN
708	MUTE TPT /W	738	DARK BRASS SYN
709	SWEET MUTE TPT	739	BRIGHT BRASS SYN
710	FR HORN 2	740	WELL BRASS SYN

Digital piano instruction manual

741	MUTE BRASS SYN	771	SAX BTONE 4
742	SWEET BRASS SYN	772	SAX BTONE 5
743	HOMONIC BRASS SYN	773	SAX BTONE WELL
744	SLOW BRASS SYN	774	MUTE SAX BTONE
745	FAST BRASS SYN	775	SWEET SAX BTONE
746	SAX ALTO 2	776	DARK SAX BTONE
747	SAX ALTO 3	777	OBOE 2
748	SAX ALTO 4	778	OBOE 3
749	SAX ALTO 5	779	OBOE 4
750	SAX ALTO 6	780	OBOE 5
751	SAX ALTO BRIGHT	781	SWEET OBOE
752	SAX ALTO MUTE	782	OBOE WELL
753	SAX ALTO /W	783	BRIGHT OBOE
754	SOFT SAX ALTO	784	DARK OBOE
755	SLOW SAX ALTO	785	MUTE OBOE
756	SWEET SAX ALTO	786	ENG HORN 2
757	SAX TENOR 2	787	ENG HORN 3
758	SAX TENOR 3	788	ENG HORN 4
759	SAX TENOR 4	789	ENG HORN 5
760	SAX TENOR 5	790	ENG HORN 6
761	SAX TENOR 6	791	ANALOG ENG HORN
762	SWEET SAX TENOR	792	WOODWINDS
763	DARK SAX TENOR	793	BASSON 2
764	SUPER SAX TENOR	794	BASSON 3
765	SAX TENOR /W 1	795	BASSON 4
766	SAX TENOR /W 2	796	BASSON 5
767	SAX TENOR HARMONIC	797	BRIGHT BASSON
768	SAX TENOR BRIGHT	798	DARK BASSON
769	SAX BTONE 2	799	BASSON WELL
770	SAX BTONE 3	800	BRIGHT BASSON

15: Single-finger chord schedule

YAMAHA One-finger chord Table

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

16. Attachment 1:

Chord Type Root	M	m	7	m7	dim7	M7	m7-5	dim
C								
C#(Db)								
D								
(Db)/Eb								
E								
F								
F#(Gb)								
G								
(Gb)/Ab								
A								
(A#)/Bb								
B								

Chord Type Root	aug	sus4	7sus4	m add9	mM7	7-5	add9
C							
C#(D)							
D							
(D#)/E							
E							
F							
F#(G)							
G							
(G#)/A							
A							
(A#)/B							
B							

17.Attachment 2:

Diagram of 88 keyboard drum group

A 1	A # 1	B 1	C 2	C # 2	D 2	D # 2	E 2
F 2	F # 2	G 2	G # 2	A 2	A # 2	B 2	C 3
C # 3	D 3	D # 3	E 3	F 3	F # 3	G 3	G # 3
A 3	A # 3	B 3	C 4	C # 4	D 4	D # 4	E 4
F 4	F # 4	G 4	G # 4	A 4	A # 4	B 4	C 5
C # 5	D 5	D # 5	E 5	F 5	F # 5	G 5	G # 5
A 5	A # 5	B 5	C 6	C # 6	D 6	D # 6	E 6
F 6	F # 6	G 6	G # 6	A 6	A # 6	B 6	C 7
C # 7	D 7	D # 7	E 7	F 7	F # 7	G 7	G # 7
A 7	A # 7	B 7	C 8	C # 8	D 8	D # 8	E 8
F 8	F # 8	G 8	G # 8	A 8	A # 8	B 8	C 9

18.Attachment 3:(MIDI message)

Function		Midi Out	Midi In	Remarks	
Basic	Default	1	1 ~ 16		
	Channel	Changed	1 ~ 16	1 ~ 16	
Mode		Mode3	Mode3		
Note Number		21 ~ 109	21 ~ 109		
Velocity	Note On	V = 1 ~ 127	V = 1 ~ 127		
	Note Off	8nH V= 64	9nH V= 0 , 8nH V=XX	XX: 无关	
Pitch Bend		X	O		
Control	1	X	O	Modulation	
	7	X	O	Volume	
	10	X	O	Pan	
	11	X	O	Expression	
	Change	64	O	O	Sustain
		67	O	O	Soft Pedal
		121	X	O	Reset All Controller
123		X	O	All Sound Off	
Program Change		0 ~ 127	0 ~ 127		
Aux	Local On/Off	X	X		
Messages	All notes Off	X	O		
	Active Sense	X	O		
	Reset	X	X		

Fault	Possible causes and countermeasures
When the power is turned on or off, there is a noise.	This is a normal phenomenon, indicating that the current into the machine.
Noise is generated when using mobile phones.	Using a mobile phone near a piano gives off radiation. To avoid this, turn off the mobile phone or use it away from the device.
When the keyboard is played and the music is played, there is no sound.	Verify that the phone/OUTPUT jack is connected to other devices. If headphones are plugged into the jack at the moment, no sound is emitted.
The selected timbre sounds abnormally or is too low in volume	Make sure the following Settings are appropriate: master volume, dual tone balance.
A vocal abnormality of timbre or rhythm.	The AC voltage is low.
Some timbre distortion.	The volume knob is too large, should be less than 3/4 of the position.
Abnormal pronunciation of accompaniment.	Make sure the accompaniment volume is set to the appropriate level.
All sounds seem to be pronounced, or seem to be cut off.	The piano has a maximum of 64 simultaneous sounds. If the two-tone mode is in use and the accompaniment or piece is playing, some notes/sounds in the accompaniment or piece will be default.
Under the same timbre, the tone quality of notes is different.	This is a normal phenomenon. Wooden machines use AWM sound sources, which sample recordings in segments across the entire key field, so that the quality of the two notes is slightly different.