 


DIGITAL PIANO USER MANUAL

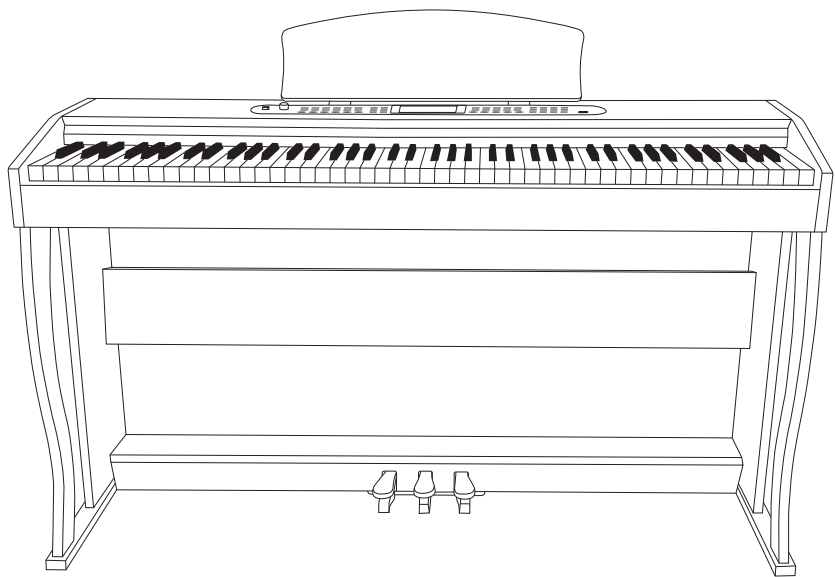



List

Function introduction	1
Installation guide	2
Panel illustration	3
Functional operation instructions	4
Tones table	10
Demo songs table	16
Rhythms table	18
Chord table	26
Product maintenance	29
Safety precautions	30



Function Introduction

Thank you for purchasing this digital piano from our company. This product is elegant and exquisite, and is a perfect combination of contemporary new electronic technology and traditional musical instruments.

- Before using this instrument, you must read this manual in detail.

Instrument Parameters

Keys: 88 keys hammer action keyboard	Output power: $> 4\Omega/10W \times 2$
Style: Upright piano	Power supply parameters: AC 100-240V~50/60HZ 1.5A DC 15V/3A 

Functional introduction:

- 88-key hammer action keyboard
- 800 tones, 800 rhythms, 200 demo songs
- LCD display
- Master volume control key
- Chord volume control key
- Speed control key
- Transpose control
- Fine-tuning control
- Mode selection key (tone, rhythm)
- Record, playback function
- Single-finger chord, multi-finger chord, integrated chord, chord off
- Demo song
- Dual keyboard function, dual tone function
- Start/stop, SYNC, fill in A, fill in B function keys
- Sustain pedal, Delay pedal, Soft pedal
- 3 teaching functions, 5 pop music, 5 tone direct selections
- Built-in high-fidelity stereo speakers
- External power input, external audio input/output, dual headphone jacks
- USB direct plug to play MP3 songs
- USB or MIDI data connection interaction

Notice!

- This product is an electronic instrument product. It is a normal phenomenon that there is a little current sound in the loudspeaker or headset after being electrified.

 
Please stay away from all RF interference sources such as "radios, televisions, antenna receivers, routers, refrigerators, electrical appliances with motors, etc."



Installation guide




Notice!

- In order for you to use this equipment correctly, please install it according to the installation guide and carefully read the "Safety precautions" in the user's Manual before using it.
- This product needs to be installed by adults, do not let minors install independently!

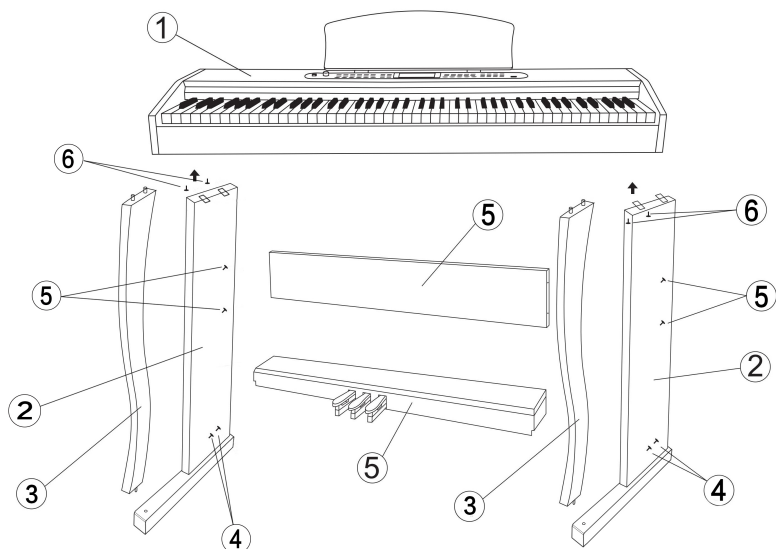

- ① Piano cabinet
- ② Left/right foot assembly
- ③ Left/right bent leg support wooden plugs 6PCS
- ④ Pedal assembly screws CM6x60MM 4PCS
- ⑤ Back panel screws CA5x50MM 4PCS
- ⑥ Plum blossom screw M6 x12MM 4PCS

  
 
Screw illustration






Panel illustration

  Function panel

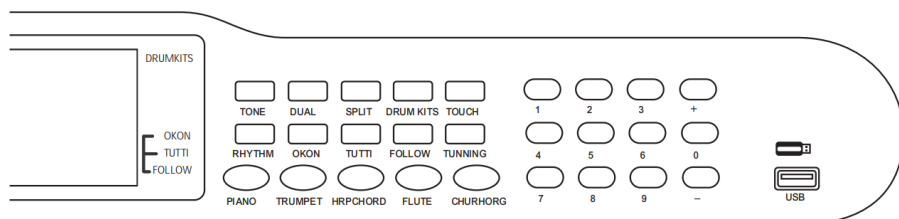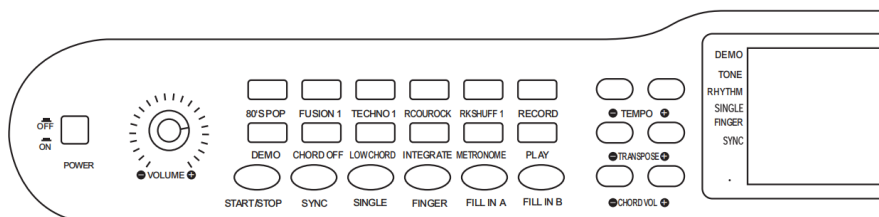

Jack Panel

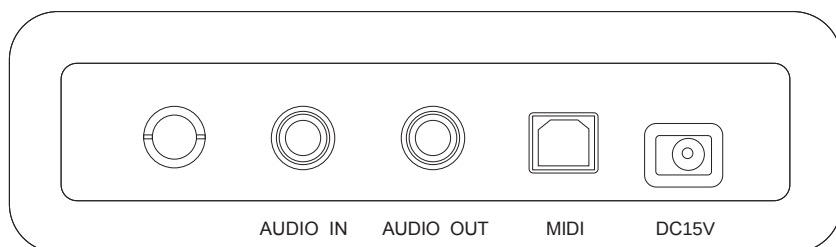 



Functional Operation Instructions

I. Demo Songs

1. Demo All:

- ◆ Press the demo song button for the first time to enter the continuous singing mode, and press the demo song for the second time to play the next song
- ◆ After entering the continuous singing mode, start playing from the current song, or use the number keys to directly select
- ◆ After the song is played, continue to play the next song, and play all songs in a loop
- ◆ In the continuous singing mode, automatically enter the song selection mode, and exit the continuous singing mode to return to the tone selection mode
- ◆ Press the **【tone key】** while playing a song to temporarily switch to the tone selection mode, and return to the song selection mode in 3 seconds

II. Rhythm

1. Enable/Stop:

- ◆ Press the **【Start/Stop key】** for the first time to start playing the rhythm, and press the **【Start/Stop key】** for the second time to stop playing the rhythm
- ◆ Exit this mode in teaching, record, playback, programming, editing, playback, metronome, demo song and other modes

2. Interlude 1 Fill In A:

- ◆ **【Insert A key】** only works when playing the rhythm
- ◆ Interlude: During the rhythm playing, press **【Insert A Key】** to add a fill function to the rhythm. When the rhythm finishes playing the bar, insert a fill interlude; Rhythm → Fill in A → Rhythm
- ◆ Press and hold **【Insert A Key】** to play Interlude 1 continuously.

3. Interlude 2 Fill In B:

- ◆ **【Insert B Key】** only works when the rhythm is playing
 - ◆ Interlude: During the rhythm playing, press **【Insert B Key】** to add a fill function to the rhythm. When the rhythm finishes playing the bar, insert a fill interlude: Rhythm → Fill in B → Rhythm
- Press and hold **【Insert B Key】** to play Interlude 2 continuously

4. Sync:

- ◆ Press **【Sync Key】** for the first time to enter the Sync mode, and press **【Sync Key】** for the second time to exit the Sync mode
- ◆ When entering the Sync mode, stop playing the rhythm, and then press the first 19 keys to automatically play the selected rhythm (chord)
- ◆ For the chord synchronization part, please refer to the single fingering accompaniment or multi-fingering accompaniment instructions

III. Chord volume control, speed, transposition, fine-tuning control

1. Chord Volume Control:

- ◆ Use **【Chord Volume + Key】** and **【Chord Volume - Key】** to control the chord volume. Pressing **【Chord Volume + Key】** means the chord volume



Functional Operation Instructions

will increase, and pressing **【Chord Volume - Key】** means the chord volume will decrease.

◆The chord volume control has 16 sections (1~16), and the default value after power-on is in the 16th section

◆Press and hold **【Chord Volume + Key】** or **【Chord Volume - Key】** for more than 1 second to continuously increase/decrease the chord volume

◆Press and hold **【Chord Volume + Key】** and **【Chord Volume - Key】** at the same time, and the chord volume returns to the default value

◆The chord volume key can also control the volume of the demonstration song

◆After entering Sleep, the chord volume returns to the default value

2. Tempo Control:

◆Use **【Tempo + Key】** and **【Tempo - Key】** to control the speed. Pressing **【Tempo + Key】** means the speed increases, and pressing **【Tempo - Key】** means the speed decreases

◆The tempo control has 270 sections (30~300), and the default value after power-on is in the 90th section (Tempo=120)

◆Press and hold **【Tempo + Key】** or **【Tempo - Key】** for more than 1 second to continuously increase/decrease the speed

◆Press and hold **【Tempo + Key】** and **【Tempo - Key】** at the same time, and the speed returns to the default value

◆When playing the selected song, the tempo of the song will be the main one, regardless of the set tempo

◆When playing the selected rhythm, the set tempo will be the main one

◆After entering Sleep, the speed returns to the default value (Tempo=120)

3. Transpose Control:

◆Use **【Transpose + Key】** and **【Transpose - Key】** to control the transpose. Pressing **【Transpose + Key】** means the transpose increases upwards, and pressing **【Transpose - Key】** means the transpose decreases downwards

◆There are 13 sections (-6~6) for transpose control, and the default value is the 7th section after power-on

◆Press **【Transpose + Key】** or **【Transpose - Key】** for more than 1 second to continuously increase/decrease the transpose

◆Press **【Transpose + Key】** and **【Transpose - Key】** at the same time, and the transpose value returns to the default value

◆The chord pitch will also change with the transpose value

◆After entering Sleep, the transpose value returns to the default value

◆After pressing **【Transpose Clear Key】**, the transpose value returns to the default value

4. Tuning Control:

Use **【Fine Adjust + Key】** and **【Fine Adjust - Key】** to control fine adjustment. Pressing **【Fine Adjust + Key】** means fine adjustment will



Functional Operation Instructions

increase, and pressing **【Fine Adjust - Key】** means fine adjustment will decrease

- ◆ There are 199 segments (-99~99) for fine adjustment control. The default value after power-on is the 100th segment

- ◆ Press **【Fine Adjust + Key】** or **【Fine Adjust - Key】** for more than 1 second to continuously increase/decrease fine adjustment

- ◆ Press **【Fine Adjust + Key】** and **【Fine Adjust - Key】** at the same time, and the fine adjustment value will return to the default value

- ◆ After entering Sleep, the fine adjustment will return to the default value

- ◆ After pressing **【Fine Adjust Clear Key】**, the fine adjustment value will return to the default value

IV. Mode Selection

1. Numerical Coding:

- ◆ There are 12 buttons for digital selection from **【0】** to **【9】**, **【+】** and **【-】** in sequence.

- ◆ If the tone mode/rhythm mode/song mode are not selected, the default value after power-on is tone mode.

- ◆ When digital selection is performed, if the number pressed exceeds the maximum number of tones, rhythms or songs, the original value will be maintained.

2. Tone:

- ◆ After pressing the **【Tone Key】**, the digital selection area can be used to select the tone.

- ◆ The digital selection area inputs numbers from 0 to 479 (139). If the input range is not within this range, the input is invalid.

3. Rhythm:

- ◆ After pressing the **【Rhythm Key】**, the digital selection area can be used to select the rhythm.

- ◆ The input number in the digital selection area is from 0 to 199. If the input range is not within this range, the input is invalid

4. Single-finger chord:

- ◆ Press the **【Single Finger Key】** for the first time to enter the single-finger chord mode, and press the **【Single Finger Key】** for the second time to exit the single-finger chord mode

- ◆ **【Single Finger Key】** only works in rhythm and general mode.

- ◆ When playing the rhythm, press the **【Single Finger Key】** and press the single-finger fingering in the range of keys A1~F4#, and you can hear the corresponding chord accompaniment sound

- ◆ For detailed fingering of single-finger fingering accompaniment, please refer to the attached single-finger chord table

- ◆ Single-finger fingering can be used with rhythm/chord/synchronization

5. Finger chord:

- ◆ Press the **【Multi-finger Key】** for the first time to enter the multi-finger chord mode, and press the **【Multi-finger Key】** for the second time to exit



Functional Operation Instructions

the multi-finger chord mode

- ◆ **【Multi-finger Key】** only works in rhythm and general mode
- ◆ When playing the rhythm, press the **【Multi-Finger Key】** and press the multi-finger fingering within the range of keys A1-F4#, and you can hear the corresponding chord accompaniment sound
- ◆ For detailed fingering of multi-finger fingering accompaniment, please refer to the attached multi-finger chord table
- ◆ Multi-finger fingering can be used with rhythm/chord/synchronization

6. Comprehensive chords:

- ◆ Press the **【Comprehensive Chord Key】** for the first time to enter the comprehensive chord mode, and press the **【Comprehensive Chord Key】** for the second time to exit the comprehensive chord mode
- ◆ **【Comprehensive Chord Key】** only works in Rhythm and General Mode
- ◆ When playing rhythm, press **【Comprehensive Chord Key】** and press multi-finger fingering in the range of keys A1-F4#, you can hear the corresponding chord accompaniment sound. If you do not press multi-finger chord fingering, the chord of single-finger chord fingering will be played
- ◆ For detailed fingering of comprehensive fingering accompaniment, please refer to the single-finger chord table and multi-finger chord table in the attachment
- ◆ Comprehensive fingering can be used with rhythm/chord/synchronization.

7. Low Chord:

- ◆ Change the Bass tone in the chord to Piano tone

8. Chord Off:

- ◆ Turn off single-finger chord, multi-finger chord, and comprehensive chord

V. Recording

1. Record:

- ◆ Press **【Record Key】** for the first time to enter the recording mode and clear the last record; press **【Record Key】** for the second time to exit the recording mode
- ◆ Press any key or panel drum in the recording mode to start recording.
- ◆ The maximum number of recordings is 700. When the number is full, you cannot continue to record the next note. When recording, you can press the **【Play】** button at any time to play the recorded notes or drum sounds.

2. Record Play:

- ◆ Press the **【Play】** button for the first time to play the recorded notes or drum sounds. Press the **【Play】** button for the second time to stop playing.
- ◆ Press the **【Play】** button to exit the recording mode.
- ◆ When playing, the keys and panel drums are invalid.
- ◆ If there is no recorded value before, no action will occur when pressing the **【Play】** button.



Functional Operation Instructions

VI. Metronome

◆ Press the **【Metronome】** button to play the beat 1/4 beat → 2/4 beat → 3/4 beat → 4/4 beat → stop → beat 1/4 beat..., the default value of Tempo is 120.

◆ There are 4 changes in the metronome sound, the sequence is 1/4 beat → 2/4 beat → 3/4 beat → 4/4 beat

VII. Effect changes

1. Tone changes:

◆ Sustain: prolong the time when the key sound ends

◆ Sustain pedal: prolong the time when the key sound ends. When the machine is turned on, it will detect whether the pedal is normally open or normally closed

◆ Soft pedal: reduce the volume of the key sound

◆ Delay pedal: prolong the time when the key sound ends

◆ Note: This function is configured according to the actual model of the piano

2. Velocity On/Off:

◆ This button function is sequential. Pressing this button is velocity ON/velocity OFF sequence. The default value is ON when powered on.

3. Split:

◆ Press the **【Dual Keyboard Key】** for the first time to start the dual keyboard function, and press the **【Dual Keyboard Key】** for the second time to cancel the dual keyboard function

◆ When the dual keyboard function is activated, the scale of keys A1~B4 will be played as the scale of A2~B5, and the scale of keys C5~C9 will be played as the scale of C4~C8

◆ You can use the digital selection of the main tone to replace the original tone of keys C5~C9

4. Dual:

◆ Press the **【Dual Key】** for the first time to start the dual tone function, and press the **【Dual Key】** for the second time to cancel the dual tone function.

◆ When the dual tone function is activated, when playing the keys, the main tone and the selected dual tone will sound

◆ You can use the digital selection of the main tone

5. Drum Kits:

◆ Press the **【Drum Key】** for the first time to start the drum function, and press the **【Drum Key】** for the second time to cancel the drum function.

◆ When the keyboard drum function is activated, the corresponding drum sound will be played when playing the keys

VIII. Teaching Mode

1. Single Key One Note:

◆ Press **【Single Key】** for the first time to enter the single key mode, and press **【Single Key】** for the second time to exit the single key mode. After



Functional Operation Instructions

entering the single key mode, use the current song for teaching. After the song is played, the user presses the keys at will as the main melody. If the main melody does not reach the next measure, the background sound will repeat the measure until the song ends.

- ◆ After the song ends, press the next song on the single key.

- ◆ In single-key mode, it automatically enters song selection mode, and returns to tone selection mode when exiting single-key mode

- ◆ Press the **【tone key】** while playing a song to temporarily switch to tone selection mode, and return to song selection mode after 3 seconds

2. Ensemble:

- ◆ Press the **【ensemble key】** for the first time to enter ensemble mode, and press the **【ensemble key】** for the second time to exit ensemble mode

- ◆ After entering ensemble mode, use the current song for teaching. After the song is played, the user can play the keys at will and interrupt the main melody. If no keys are pressed after 5 seconds, the main melody will resume playing automatically. The background sound plays completely, and the teaching is repeated until the song ends.

- ◆ After the song ends, play the next song together

- ◆ In ensemble mode, automatically enter the song selection mode, and exit the ensemble mode to return to the tone selection mode

- ◆ Press the **【tone key】** while playing a song to temporarily switch to the tone selection mode, and return to the song selection mode in 3 seconds

3. Follow:

- ◆ Press the **【Follow key】** for the first time to enter the follow mode, and press the **【Follow key】** for the second time to exit the follow mode

- ◆ After entering the follow mode, use the current song for teaching. After the song is played, the main melody will not play. The user must press the corresponding key according to the note displayed on the digital tube to continue playing the next note. The background sound will repeat the section until the song ends and stops

- ◆ After the song ends, play the next song together.

- ◆ In follow mode, automatically enter the song selection mode, and exit the follow mode to return to the tone selection mode

- ◆ Press the **【tone key】** while playing a song to temporarily switch to the tone selection mode, and return to the song selection mode in 3 seconds



Appendix

Tone table-800 kinds		T038	Synth Bass 1	T077	Shakuhachi
T000	Acoustic Grand Piano	T039	Synth Bass 2	T078	Whistle
T001	Bright Acoustic Piano	T040	Violin	T079	Ocarina
T002	Electric Grand Piano	T041	Viola	T080	Lead 1 (square)
T003	Honky-tonk Piano	T042	Cello	T081	Lead 2 (sawtooth)
T004	Rhodes Piano	T043	Contrabass	T082	Lead 3 (calliope lead)
T005	Chorused Piano	T044	Tremolo Strings	T083	Lead 4 (chiff lead)
T006	Harpsichord	T045	Pizzicato Strings	T084	Lead 5 (charang)
T007	Clavichord	T046	Orchestral Harp	T085	Lead 6 (voice)
T008	Celesta	T047	Timpani	T086	Lead 7 (fifths)
T009	Glockenspiel	T048	String Ensemble 1	T087	Lead 8 (bass+lead)
T010	Music box	T049	String Ensemble 2	T088	Pad 1 (new age)
T011	Vibraphone	T050	Synth Strings 1	T089	Pad 2 (warm)
T012	Marimba	T051	Synth Strings 2	T090	Pad 3 (polysynth)
T013	Xylophone	T052	Choir Aahs	T091	Pad 4 (choir)
T014	Tubular Bell	T053	Voice Oohs	T092	Pad 5 (bowed)
T015	Dulcimer	T054	Synth Voice	T093	Pad 6 (metallic)
T016	Drawbar Organ	T055	Orchestra Hit	T094	Pad 7 (halo)
T017	Percussive Organ	T056	Trumpet	T095	Pad 8 (sweep)
T018	Rock Organ	T057	Trombone	T096	FX 1 (rain)
T019	Church Organ	T058	Tuba	T097	FX 2 (soundtrack)
T020	Reed Organ	T059	Muted Trumpet	T098	FX 3 (crystal)
T021	Accordion	T060	French Horn	T099	FX 4 (atmosphere)
T022	Harmonica	T061	Brass Section	T100	FX 5 (brightness)
T023	Tango Accordion	T062	Synth Brass 1	T101	FX 6 (goblins)
T024	Acoustic Guitar (nylon)	T063	Synth Brass 2	T102	FX 7 (echoes)
T025	Acoustic Guitar (steel)	T064	Soprano Sax	T103	FX 8 (sci-fi)
T026	Electric Guitar (jazz)	T065	Alto Sax	T104	Sitar
T027	Electric Guitar (clean)	T066	Tenor Sax	T105	Banjo
T028	Electric Guitar (muted)	T067	Baritone Sax	T106	Shamisen
T029	Overdriven Guitar	T068	Oboe	T107	Koto
T030	Distortion Guitar	T069	English Horn	T108	Kalimba
T031	Guitar Harmonics	T070	Bassoon	T109	Bagpipe
T032	Acoustic Bass	T071	Clarinet	T110	Fiddle
T033	Electric Bass(finger)	T072	Piccolo	T111	Shanai
T034	Electric Bass (pick)	T073	Flute	T112	Tinkle Bell
T035	Fretless Bass	T074	Recorder	T113	Agogo
T036	Slap Bass 1	T075	Pan Flute	T114	Steel Drums
T037	Slap Bass 2	T076	Bottle Blow	T115	Woodblock



Appendix

T116	Taiko Drum	T155	Dulcimer 1	T194	Synth Voice 1
T117	Melodic Tom	T156	Drawbar Organ 1	T195	Orchestra Hit 1
T118	Synth Drum	T157	Percussive Organ 1	T196	Trumpet 1
T119	Reverse Cymbal	T158	Rock Organ 1	T197	Trombone 1
T120	Guitar Fret Noise	T159	Church Organ 1	T198	Tuba 1
T121	Breath Noise	T160	Reed Organ 1	T199	Muted Trumpet 1
T122	Seashore	T161	Accordion 1	T200	French Horn 1
T123	Bird Tweet	T162	Harmonica 1	T201	Brass Section 1
T124	Telephone Ring	T163	Tango Accordion 1	T202	Synth Brass 3
T125	Helicopter	T164	Acoustic Guitar (nylon) 1	T203	Synth Brass 4
T126	Applause	T165	Acoustic Guitar (steel) 1	T204	Soprano Sax 1
T127	Gunshot	T166	Electric Guitar (jazz) 1	T205	Alto Sax 1
T128	Yong Gin	T167	Electric Guitar (clean) 1	T206	Tenor Sax 1
T129	Zheng	T168	Electric Guitar (muted) 1	T207	Baritone Sax 1
T130	Zhong Ruan	T169	Overdriven Guitar 1	T208	Oboe 1
T131	Pi Pa	T170	Distortion Guitar 1	T209	English Horn 1
T132	Big Souna	T171	Guitar Harmonics 1	T210	Bassoon 1
T133	Souna	T172	Acoustic Bass 1	T211	Clarinet 1
T134	Er Hu	T173	Electric Bass(finger) 1	T212	Piccolo 1
T135	Yue Hu	T174	Electric Bass (pick) 1	T213	Flute 1
T136	Di Zi	T175	Fretless Bass 1	T214	Recorder 1
T137	Bong Di	T176	Slap Bass 3	T215	Pan Flute 1
T138	Koto1	T177	Slap Bass 4	T216	Bottle Blow 1
T139	Qu Di	T178	Synth Bass 3	T217	Shakuhachi 1
T140	Acoustic Grand Piano 1	T179	Synth Bass 4	T218	Whistle 1
T141	Bright Acoustic Piano 1	T180	Violin 1	T219	Ocarina 1
T142	Electric Grand Piano 1	T181	Viola 1	T220	Lead 1 (square 1)
T143	Honky-tonk Piano 1	T182	Cello 1	T221	Lead 2 (sawtooth 1)
T144	Rhodes Piano 1	T183	Contrabass 1	T222	Lead 3 (calliope lead 1)
T145	Chorused Piano 1	T184	Tremolo Strings 1	T223	Lead 4 (chiff lead 1)
T146	Harpsichord 1	T185	Pizzicato Strings 1	T224	Lead 5 (charang 1)
T147	Clavichord 1	T186	Orchestral Harp 1	T225	Lead 6 (voice 1)
T148	Celesta 1	T187	Timpani 1	T226	Lead 7 (fifths 1)
T149	Glockenspiel 1	T188	String Ensemble 3	T227	Lead 8 (bass+lead 1)
T150	Music box 1	T189	String Ensemble 4	T228	Pad 1 (new age 1)
T151	Vibraphone 1	T190	Synth Strings 3	T229	Pad 2 (warm 1)
T152	Marimba 1	T191	Synth Strings 4	T230	Pad 3 (polysynth 1)
T153	Xylophone 1	T192	Choir Aahs 1	T231	Pad 4 (choir 1)
T154	Tubular Bell 1	T193	Voice Oohs 1	T232	Pad 5 (bowed 1)



Appendix

T233	Pad 6 (metallic 1)	T272	Big Souna 1	T311	Guitar Harmonics 2
T234	Pad 7 (halo 1)	T273	Souna 1	T312	Acoustic Bass 2
T235	Pad 8 (sweep 1)	T274	Er Hu 1	T313	Electric Bass(finger) 2
T236	FX 1 (rain 1)	T275	Yue Hu 1	T314	Electric Bass (pick) 2
T237	FX 2 (soundtrack 1)	T276	Di Zi 1	T315	Fretless Bass 2
T238	FX 3 (crystal 1)	T277	Bong Di 1	T316	Slap Bass 5
T239	FX 4 (atmosphere 1)	T278	Koto 3	T317	Slap Bass 6
T240	FX 5 (brightness 1)	T279	Qu Di 1	T318	Synth Bass 5
T241	FX 6 (goblins 1)	T280	Acoustic Grand Piano 2	T319	Synth Bass 6
T242	FX 7 (echoes 1)	T281	Bright Acoustic Piano 2	T320	Violin 2
T243	FX 8 (sci-fi 1)	T282	Electric Grand Piano 2	T321	Viola 2
T244	Sitar 1	T283	Honky-tonk Piano 2	T322	Cello 2
T245	Banjo 1	T284	Rhodes Piano 2	T323	Contrabass 2
T246	Shamisen 1	T285	Chorused Piano 2	T324	Tremolo Strings 2
T247	Koto 2	T286	Harpsichord 2	T325	Pizzicato Strings 2
T248	Kalimba 1	T287	Clavichord 2	T326	Orchestral Harp 2
T249	Bagpipe 1	T288	Celesta 2	T327	Timpani 2
T250	Fiddle 1	T289	Glockenspiel 2	T328	String Ensemble 5
T251	Shanai 1	T290	Music box 2	T329	String Ensemble 6
T252	Tinkle Bell 1	T291	Vibraphone 2	T330	Synth Strings 5
T253	Agogo 1	T292	Marimba 2	T331	Synth Strings 6
T254	Steel Drums 1	T293	Xylophone 2	T332	Choir Aahs 2
T255	Woodblock 1	T294	Tubular Bell 2	T333	Voice Oohs 2
T256	Taiko Drum 1	T295	Dulcimer 2	T334	Synth Voice 2
T257	Melodic Tom 1	T296	Drawbar Organ 2	T335	Orchestra Hit 2
T258	Synth Drum 1	T297	Percussive Organ 2	T336	Trumpet 2
T259	Reverse Cymbal 1	T298	Rock Organ 2	T337	Trombone 2
T260	Guitar Fret Noise 1	T299	Church Organ 2	T338	Tuba 2
T261	Breath Noise 1	T300	Reed Organ 2	T339	Muted Trumpet 2
T262	Seashore 1	T301	Accordion 2	T340	French Horn 2
T263	Bird Tweet 1	T302	Harmonica 2	T341	Brass Section 2
T264	Telephone Ring 1	T303	Tango Accordion 2	T342	Synth Brass 5
T265	Helicopter 1	T304	Acoustic Guitar (nylon) 2	T343	Synth Brass 6
T266	Applause 1	T305	Acoustic Guitar (steel) 2	T344	Soprano Sax 2
T267	Gunshot 1	T306	Electric Guitar (jazz) 2	T345	Alto Sax 2
T268	Yong Gin 1	T307	Electric Guitar (clean) 2	T346	Tenor Sax 2
T269	Zheng 1	T308	Electric Guitar (muted) 2	T347	Baritone Sax 2
T270	Zhong Ruan 1	T309	Overdriven Guitar 2	T348	Oboe 2
T271	Pi Pa 1	T310	Distortion Guitar 2	T349	English Horn 2



Appendix

T350	Bassoon 2	T389	Bagpipe 2	T428	Celesta 3
T351	Clarinet 2	T390	Fiddle 2	T429	Glockenspiel 3
T352	Piccolo 2	T391	Shanai 2	T430	Music box 3
T353	Flute 2	T392	Tinkle Bell 2	T431	Vibraphone 3
T354	Recorder 2	T393	Agogo 2	T432	Marimba 3
T355	Pan Flute 2	T394	Steel Drums 2	T433	Xylophone 3
T356	Bottle Blow 2	T395	Woodblock 2	T434	Tubular Bell 3
T357	Shakuhachi 2	T396	Taiko Drum 2	T435	Dulcimer 3
T358	Whistle 2	T397	Melodic Tom 2	T436	Drawbar Organ 3
T359	Ocarina 2	T398	Synth Drum 2	T437	Percussive Organ 3
T360	Lead 1 (square 2)	T399	Reverse Cymbal 2	T438	Rock Organ 3
T361	Lead 2 (sawtooth 2)	T400	Guitar Fret Noise 2	T439	Church Organ 3
T362	Lead 3 (calliope lead 2)	T401	Breath Noise 2	T440	Reed Organ 3
T363	Lead 4 (chiff lead 2)	T402	Seashore 2	T441	Accordion 3
T364	Lead 5 (charang 2)	T403	Bird Tweet 2	T442	Harmonica 3
T365	Lead 6 (voice 2)	T404	Telephone Ring 2	T443	Tango Accordion 3
T366	Lead 7 (fifths 2)	T405	Helicopter 2	T444	Acoustic Guitar (nylon) 3
T367	Lead 8 (bass+lead 2)	T406	Applause 2	T445	Acoustic Guitar (steel) 3
T368	Pad 1 (new age 2)	T407	Gunshot 2	T446	Electric Guitar (jazz) 3
T369	Pad 2 (warm 2)	T408	Yong Gin 2	T447	Electric Guitar (clean) 3
T370	Pad 3 (polysynth 2)	T409	Zheng 2	T448	Electric Guitar (muted) 3
T371	Pad 4 (choir 2)	T410	Zhong Ruan 2	T449	Overdriven Guitar 3
T372	Pad 5 (bowed 2)	T411	Pi Pa 2	T450	Distortion Guitar 3
T373	Pad 6 (metallic 2)	T412	Big Souna 2	T451	Guitar Harmonics 3
T374	Pad 7 (halo 2)	T413	Souna 2	T452	Acoustic Bass 3
T375	Pad 8 (sweep 2)	T414	Er Hu 2	T453	Electric Bass(finger) 3
T376	FX 1 (rain 2)	T415	Yue Hu 2	T454	Electric Bass (pick) 3
T377	FX 2 (soundtrack 2)	T416	Di Zi 2	T455	Fretless Bass 3
T378	FX 3 (crystal 2)	T417	Bong Di 2	T456	Slap Bass 7
T379	FX 4 (atmosphere 2)	T418	Koto 5	T457	Slap Bass 8
T380	FX 5 (brightness 2)	T419	Qu Di 2	T458	Synth Bass 7
T381	FX 6 (goblins 2)	T420	Acoustic Grand Piano 3	T459	Synth Bass 8
T382	FX 7 (echoes 2)	T421	Bright Acoustic Piano 3	T460	Violin 3
T383	FX 8 (sci-fi 2)	T422	Electric Grand Piano 3	T461	Viola 3
T384	Sitar 2	T423	Honky-tonk Piano 3	T462	Cello 3
T385	Banjo 2	T424	Rhodes Piano 3	T463	Contrabass 3
T386	Shamisen 2	T425	Chorused Piano 3	T464	Tremolo Strings 3
T387	Koto 4	T426	Harpsichord 3	T465	Pizzicato Strings 3
T388	Kalimba 2	T427	Clavichord 3	T466	Orchestral Harp 3



Appendix

T467	Timpani 3	T506	Lead 7 (fifths 3)	T545	Helicopter 3
T468	String Ensemble 7	T507	Lead 8 (bass+lead 3)	T546	Applause 3
T469	String Ensemble 8	T508	Pad 1 (new age 3)	T547	Gunshot 3
T470	Synth Strings 7	T509	Pad 2 (warm 3)	T548	Yong Gin 3
T471	Synth Strings 8	T510	Pad 3 (polysynth 3)	T549	Zheng 3
T472	Choir Aahs 3	T511	Pad 4 (choir 3)	T550	Zhong Ruan 3
T473	Voice Oohs 3	T512	Pad 5 (bowed 3)	T551	Pi Pa 3
T474	Synth Voice 3	T513	Pad 6 (metallic 3)	T552	Big Souna 3
T475	Orchestra Hit 3	T514	Pad 7 (halo 3)	T553	Souna 3
T476	Trumpet 3	T515	Pad 8 (sweep 3)	T554	Er Hu 3
T477	Trombone 3	T516	FX 1 (rain 3)	T555	Yue Hu 3
T478	Tuba 3	T517	FX 2 (soundtrack 3)	T556	Di Zi 3
T479	Muted Trumpet 3	T518	FX 3 (crystal 3)	T557	Bong Di 3
T480	French Horn 3	T519	FX 4 (atmosphere 3)	T558	Koto 7
T481	Brass Section 3	T520	FX 5 (brightness 3)	T559	Qu Di 3
T482	Synth Brass 7	T521	FX 6 (goblins 3)	T560	Acoustic Grand Piano 4
T483	Synth Brass 8	T522	FX 7 (echoes 3)	T561	Bright Acoustic Piano 4
T484	Soprano Sax 3	T523	FX 8 (sci-fi 3)	T562	Electric Grand Piano 4
T485	Alto Sax 3	T524	Sitar 3	T563	Honky-tonk Piano 4
T486	Tenor Sax 3	T525	Banjo 3	T564	Rhodes Piano 4
T487	Baritone Sax 3	T526	Shamisen 3	T565	Chorused Piano 4
T488	Oboe 3	T527	Koto 6	T566	Harpsichord 4
T489	English Horn 3	T528	Kalimba 3	T567	Clavichord 4
T490	Bassoon 3	T529	Bagpipe 3	T568	Celesta 4
T491	Clarinet 3	T530	Fiddle 3	T569	Glockenspiel 4
T492	Piccolo 3	T531	Shanai 3	T570	Music box 4
T493	Flute 3	T532	Tinkle Bell 3	T571	Vibraphone 4
T494	Recorder 3	T533	Agogo 3	T572	Marimba 4
T495	Pan Flute 3	T534	Steel Drums 3	T573	Xylophone 4
T496	Bottle Blow 3	T535	Woodblock 3	T574	Tubular Bell 4
T497	Shakuhachi 3	T536	Taiko Drum 3	T575	Dulcimer 4
T498	Whistle 3	T537	Melodic Tom 3	T576	Drawbar Organ 4
T499	Ocarina 3	T538	Synth Drum 3	T577	Percussive Organ 4
T500	Lead 1 (square 3)	T539	Reverse Cymbal 3	T578	Rock Organ 4
T501	Lead 2 (sawtooth 3)	T540	Guitar Fret Noise 3	T579	Church Organ 4
T502	Lead 3 (calliope lead 3)	T541	Breath Noise 3	T580	Reed Organ 4
T503	Lead 4 (chiff lead 3)	T542	Seashore 3	T581	Accordion 4
T504	Lead 5 (charang 3)	T543	Bird Tweet 3	T582	Harmonica 4
T505	Lead 6 (voice 3)	T544	Telephone Ring 3	T583	Tango Accordion 4



Appendix

T584	Acoustic Guitar (nylon) 4	T623	Synth Brass 10	T662	FX 7 (echoes 4)
T585	Acoustic Guitar (steel) 4	T624	Soprano Sax 4	T663	FX 8 (sci-fi 4)
T586	Electric Guitar (jazz) 4	T625	Alto Sax 4	T664	Sitar 4
T587	Electric Guitar (clean) 4	T626	Tenor Sax 4	T665	Banjo 4
T588	Electric Guitar (muted) 4	T627	Baritone Sax 4	T666	Shamisen 4
T589	Overdriven Guitar 4	T628	Oboe 4	T667	Koto 8
T590	Distortion Guitar 4	T629	English Horn 4	T668	Kalimba 4
T591	Guitar Harmonics 4	T630	Bassoon 4	T669	Bagpipe 4
T592	Acoustic Bass 4	T631	Clarinet 4	T670	Fiddle 4
T593	Electric Bass(finger) 4	T632	Piccolo 4	T671	Shanai 4
T594	Electric Bass (pick) 4	T633	Flute 4	T672	Tinkle Bell 4
T595	Fretless Bass 4	T634	Recorder 4	T673	Agogo 4
T596	Slap Bass 9	T635	Pan Flute 4	T674	Steel Drums 4
T597	Slap Bass 10	T636	Bottle Blow 4	T675	Woodblock 4
T598	Synth Bass 9	T637	Shakuhachi 4	T676	Taiko Drum 4
T599	Synth Bass 10	T638	Whistle 4	T677	Melodic Tom 4
T600	Violin 4	T639	Ocarina 4	T678	Synth Drum 4
T601	Viola 4	T640	Lead 1 (square 4)	T679	Reverse Cymbal 4
T602	Cello 4	T641	Lead 2 (sawtooth 4)	T680	Guitar Fret Noise 4
T603	Contrabass 4	T642	Lead 3 (calliope lead 4)	T681	Breath Noise 4
T604	Tremolo Strings 4	T643	Lead 4 (chiff lead 4)	T682	Seashore 4
T605	Pizzicato Strings 4	T644	Lead 5 (charang 4)	T683	Bird Tweet 4
T606	Orchestral Harp 4	T645	Lead 6 (voice 4)	T684	Telephone Ring 4
T607	Timpani 4	T646	Lead 7 (fifths 4)	T685	Helicopter 4
T608	String Ensemble 9	T647	Lead 8 (bass+lead 4)	T686	Applause 4
T609	String Ensemble 10	T648	Pad 1 (new age 4)	T687	Gunshot 4
T610	Synth Strings 9	T649	Pad 2 (warm 4)	T688	Yong Gin 4
T611	Synth Strings 10	T650	Pad 3 (polysynth 4)	T689	Zheng 4
T612	Choir Aahs 4	T651	Pad 4 (choir 4)	T690	Zhong Ruan 4
T613	Voice Oohs 4	T652	Pad 5 (bowed 4)	T691	Pi Pa 4
T614	Synth Voice 4	T653	Pad 6 (metallic 4)	T692	Big Souna 4
T615	Orchestra Hit 4	T654	Pad 7 (halo 4)	T693	Souna 4
T616	Trumpet 4	T655	Pad 8 (sweep 4)	T694	Er Hu 4
T617	Trombone 4	T656	FX 1 (rain 4)	T695	Yue Hu 4
T618	Tuba 4	T657	FX 2 (soundtrack 4)	T696	Di Zi 4
T619	Muted Trumpet 4	T658	FX 3 (crystal 4)	T697	Bong Di 4
T620	French Horn 4	T659	FX 4 (atmosphere 4)	T698	Koto 9
T621	Brass Section 4	T660	FX 5 (brightness 4)	T699	Qu Di 4
T622	Synth Brass 9	T661	FX 6 (goblins 4)	T700	Acoustic Grand Piano 5



Appendix

T701	Bright Acoustic Piano 5	T740	Violin 5	T779	Ocarina 5
T702	Electric Grand Piano 5	T741	Viola 5	T780	Lead 1 (square 5)
T703	Honky-tonk Piano 5	T742	Cello 5	T781	Lead 2 (sawtooth 5)
T704	Rhodes Piano 5	T743	Contrabass 5	T782	Lead 3 (calliope lead 5)
T705	Chorused Piano 5	T744	Tremolo Strings 5	T783	Lead 4 (chiff lead 5)
T706	Harpsichord 5	T745	Pizzicato Strings 5	T784	Lead 5 (charang 5)
T707	Clavichord 5	T746	Orchestral Harp 5	T785	Lead 6 (voice 5)
T708	Celesta 5	T747	Timpani 5	T786	Lead 7 (fifths 5)
T709	Glockenspiel 5	T748	String Ensemble 11	T787	Lead 8 (bass+lead 5)
T710	Music box 5	T749	String Ensemble 12	T788	Pad 1 (new age 5)
T711	Vibraphone 5	T750	Synth Strings 11	T789	Pad 2 (warm 5)
T712	Marimba 5	T751	Synth Strings 12	T790	Pad 3 (polysynth 5)
T713	Xylophone 5	T752	Choir Aahs 5	T791	Pad 4 (choir 5)
T714	Tubular Bell 5	T753	Voice Oohs 5	T792	Pad 5 (bowed 5)
T715	Dulcimer 5	T754	Synth Voice 5	T793	Pad 6 (metallic 5)
T716	Drawbar Organ 5	T755	Orchestra Hit 5	T794	Pad 7 (halo 5)
T717	Percussive Organ 5	T756	Trumpet 5	T795	Pad 8 (sweep 5)
T718	Rock Organ 5	T757	Trombone 5	T796	FX 1 (rain 5)
T719	Church Organ 5	T758	Tuba 5	T797	FX 2 (soundtrack 5)
T720	Reed Organ 5	T759	Muted Trumpet 5	T798	FX 3 (crystal 5)
T721	Accordion 5	T760	French Horn 5	T799	FX 3 (atmosphere 5)
T722	Harmonica 5	T761	Brass Section 5	Demo songs table-200 kinds	
T723	Tango Accordion 5	T762	Synth Brass 11	S000	Hotel Pacific
T724	Acoustic Guitar (nylon) 5	T763	Synth Brass 12	S001	1900's Madness
T725	Acoustic Guitar (steel) 5	T764	Soprano Sax 5	S002	Family Restaurant
T726	Electric Guitar (jazz) 5	T765	Alto Sax 5	S003	To Flush Waves Johnny
T727	Electric Guitar (clean) 5	T766	Tenor Sax 5	S004	Zimbada hand
T728	Electric Guitar (muted) 5	T767	Baritone Sax 5	S005	Paradise
T729	Overdriven Guitar 5	T768	Oboe 5	S006	Birthday
T730	Distortion Guitar 5	T769	English Horn 5	S007	Carmen
T731	Guitar Harmonics 5	T770	Bassoon 5	S008	Cavatina
T732	Acoustic Bass 5	T771	Clarinet 5	S009	Jingle Bells
T733	Electric Bass(finger) 5	T772	Piccolo 5	S010	Silent Night
T734	Electric Bass (pick) 5	T773	Flute 5	S011	0 Christmas Santa Claus
T735	Fretless Bass 5	T774	Recorder 5	S012	When The Saints Go Marchin In
T736	Slap Bass 11	T775	Pan Flute 5	S013	Oh Susanna
T737	Slap Bass 12	T776	Bottle Blow 5	S014	Moon River
T738	Synth Bass 11	T777	Shakuhachi 5	S015	ABC Word
T739	Synth Bass 12	T778	Whistle 5	S016	We Wish You A Merry Christmas



Appendix

S017	Six Little Ducks	S056	In that faraway place	S095	Toot Toot Toosie Goodbye
S018	Mary Had A Little Lamb	S057	Prairie Song	S096	I will always love you
S019	Moonlight Bay	S058	Look at home	S097	The Entertainer
S020	American Beauty Rag	S059	On affordable	S098	Flash dance What A Feeling
S021	Crazy Arms	S060	You set off to the chapeau	S099	1900's Theme
S022	Before the Next TearDrop Falls	S061	The Qinghai-Tibet Plateau	S100	Silent Night_Harp
S023	Waltz Op64 No.1 By Chopin	S062	Same Song	S101	O Christmas Santa Claus_Piano
S024	Piano Sonata	S063	Hill Road Bending 18	S102	When The Saints Go Marchin In_Oboe
S025	The Beautiful Blue Danube	S064	Farewell	S103	Oh Susanna_Trumpet
S026	The Crave	S065	Happy home	S104	Moon River_Violin
S027	Tea for Two	S066	Place peach bloom	S105	ABC Word_Violin
S028	Sleigh Ride	S067	New Century	S106	We Wish You A Merry Christmas_Clarinet
S029	Rudolph The Red Nosed Reindeer	S068	Gave me a Red Rose	S107	Six Little Ducks_Accordion
S030	Santa Claus Is Coming To Town	S069	Kangding Love Song	S108	Mary Had A Little Lamb Alto Sax
S031	Traumerei	S070	Dansolde	S109	Moonlight Bay Trumpet
S032	Clock	S071	Beijing Tune	S110	Rudolph The Red Nosed Reindeer Trumpet
S033	Humoresque	S072	Yi Jian Mei	S111	Santa Claus Is Coming To Town_Piano
S034	Frohlicher Landmann	S073	Rumanxilou	S112	Traumerei Harp
S035	Canon	S074	Goodbye Dabieshan	S113	Clock Trumpet
S036	Waltz	S075	Happy Chinese New Year	S114	Humoresque_Vibraphone
S037	Greensleeves	S076	Dreams Of Riverboat	S115	Frohlicher Landmann_Harp
S038	Polka	S077	The Penghu bending Grandmother	S116	Canon_Harp
S039	Arabesque	S078	Heart-Throb	S117	Waltz_Violin
S040	Jockey Club	S079	Wish You Peaceful	S118	Carmen_Oboe
S041	Yang On A Horse To Transport Grain	S080	Sighing	S119	Cavatina_Piano
S042	Stepping Higher And Higher	S081	Restlessness	S120	Jingle Bells_Harp
S043	US Taihu Lake	S082	La Donna E Mobile	S121	To Flush Waves Johnny_Oboe
S044	Osmanthus everywhere open in August	S083	Fur Elise	S122	Zimbada hand_Hammond Organ
S045	Central government	S084	Chanson Du Toreador	S123	Paradise_Vibraphone
S046	Tathagata	S085	Hungarin Dances No. 5	S124	Birthday_Trumpet
S047	Aobaoshan	S086	Nocture	S125	The Beautiful Blue Danube_Violin
S048	Yangming Chunxiao	S087	Red River Valley	S126	The Crave_Harp
S049	Jasmine	S088	Danny Boy	S127	Tea for Two_Trumpet
S050	Jaunty	S089	Picnic	S128	Sleigh Ride_Piano
S051	Good Day	S090	My Bonnie	S129	American Beauty Rag Harp
S052	Childhood	S091	Home On The Range	S130	Crazy Arms_Trumpet
S053	Zi Zhutiao	S092	She Wore A Yellow Ribbon	S131	Before the Next TearDrop Falls_Oboe
S054	Auspicious TREBLE	S093	Cow Boy	S132	Waltz Op64 No.1 By Chopin_Harp
S055	Trials of a long journey always intelligence	S094	Twinkle Twinkle Little Star	S133	Piano Sonata_Harp



Appendix

S134	Hotel Pacific_Trumpet	S173	Farewell_Piano	R011	Twist
S135	1900's Madness_Alto Sax	S174	Happy home_Harp	R012	British Pop1
S136	Family Restaurant_Vibraphone	S175	Place peach bloom_Harp	R013	British Pop2
S137	Greensleeves_Harp	S176	The Penguin bending Grandmother_Vibraphone	R014	Hard Rock1
S138	Polka_Harp	S177	Heart-Throb_Piano	R015	Hard Rock2
S139	Arabesque_Clarinet	S178	Aobaoshan_Harmonica	R016	Fusion1
S140	Sighing_Harp	S179	Yangming Chunxiao_Violin	R017	Fusion2
S141	Restlessness_Harp	S180	Jasmine_Vibraphone	R018	FunkShuffl 1
S142	La Donna E Mobile_Harp	S181	Jaunty_Oboe	R019	FunkShuffl 2
S143	Fur Elise_Harp	S182	Good Day_Ocarina	R020	FusionShuffl 1
S144	Chanson Du Toreador_Flute	S183	Childhood Distortion Guitar	R021	FusionShuffl 2
S145	Hungarin Dances No.5_Harp	S184	Zi ZhuTiao_Harmonica	R022	Club Pop1
S146	Nocture_Harp	S185	Central governmentHarp	R023	Club Pop2
S147	Red River Valley_Oboe	S186	TathagataTrumpet	R024	16 Beat Pop1
S148	Danny Boy_Clarinet	S187	Wish You Peaceful_Trumpet	R025	16 Beat Pop2
S149	Picnic_Trumpet	S188	Dreams Of Riverboat_Harp	R026	8 Beat Pop1
S150	My Bonnie_Trumpet	S189	Jockey Club_Harmonica	R027	8 Beat Pop2
S151	Home On The Range_Clarinet	S190	Yang On A Horse To Transport Grain_Ocarina	R028	8 Beat Soul1
S152	She Wore A Yellow Ribbon_Clarinet	S191	Stepping Higher And Higher_Violin	R029	8 Beat Soul2
S153	Cow Boy_Trumpet	S192	US Taihu Lake_Violin	R030	8 Beat Rock1
S154	Twinkle Twinkle Little Star_Harp	S193	Osmanthus everywhere open in August_Oboe	R031	8 Beat Rock2
S155	Toot Toot Toosie Goodbye_Vibraphone	S194	Rumanxilou_Accordion	R032	Classic 8Beat
S156	I will always love you_Piano	S195	Goodbye Dabieshan_Alto Sax	R033	Vintage Gtr Pop
S157	The Entertainer_Harp	S196	Happy Chinese New Year_Trumpet	R034	Schlager Italia
S158	Flash dance What A Feeling_Oboe	S197	Auspicious TREBLE_Clarinet	R035	60's RockN
S159	1900's Theme_Vibraphone	S198	Trials of a long journey always intelligence_Ocarina	R036	Standard Rock
S160	New Century_Piano	S199	In that faraway place_Trumpet	R037	Brit Rock Pop
S161	Gave me a Red Rose_Oboe	Rhythm table-800 kinds		R038	60's Vintage Rock
S162	Kangding Love Song_Trumpet	R000	50's Pop	R039	Chart Rock Shfl
S163	Dansolde_Violin	R001	Cool Pop	R040	60's Pop Rock
S164	Beijing Tune_Violin	R002	Groovy Pop	R041	RockBilly
S165	Yi Jian Mei_Clarinet	R003	60's Vintage Pop	R042	RockBoogie
S166	Prairie Song_Alto Sax	R004	80's Pop	R043	RockChaCha
S167	Look at home_Vibraphone	R005	Rap Pop	R044	RockClassical
S168	On affordable_Trumpet	R006	Pop Rock	R045	RockShuffle
S169	You set off to the chapeau_Hammond Organ	R007	60' s Soul	R046	RockPop
S170	The Qinghai-Tibet Plateau_Vibraphone	R008	70' s Soul	R047	Rock'n Roll 1
S171	Same Song_Trumpet	R009	Funk	R048	Rock'n Roll 2
S172	Hill Road Bending 18_Oboe	R010	16 Beat Shuffle	R049	Straight Rock



Appendix

R050	Jazz Rock	R089	Electro Pop	R128	70's Disco Funk
R051	FastGospel	R090	Acoustic Ballad	R129	Disco Philly
R052	FolkRock	R091	Piano Ballad	R130	Disco House
R053	Skiffle	R092	R&B Ballad	R131	80's Disco
R054	Funk Pop Rock	R093	Rock Ballad	R132	Swing Fox
R055	Contemp Rock	R094	Slow & Easy	R133	Slow Fox
R056	Acoustic Rock	R095	Analog Ballad	R134	Organ Cha Cha
R057	Pop Mambo	R096	Slow Rock 1	R135	Organ Quick Step
R058	Latin Party Pop	R097	Slow Rock 2	R136	Cat Groove
R059	Hhard Mambo	R098	Slow Rock 3	R137	Dixie Jazz
R060	Parranda	R099	Slow Soul	R138	Medium Jazz
R061	Rock Lation	R100	8 Beat Adria	R139	Jazz Big Band
R062	Bossanova	R101	Classic Piano	R140	Jazz Club
R063	Mambo 1	R102	80's EP Ballad	R141	Ragtime
R064	Mambo 2	R103	80's Boy Band	R142	Big Band Shuffle 1
R065	Bolero	R104	70's Disco1	R143	Big Band Shuffle 2
R066	Cumbia	R105	70's Disco2	R144	Big Band Shuffle 3
R067	Latin Rock	R106	Funky Disco	R145	Fast Band 1
R068	Disco Latin	R107	Saturday Night	R146	Fast Band 2
R069	Tijuana	R108	Club Latin	R147	Frankly Soul
R070	Reggae	R109	Disco Chocolate	R148	Jazz Funk
R071	Salsa	R110	Disco Fox	R149	Classic Big Band
R072	Calypso	R111	Disco Funk	R150	French Jazz
R073	GuadDance	R112	Disco Hands	R151	Jump Jive
R074	Reggae12Beat	R113	Disco Party	R152	Country Love Song
R075	Reggae16Beat	R114	Disco Samba	R153	Country Two Step
R076	70's Chart Ballad	R115	Britannia Pop	R154	Country 1
R077	Romantic Ballad	R116	Club Dance	R155	Country 2
R078	90's Cool Ballad	R117	Modern R&B	R156	Finger Pickin
R079	Alp Ballad1	R118	Hip Shuffle	R157	Country Brothers
R080	Alp Ballad2	R119	Charleston	R158	New Country
R081	E Ballad	R120	DiscoPop	R159	Brisk Country
R082	Unplugged	R121	DiscoSoul	R160	70's Chart Cntry
R083	Pop Ballad	R122	DiscoTrot	R161	Hoedown
R084	Pop New Age	R123	EuroBeat	R162	Country Shuffle
R085	8 Beat Modern	R124	Rap	R163	Schlager Polka
R086	Country Ballad	R125	Rave	R164	Polka Pop
R087	Love Song	R126	Techno 1	R165	Blue Grass1
R088	Modern Country Pop	R127	Techno 2	R166	Blue Grass 2



Appendix

R167	Blue Grass 3	R206	New R&B Ballad	R245	Tango3
R168	Pop Waltz	R207	Guitar Serenade	R246	Tango4
R169	USA March	R208	Organ Ballad2	R247	Rock &Roll
R170	Hully Gully	R209	Joropo	R248	Rock & Roll Shfl1
R171	Tarantella	R210	Reggaeton	R249	Oldies R & R
R172	Limbo Rock	R211	French Waltz	R250	Detroit Pop1
R173	Swing Waltz	R212	Merengue	R251	Detroit Pop2
R174	Pub Piano	R213	12-8 Ballad	R252	Worship Med
R175	Jazz Waltz 1	R214	Norteno	R253	Worship Fast
R176	Jazz Waltz 2	R215	Jig	R254	Piano Boogie
R177	Show Tune	R216	Hawaiian	R255	Lovely Shuffle
R178	Polka	R217	Electronica	R256	60's Rock 2
R179	Ober Polka	R218	Funky House	R257	Kool Funk
R180	Party Polka	R219	Club Beat	R258	Blueberry Blues
R181	Waltz	R220	Retro Club	R259	Shuffle Blues
R182	Cha Cha	R221	Mod Chart Pop	R260	Mambo 4
R183	Rumba	R222	MOR Swing	R261	Mambo 5
R184	Jive	R223	Retro Pop	R262	Pop Classics
R185	Pasodoble	R224	Rumba Flamenco	R263	Live 8 Beat
R186	Samba 1	R225	Trance Pop	R264	Power Rock2
R187	Samba 2	R226	Orch Big Band2	R265	Acoustic Rock2
R188	Schlager Rock 1	R227	Big Band Fast2	R266	Cool 8 Beat
R189	Schlager Rock 2	R228	Midnight Swing	R267	Uptempo 8Beat
R190	FoxTrot	R229	German Rock	R268	90's Rock Ballad
R191	Viennese Waltz	R230	Schlager Beat	R269	Chart Rock Shfl2
R192	Tangol	R231	Mellow Hip Hop	R270	Brit Pop
R193	Tango2	R232	Classic Hip Hop	R271	Brazilian Samba
R194	German Waltz	R233	New Hip Hop	R272	Brit Pop Swing
R195	Carnival	R234	Duranguense	R273	60's s 8 Beat
R196	Organ Samba	R235	Laff	R274	Fast Bossa
R197	Reel	R236	Ober Walzer	R275	60's Guitar Pop
R198	Gay Gordons	R237	Bhangra	R276	70's s 8 Beat
R199	Scand Waltz	R238	Zouk	R277	90's Guitar Pop
R200	J-Pop Hit	R239	German March	R278	Soft Rock2
R201	16 Beat Ballad2	R240	Enka	R279	Chart Guita rPop
R202	70's Pop Ballad	R241	Bolero Lento	R280	Guijira
R203	EP Ballad	R242	Sherif fReggae	R281	Modern Pop Bld
R204	Power Ballad	R243	Beguine2	R282	Soul
R205	Guitar Ballad2	R244	Latin Disco	R283	Skiffle2



Appendix

R284	6-8Soul	R323	Euro Hip Hop	R362	Easy Country
R285	Soul Brothers	R324	Trip Hop	R363	Country Hits
R286	Happy Reggae	R325	Ibiza 2004	R364	Country 8 Beat
R287	Pop Latin	R326	Mod Big Band Shfl	R365	Fast Band 3
R288	6-8Slow Rock	R327	Modern Big Band	R366	Fast Band 4
R289	6-8 Modern	R328	Pop Gtr Ballad	R367	Orchestral Bolero
R290	6-8 Orchestral	R329	Ibiza 2002	R368	Gospel Sisters
R291	Schlager Shuffle	R330	Euro Trance	R369	Italian Waltz
R292	Schlager Pop	R331	6-8 Trance	R370	6-8 March
R293	Schlager Rumba	R332	Latin DJ's	R371	Bluegrass
R294	Euro Pop Organ	R333	Big Band Shuffle4	R372	Mod Cntry Bld1
R295	70's French Hit	R334	Big Band Shuffle5	R373	Scand Country1
R296	Italian Mazurka	R335	Big Band Shuffle6	R374	Scand Country2
R297	Bohemian Waltz	R336	French House	R375	Scand Shuffle
R298	Schlager Sambal	R337	English Waltz	R376	Worship Slow
R299	Schlager Samba2	R338	8 Beat Ballad1	R377	Disco Teens
R300	Scand Slow Rock	R339	Club House	R378	Scand Bugg
R301	Schlager 6-8	R340	House2	R379	Rock Cha Chal
R302	Schlager Fox	R341	Jazz Gtr Club	R380	Organ Swing
R303	Highland Waltz	R342	Modern Jazz	R381	Secret Service
R304	Italian Polka	R343	Acoustic Jazz	R382	Animation Bld
R305	Grupera	R344	Cool Jazz Ballad	R383	Christmas Waltz
R306	Blue Grass4	R345	Modern Jazz Bld	R384	Movie Swing
R307	Blue Grass5	R346	Easy Listening	R385	Movie Ballad
R308	Blue Grass6	R347	Bebop	R386	Bubblegum Pop
R309	Bhajan	R348	Orch Big Band1	R387	Rock & Roll Shfl2
R310	Hip Hop Groove	R349	Big Band Fast1	R388	West Coast Pop
R311	Chart Pop1	R350	Orchestra Swing1	R389	Classic 16 Beat
R312	Organ Groove	R351	Orchestra Swing2	R390	Jazz Pop
R313	Chart Pop2	R352	70's Ranking Country	R391	Kool Shuffle
R314	New R&B	R353	Jazz Waltz Med	R392	8 Beat Ballad2
R315	Pop R&B	R354	Mariachi Waltz	R393	Chillout
R316	Chart R&B	R355	US March	R394	16 Beat Ballad1
R317	Modern Shuffle	R356	Guitar Rumba	R395	Epic Ballad
R318	Blues Rock	R357	Slow Blues	R396	Easy Ballad
R319	Dream Dance	R358	Jazz Waltz Fast	R397	Cuban Son
R320	US Chart Hit	R359	70's Country Pop	R398	Bachata2
R321	Soul R&B	R360	Dixieland	R399	Forro
R322	R&B Soul Ballad	R361	40's Big Band	R400	Standard Rock2



Appendix

R401	16 Beat Ballad3	R440	Enka2	R479	Rock Cha Cha2
R402	Contemp Rock2	R441	Bolero Lento2	R480	Guijira2
R403	EP Ballad2	R442	Midnight Swing2	R481	Rock Ballad2
R404	Fusion4	R443	French Jazz2	R482	Soul 5
R405	Fusion5	R444	Latin Party Pop2	R483	Classic 8Beat2
R406	Funk2	R445	Tango5	R484	Bolero3
R407	Guitar Serenade2	R446	Tango6	R485	Soul Brothers2
R408	Organ Ballad3	R447	Parranda2	R486	Happy Reggae2
R409	Joropo2	R448	Latin Rock2	R487	Pop Latin2
R410	Reggaeton2	R449	Acoustic Rock3	R488	6-8Slow Rock2
R411	French Waltz2	R450	80's Pop3	R489	6-8 Modern2
R412	Merengue2	R451	60's Soul2	R490	6-8 Orchestral2
R413	Pop Ballad2	R452	Fusion Shuffl3	R491	Slow Soul2
R414	Norteno2	R453	Fusion Shuffl4	R492	Piano Ballad3
R415	Jig2	R454	16 Beat Pop3	R493	Disco Trot2
R416	Hawaiian2	R455	16 Beat Pop4	R494	Disco Hands2
R417	70's Disco3	R456	60's Rock 3	R495	British Pop8
R418	70's Disco4	R457	Brit Rock Pop2	R496	Italian Mazurka2
R419	Club Beat2	R458	Blueberry Blues2	R497	Bohemian Waltz2
R420	Rap 4	R459	Skiffle3	R498	Samba3
R421	Disco House2	R460	Mambo6	R499	Samba4
R422	MOR Swing2	R461	Mambo7	R500	Jive3
R423	Retro Pop2	R462	Club Pop3	R501	Foxtrot3
R424	Calyпсо2	R463	Schlager Italia2	R502	Pasodoble2
R425	Trance Pop2	R464	Power Rock3	R503	Highland Waltz2
R426	Big Band Shuffle7	R465	Rock'n Roll 3	R504	Schlager Polka2
R427	Big Band Shuffle8	R466	Cool8 Beat2	R505	Grupera2
R428	Big Band Shuffle9	R467	British Pop6	R506	Danzon2
R429	Fast Band 5	R468	British Pop7	R507	Schlager Alp2
R430	Fast Band 6	R469	8 Beat Soul3	R508	Saeidy2
R431	Disco Funk2	R470	Brit Pop2	R509	Bhajan2
R432	Disco Samba2	R471	Disco Latin2	R510	Hip Hop Groove2
R433	New Hip Hop2	R472	Brit Pop Swing2	R511	Hip Shuffle2
R434	Cat Groove2	R473	Fast Gospel2	R512	Organ Groove2
R435	Laff2	R474	Fast Bossa2	R513	Chart Pop3
R436	Pop Waltz3	R475	60's Guitar Pop2	R514	Country Ballad3
R437	Bhangra2	R476	90's Soul	R515	Romantic Ballad2
R438	Twist3	R477	Funk Shuffl 3	R516	Analog Ballad2
R439	German March2	R478	8 Beat Rock3	R517	Electro Pop2



Appendix

R518	Blues Rock2	R557	Schlager Rock4	R596	Easy Ballad2
R519	Rave2	R558	Jazz Waltz Fast2	R597	Pop Mambo2
R520	US Chart Hit2	R559	Country Ballad4	R598	BossaNova3
R521	Alp Ballad3	R560	Dixieland2	R599	Forro2
R522	8 Beat Modern2	R561	French Jazz3	R600	Pop Classics2
R523	Euro Hip Hop2	R562	Easy Country2	R601	Live 8 Beat2
R524	Disco Pop2	R563	Country Hits2	R602	Power Rock4
R525	Disco Philly2	R564	Country 8 Beat2	R603	Acoustic Rock4
R526	Mod Big BandShf12	R565	Blue Grass7	R604	Cool 8 Beat3
R527	Modern Big Band2	R566	Blue Grass8	R605	Uptempo 8Beat2
R528	8 Beat Adria2	R567	Blue Grass9	R606	90's Rock Ballad2
R529	Disco Chocolate2	R568	Gospel Sisters2	R607	Chart Rock Shf13
R530	Euro Trance2	R569	Italian Waltz2	R608	Brit Pop3
R531	Euro Beat3	R570	Limbo Rock2	R609	Brazilian Samba2
R532	Techno4	R571	Bluegrass2	R610	Brit Pop Swing3
R533	Reggae3	R572	Country Brothers2	R611	60's 8 Beat2
R534	Chillout Cafe2	R573	Scand Country3	R612	Fast Bossa3
R535	Love Song2	R574	Scand Country4	R613	60's Guitar Pop3
R536	French House2	R575	Scand Shuffle2	R614	90's Soul2
R537	Jazz Waltz3	R576	70's Chart Cntry2	R615	Gujiira3
R538	Classic Piano2	R577	Pub Piano2	R616	Euro Hip Hop3
R539	Disco Party2	R578	Polka3	R617	Disco Pop3
R540	Club Dance2	R579	Rock Cha Cha3	R618	Disco Philly3
R541	Jazz Gtr Club2	R580	Schlager Rock3	R619	Mod Big BandShf13
R542	Modern Jazz2	R581	Organ Samba2	R620	Modern Big Band3
R543	Polka Pop2	R582	Gay Gordons2	R621	8 Beat Adria3
R544	USA March2	R583	Swing Waltz2	R622	Disco Chocolate3
R545	Ober Polka2	R584	Reel2	R623	Euro Trance3
R546	Easy Listening2	R585	Movie Ballad2	R624	Love Song3
R547	80's Dance	R586	Cool Pop2	R625	Disco Party3
R548	Boston	R587	Rock & Roll Shf13	R626	Club Dance3
R549	Big Band Fast3	R588	Hard Rock3	R627	Modern Jazz3
R550	Orchestra Swing3	R589	Hard Rock4	R628	Polka Pop3
R551	Orchestra Swing4	R590	Club Pop4	R629	Sci-fi March
R552	Finger Pickin2	R591	8 Beat Pop3	R630	Tap Dance Swing
R553	Hully Gully2	R592	8 Beat Pop4	R631	Movie Ballad3
R554	Viennese Waltz2	R593	60's Rock 4	R632	Rock & Roll Shf14
R555	Show Tune2	R594	16 Beat Ballad4	R633	Hard Rock5
R556	Rumba2	R595	Straight Rock2	R634	8 Beat Pop5



Appendix

R635	8 Beat Pop6	R674	Country Ballad5	R713	Gay Gordons3
R636	16 Beat Ballad5	R675	Country Two Step2	R714	Scand Waltz2
R637	Straight Rock3	R676	Country 8	R715	Pop Classics3
R638	Easy Ballad3	R677	Country 9	R716	Live 8 Beat3
R639	Forro3	R678	Finger Pickin3	R717	Power Rock5
R640	Fusion6	R679	Country Brothers3	R718	Acoustic Rock5
R641	Funk3	R680	New Country2	R719	Cool 8 Beat4
R642	Viennese Waltz3	R681	Easy Country3	R720	Uptempo 8Beat3
R643	Show Tune3	R682	70' s Chart Cntry3	R721	90' s Rock Ballad3
R644	Dixieland3	R683	Hoedown2	R722	Chart Rock Shfl4
R645	Big Band Shuffle 10	R684	Country Shuffle2	R723	Brit Pop4
R646	Big Band Shuffle 11	R685	Schlager Polka3	R724	Brazilian Samba3
R647	Big Band Shuffle 12	R686	Polka Pop4	R725	Brit Pop Swing4
R648	Pop Waltz4	R687	Blue Grass 10	R726	60' s 8 Beat3
R649	USA March3	R688	Blue Grass 11	R727	Fast Bossa4
R650	Hully Gully3	R689	Blue Grass 12	R728	60' s Guitar Pop4
R651	Tarantella2	R690	70' s Disco Funk2	R729	70' s 8 Beat2
R652	Limbo Rock3	R691	Disco Philly4	R730	90' s Guitar Pop2
R653	Swing Waltz3	R692	Disco House3	R731	Soft Rock3
R654	Pub Piano3	R693	80' s Disco2	R732	Chart Guita rPop2
R655	Jazz Waltz4	R694	Swing Fox2	R733	Guijira4
R656	Jazz Waltz5	R695	Slow Fox2	R734	Easy Listening3
R657	Show Tune4	R696	Organ Cha Cha2	R735	Bebop2
R658	Polka4	R697	Organ Quick Step2	R736	Orch Big Band3
R659	Ober Polka3	R698	Cat Groove3	R737	Big Band Fast4
R660	Party Polka2	R699	Dixie Jazz2	R738	Orchestra Swing6
R661	Waltz3	R700	Medium Jazz2	R739	Orchestra Swing7
R662	Cha Cha3	R701	Jazz Big Band2	R740	Rock Cha Cha4
R663	Rumba3	R702	Jazz Club2	R741	Organ Swing2
R664	Jive4	R703	Ragtime3	R742	Secret Service2
R665	Pasodoble3	R704	Bomba	R743	Animation Bld2
R666	Samba5	R705	Chillout Cafe	R744	Christmas Waltz2
R667	Samba6	R706	70' s Glam Piano	R745	Frankly Soul2
R668	Schlager Rock5	R707	Fast Band 7	R746	Jazz Funk2
R669	Schlager Rock6	R708	Fast Band 8	R747	Classic Big Band2
R670	Foxtrot4	R709	German Waltz2	R748	French Jazz4
R671	Viennese Waltz4	R710	Carnival3	R749	Jump Jive2
R672	Tango7	R711	Organ Samba3	R750	Mod Big Band Shfl4
R673	Tango8	R712	Reel3	R751	Modern Big Band4



Appendix

R752	Pop Gtr Ballad2	R791	Jazz Funk3		
R753	Ibiza 2002_2	R792	Classic Big Band3		
R754	Euro Trance4	R793	French Jazz5		
R755	6-8 Trance2	R794	Jump Jive3		
R756	Latin DJ's2	R795	Mod Big Band Shf15		
R757	Bomba2	R796	Modern Big Band5		
R758	Chillout Cafe3	R797	50's Rock		
R759	70's Glam Piano2	R798	Big Rock		
R760	French House3	R799	Dark Rock		
R761	English Waltz2				
R762	8 Beat Ballad3				
R763	Club House2				
R764	House3				
R765	Jazz Gtr Club3				
R766	Modern Jazz4				
R767	Acoustic Jazz2				
R768	Cool Jazz Ballad2				
R769	Modern Jazz Bld2				
R770	Modern Pop Bld2				
R771	Soul R&B2				
R772	R&B Soul Ballad2				
R773	Euro Hip Hop4				
R774	Trip Hop2				
R775	Ibiza 2004_2				
R776	Soft Rock4				
R777	Chart Guita rPop3				
R778	Guijira5				
R779	Easy Listening4				
R780	Bebop3				
R781	Orch Big Band4				
R782	Big Band Fast5				
R783	Orchestra Swing8				
R784	Orchestra Swing9				
R785	Rock Cha Cha5				
R786	Organ Swing3				
R787	Secret Service3				
R788	Animation Bld3				
R789	Reggae4				
R790	Frankly Soul3				



Appendix

Single Finger Chord Table

Yamaha single finger chord table 【Example】

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				



Appendix

Multi-finger chord table

Chord Type Root	M	m	7	m7	dim7	M7	m7 ⁻⁵	dim
C								
C [♯] /(D [♭])								
D								
(D [♭])/E [♭]								
E								
F								
F [♯] /(G [♭])								
G								
(G [♭])/A [♭]								
A								
(A [♯])/B [♭]								
B								



Appendix

Multi-finger chord table

Chord Type Root	aug	sus4	7sus4	m add9	mM7	7-5	add9
C							
C [♯] /(D [♯])							
D							
(D [♯])/E [♯]							
E							
F							
F [♯] /(G [♯])							
G							
(G [♯])/A [♯]							
A							
(A [♯])/B [♯]							
B							



Product Care

Careful maintenance and protection of this product plays an important role in prolonging the service life of the product and reducing failure.

1 AVOID HEATING,DAMPNESS OR DIRECT SUNLIGHT

Do not over expose the product to direct sunlight or place it near air condition or extremely hot place.

2 DO NOT USE NEAR THE TV OR RADIO.

This product may cause video or audio interference to the reception of TV and radio. If this happens,the product should be removed from the TV or radio.

3 NO PAINT,DILUENT OR SIMILAR CHEMICALS SHALL BE USED FOR CLEANING.

Clean the product with a soft cloth wetted with weak water solution and neutral detergent. Soak the cloth in a solution and wring it dry until it approaches drying.

4 DO NOT SHAKE,AVOID COLLISION

When moving,the product should be handled carefully and lightly. Violent vibration and collision are strictly prohibited in order to avoid damage to the shell or internal electronic components.

 


Safety Precautions

POWER SUPPLY

This product can be powered by standard indoor wall sockets.Please only use the power cord specified in this product.When not in use,please turn off the power supply. When not in use for a long time, pull out the power cord and keep it properly.

110-240V AC outlet

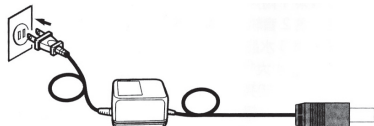

MARKING MAP

To ensure that you use this product safely and correctly,to prevent harm to users and others and financial damage, this manual and products are marked with a series of safety signs.The various signs and their meanings are as follows:

WARNING

This sign indicates that there is a potential risk of death or serious injury if this mark is ignored and the product is mishandled.

BE CAREFUL

This sign indicates that there is a potential danger of injury to personnel or other financial damage if this sign is ignored and the product is operated incorrectly.

EXAMPLE OF LOGO

This triangle sign(Δ)indicates what users should pay attention to.(The left picture shows a cautious electric shock)
A circular sign(C)with an oblique line indicates prohibitions.The icons in or beside the logo indicate the contents specifically prohibited.(No disassembly is allowed on the left)

Black dots(•)indicate what must be observed.The diagrams in this sign indicate the contents of the specific matters that must be observed.(The left picture shows that the power plug must be pulled out of the socket)



Safety Precautions



Warn

Smoke, odor, overheating

When the product emits smoke, smells, or is overheated, continued use may cause fire and electric shock. When the above situation occurs, the following operations should be performed immediately.

1. Turn off the power.
2. Unplug the plug from the power socket.
3. Contact your dealer.

Power cable

Improper use of the power cord may cause fire and electric shock hazards. The following precautions must be observed.

You must use the power cord specified for this product.

You must use an AC power source whose output voltage is within the rated voltage range for household use.

Do not overload the power outlet or power extension cord.

Improper handling of the power cord may result in damage or breakage, resulting in fire and electric shock hazards. The following precautions must be observed.

Do not place heavy objects on the power cord or expose it to heat.

Do not attempt to modify or bend the power cord excessively.

Do not twist or pull on the power cord.

If the power cord or plug is damaged, replace the power cord with the same specification and type.

Do not touch the power cord and plug with wet hands, otherwise there is a risk of electric shock.

Use the power cord in a place where water will not splash. Water poses a risk of fire and electric shock.

Do not place a vase or any other container of water on this product. Water poses a risk of fire and electric shock.

Do not allow minors to unplug or touch the power cord or connection board, as minors do not have the knowledge of electricity safety and there is a risk of electric shock.



Notice

Improper use of the power cord may cause fire and electric shock hazards. The following precautions must be observed.

Do not place the power cord near a stove or other heat source.

Do not pull on the power cord when unplugging it from the electrical outlet. The plug body must be grasped.

The power cord plug must be inserted all the way into the power socket.

Make sure the power is off before connecting or disconnecting the power cord.

Unplug the power cord from the wall outlet during a thunderstorm or before going on a trip or other extended absence.

At least once a year, unplug the power cord from the wall outlet and clean away any accumulated dust from around the plug.





Sicherheitsvorkehrungen

Entsorgen Sie dieses Produkt nicht



Legen Sie dieses Produkt niemals ins Feuer. Sonst wird es so sein
Verursacht Verbrennungen von Holzprodukten und deren internen elektronischen Bauteilen
Das Produkt kann explodieren und die Gefahr von Bränden und Verletzungen verursachen.

Wasser und Fremdkörper



Wasser, andere Flüssigkeiten und (Metallteile usw.) gelangen hinein.
Bei diesem Produkt besteht Brand- und Stromschlaggefahr. aus
Wenn die obige Situation eintritt, sollten die folgenden Vorgänge sofort ausgeführt werden.

1. Schalten Sie den Strom aus.
2. Wenn Sie das Netzkabel zur Stromversorgung verwenden Um es mit Strom zu versorgen, schließen Sie es an die Steckdose an
Ziehen Sie den Stecker heraus.
3. Kontaktieren Sie Ihren Händler

Demontage und Neuaufbau



Zerlegen Sie dieses Produkt niemals in irgendeiner Weise seine Transformation. Andernfalls kann es zu Stromschlägen, Verbrennungen oder Ähnlichem kommen
Es besteht die Gefahr von Personenschäden. Alle internen Inspektionen sollten durchgeführt werden
Überlassen Sie Inspektion, Einstellung und Wartung Ihrem Händler.

Fallengelassen oder getroffen werden



Dieses Produkt wurde fallen gelassen oder starken Stößen ausgesetzt. Die weitere Verwendung nach einer Beschädigung kann zu Brand- und Stromschlaggefahr führen. Wenn die obige Situation eintritt, sollten die folgenden Vorgänge sofort ausgeführt werden.

1. Schalten Sie den Strom aus.
2. Wenn Sie das Netzkabel verwenden Strom, schließen Sie die Steck es aus.
3. Kontaktieren Sie Ihren Händler.

Plastiktüte



Erlauben Sie niemandem, die Plastikverpackung zu entfernen, in der dieses Produkt verpackt ist. Legen Sie den Stoffbeutel auf Ihren Kopf oder stecken Sie ihn in den Mund, da es sonst zu Verletzungen kommen kann Erstickungsgefahr: Familien mit kleinen Kindern sollten sich besonders bewusst sein.
Halten Sie Abstand zu diesem Produkt und stehen Sie auf

Das Hochklettern des



Instrumentenkörpers oder seines Ständers kann dazu führen, dass es umkippt oder Familien mit kleinen Kindern sollten besonders auf das Schadensrisiko achten.

Ort



Stellen Sie dieses Produkt nicht auf unebenen Oberflächen auf Oberfläche oder einem anderen instabilen Ort. Sonst wird es so sein
Beim Herunterfallen des Produkts besteht Verletzungsgefahr.

Produktbewegung



Bevor Sie dieses Produkt bewegen, müssen Sie es zunächst von der Wand entfernen Ziehen Sie das Netzkabel aus der Steckdose und ziehen Sie alle anderen Geräte ab Kabel und Verbindungsdrähte. Andernfalls kann die Leitung beschädigt werden, was zur Folge hat Brand- und Stromschlaggefahr.

Sauber



Bevor Sie dieses Produkt reinigen, müssen Sie es zuerst entfernen Ziehen Sie das Netzkabel aus der Steckdose, da es sonst zu einem Brand kommen kann Es besteht Katastrophen- und Stromschlaggefahr.

Schnittstelle



An die Schnittstelle dieses Produkts können nur bestimmte Geräte angeschlossen werden. Ausrüstung und Geräte. Der Anschluss unbeabsichtigter Geräte oder Geräte kann zu Problemen führen kann zu Bränden und Stromschlägen führen.

Standortauswahl



Stellen Sie dieses Produkt nicht an den folgenden Orten auf.
NEIN Es besteht Brand- und Stromschlaggefahr.
Orte mit hoher Temperatur oder Staub.
Küche oder andere Orte mit Dämpfen.
Orte mit direkter Sonneneinstrahlung oder anderen Orten Wo dieses Produkt hohe Temperaturen erzeugt.

Volumen



Spielen Sie Musik niemals über einen längeren Zeitraum mit hoher Lautstärke ab. verwenden
Seien Sie besonders vorsichtig, wenn Sie Kopfhörer verwenden, da eine zu hohe Lautstärke Ihr Gehör schädigen kann.

Schwere Gegenstände



Stellen Sie niemals schwere Gegenstände auf dieses Produkt. Andernfalls wird das Produkt beschädigt Die Oberseite des Produkts ist zu schwer, sodass das Produkt umkippt oder auf Gegenstände fällt. Beim Herunterfallen des Produkts besteht Verletzungsgefahr.

Fachgerechte Montage des Ständers



Eine unsachgemäße Montage des Ständers kann zum Umkippen des Produkts führen Beim Herunterfallen des Produkts besteht Verletzungsgefahr. Deshalb muss es Um dies zu gewährleisten, muss der Zusammenbau gemäß den Anweisungen im beiliegenden Handbuch erfolgen Es wird garantiert, dass dieses Produkt ordnungsgemäß in seiner Halterung installiert ist.

Sicherungswechsel



Wenn die Sicherung durchbrennt, liegt möglicherweise ein Kurzschluss im Inneren des Produkts vor. Bei Störungen im Stromkreis oder bei Spannungsinstabilität ist es notwendig, einen Fachmann zu konsultieren Identifizieren und ersetzen Sie es, andernfalls besteht Brand- und Stromschlaggefahr.



Précautions de sécurité

Ne jetez pas ce produit

Ne placez jamais ce produit au feu. Sinon ce sera Provoque la combustion des produits en bois et de leurs composants électroniques internes
Le produit peut exploser, entraînant un risque d'incendie et de blessures.



Eau et corps étrangers

De l'eau, d'autres liquides et (morceaux métalliques, etc.) entrent Ce produit présente un risque d'incendie et de choc électrique. dehors Lorsque la situation ci-dessus se produit, les opérations suivantes doivent être effectuées immédiatement.

1. Coupez l'alimentation.
2. Si vous utilisez le cordon d'alimentation pour alimenter l'alimentation, branchez-le à la prise murale Débrancher.
3. Contactez votre revendeur



Démantèlement et reconstruction

Ne démontez jamais ce produit de quelque manière que ce soit ou sa transformation. Sinon, un choc électrique, des brûlures ou autres Cela risque de provoquer des blessures. Toutes les inspections internes doivent être Confiées l'inspection, le réglage et l'entretien à votre revendeur.



Tombé ou frappé

Ce produit est tombé ou a été soumis à un fort impact. Continuer à l'utiliser après un dommage peut entraîner des risques d'incendie et de choc électrique. Lorsque la situation ci-dessus se produit, les opérations suivantes doivent être effectuées immédiatement.

1. Coupez l'alimentation.
2. Si vous utilisez le cordon d'alimentation pour l'alimentation, connectez le Débranchez-le.
3. Contactez votre revendeur.



Sac plastique

Ne laissez jamais personne retirer l'emballage en plastique utilisé pour emballer ce produit. Mettez le sac de matériel sur votre tête ou mettez-le dans votre bouche, sinon cela pourrait provoquer Risques d'étouffement Les familles avec de jeunes enfants doivent être particulièrement vigilantes

Gardez vos distances avec ce produit et tenez-vous debout



Grimper sur le corps de

l'instrument ou sur son support peut le faire basculer ou Les familles avec de jeunes enfants doivent accorder une attention particulière aux risques de dommages.



Lieu

Évitez de placer ce produit sur des surfaces inégales surface ou tout autre endroit instable. Sinon ce sera Si le produit tombe, il existe un risque de



Mouvement du produit

Avant de déplacer ce produit, vous devez d'abord le retirer du mur Débranchez le cordon d'alimentation de la prise électrique et débranchez tous les autres Câbles et fils de connexion. Sinon, la ligne pourrait être endommagée, ce qui entraînerait Risque d'incendie et de choc électrique.



Faire le ménage

Avant de nettoyer ce produit, vous devez d'abord retirer le Débranchez le cordon d'alimentation de la prise de courant, sinon cela pourrait provoquer un incendie Risque de catastrophe et de choc électrique.



Interface

Seuls les appareils spécifiés peuvent être connectés à l'interface de ce produit. Équipements et appareils. La connexion d'équipements ou de dispositifs involontaires peut provoquer peut provoquer des risques d'incendie et de choc électrique.



Sélection de l'emplacement

Évitez de placer ce produit aux endroits suivants. Non Il existe un risque d'incendie et de choc électrique. Endroits à haute température ou poussières. Cuisine ou autres endroits avec des fumées. Endroits exposés à la lumière directe du soleil ou à tout autre Où ce produit génère des températures élevées.



Volume

Ne jouez jamais de musique à volume élevé pendant de longues périodes. utiliser Soyez particulièrement prudent lorsque vous utilisez des écouteurs, car un volume excessif peut endommager votre



Objets lourds

Ne placez jamais d'objets lourds sur ce produit. Sinon, le produit Le dessus du produit est trop lourd, ce qui fait basculer le produit ou le laisse tomber sur des objets. Si le produit tombe, il existe un risque de blessure.



Assemblage correct du stand

Un assemblage incorrect du support peut le faire basculer, ce qui entraînerait le produit à Si le produit tombe, il existe un risque de blessure. Il faut donc Il doit être assemblé conformément aux instructions du manuel qui l'accompagne pour garantir que Ce produit est garanti correctement installé dans son support.



Remplacement du fusible

Si le fusible saute, il peut y avoir un court-circuit à l'intérieur du produit. phénomène de circuit, ou instabilité de tension, il est nécessaire de consulter un professionnel Identifiez-le et remplacez-le, sinon il y a un risque d'incendie et de choc électrique.



